

TGM 18 SEER Inverter Series Display Board Functions

Display board button function

▲ button: check button、 setting button“+”

▼ button: check button、 setting button “-”

■ button:

A、 Short press: force cooling mode, display board will show “dH”;

B、 Long press: entering test mode, and you can change unit parameter manually:

When it show “Sc.”, then you can set Compressor Frequency manually, using “▲” and “▼”to change frequency.

Then press “■” button, display board will show “SF.”, then you can set fan speed manually, using


“▲” and “▼”to change fan speed.

Then press “■” button, display board will show “SL.”, then you can set expansion valve open

degree manually, using “▲” and “▼”to change expansion valve opening degree.

Then press “■” button, display board will show “SP.”, then you can set PFC switch manually, (0

means OFF, 1 means ON), using “▲” and “▼” to set PFC switch ;

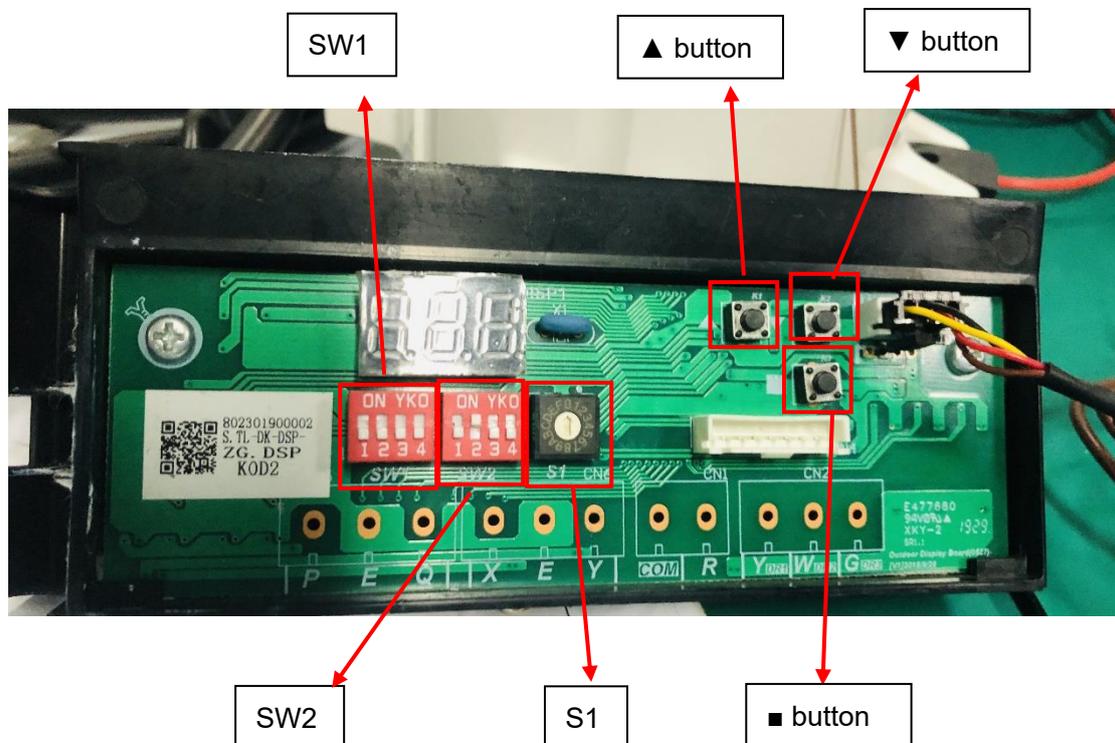

SW1:

1st bit	2nd bit	3rd bit	4th bit
Outdoor unit control logic(target evaporator temperature and target condensation temperature) setting, manufacture only.			ON: Indoor unit piston or TXV throttling in cooling mode(default) OFF: Outdoor unit EXV throttling in cooling mode The function will be active after unit power off and power on.

SW2:

1st bit	2nd bit	3rd bit	4th bit
ON: Manually defrost. OFF: Automatic defrost The function will be active immediately after bit change.	ON: Display as Fahrenheit OFF: Display as Celsius The function will be active after unit power off and power on.	Reserved	ON: Piston or TXV throttling in heating mode OFF: EXV throttling in heating mode(default) The function will be active after unit power off and power on.

S1: Reserved

Factory default of default SW1 and SW2 setting

SW1: OFF, OFF, OFF, ON

SW2: OFF, OFF, OFF, OFF

**SW1 & SW2 For Outdoor Display Board switch setting :
(Factory default)**

SW1	SW2
ON 	ON 
1 2 3 4	1 2 3 4