



# Installation, Start-Up and Service Instructions


## TABLE OF CONTENTS

SAFETY CONSIDERATIONS .....	1
PRE-INSTALLATION .....	2
Moving and Storage .....	2
Rigging .....	2
INSTALLATION .....	2-19
General .....	2
Uncrating .....	2
Accessories .....	2
Unit Positioning .....	10
Unit Isolation .....	11
Refrigerant Piping Access .....	11
Refrigerant Piping .....	11
Condensate Drain .....	15
Fan Motors and Drives .....	15
Power Supply and Wiring .....	16
Connecting Ductwork .....	19
Return-Air Filters .....	19
START-UP .....	20
SERVICE .....	20-33
Panels .....	20
Fan Motor Lubrication .....	20
Fan Shaft Bearings .....	21
Centering Fan Wheel .....	21
Fan Shaft Position Adjustment .....	21
Individual Fan Wheel Adjustment .....	22
Fan Belts .....	22
Fan Rotation .....	22
Fan Pulley Alignment .....	22
Pulley and Drive Adjustment .....	22
Condensate Drains .....	22
Return-Air Filters .....	22
Coil Removal .....	22
Cleaning Cooling Coil .....	23
Cleaning Insulation .....	23
Replacing Filters .....	23
START-UP CHECKLIST .....	35-36

## SAFETY CONSIDERATIONS

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock or other conditions which may cause personal injury or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions package

Follow all safety codes. Wear safety glasses and work gloves. Use quenching cloths for brazing operations and have a fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions attached to the unit. Consult local building codes and appropriate national electrical codes (in USA, ANSI/NFPA70, National Electrical Code (NEC); in Canada, CSA C22.1) for special requirements.

It is important to recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, CAUTION, and NOTE. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies hazards which **could** result in personal injury or death. CAUTION is used to identify unsafe practices, which **may** result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

**⚠ WARNING****ELECTRICAL SHOCK HAZARD**

Failure to follow this warning could cause in personal injury or death.

Before performing service or maintenance operations on unit, always turn off main power switch to unit and install lockout tag. Unit may have more than one power switch.

**⚠ WARNING****UNIT OPERATION AND SAFETY HAZARD**

Failure to follow this warning could cause in personal injury, death and/or equipment damage.

Puron® (R-410A) refrigerant systems operate at higher pressures than standard R-22 systems. Do not use R-22 service equipment or components on Puron refrigerant equipment.

**⚠ WARNING****PERSONAL INJURY AND ENVIRONMENTAL HAZARD**

Failure to follow this warning could cause in personal injury or death.

Relieve pressure and recover all refrigerant before system repair or final unit disposal.

Wear safety glasses and gloves when handling refrigerants. Keep torches and other ignition sources away from refrigerants and oils.

**⚠ CAUTION****CUT HAZARD**

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing 524J units.

**⚠ CAUTION****UNIT OPERATION HAZARD**

Failure to follow this caution could cause equipment damage.

Ensure voltage listed on unit data plate agrees with electrical supply provided for the unit.

**PRE-INSTALLATION**

1. The power supply (v, ph, and Hz) must correspond to that specified on unit rating plate.
2. The electrical supply provided by the utility must be sufficient to handle load imposed by this unit.
3. Refer to Installation, General section (page 2) and Fig. 1 and Fig. 2 for locations of electrical inlets, condensate drain, duct connections, and required clearances before setting unit in place.
4. This installation must conform with local building codes and with the NEC (National Electrical Code) or ANSI (American National Standards Institute)/NFPA (National Fire Protection Association) latest revision. Refer to provincial and local plumbing or wastewater codes and other applicable local codes.

**Moving and Storage** - To transfer unit from truck to storage site, use a fork truck. Do not stack units more than 2 high during storage. If unit is to be stored for more than 2 weeks before installation, choose a level, dry storage site free from vibration. Do not remove plastic wrap or skid from unit until final installation.

**Rigging** - All 524J Series units can be rigged by using the shipping skid. Units are shipped fully assembled. Do not remove shipping skids or protective covering until unit is ready for final placement; damage to bottom panels can result. Use slings and spreader bars as applicable to lift unit.

**INSTALLATION**

**General** - Allow the following clearances for service access and airflow:

- Rear: 3 ft (914 mm) [2<sup>1</sup>/<sub>2</sub> ft (762 mm) with electric heat accessory]
- Front: 2<sup>1</sup>/<sub>2</sub> ft (762 mm)
- Right Side: 3<sup>1</sup>/<sub>2</sub> ft (1067 mm)
- Left Side: 2<sup>1</sup>/<sub>2</sub> ft (762 mm)

For units equipped with an economizer, refer to the accessory installation instructions for additional clearance requirements. Be sure floor, wall, or ceiling can support unit weight (Tables 1A – 1D). See Fig. 1 and Fig. 2 for dimensions.

**Uncrating** - Move unit as near as possible to final location before removing shipping skid.

Remove metal banding, top skid, and plastic wrap. Examine unit for shipping damage. If shipping damage is evident, file claim with transportation agency. Remove base skid just prior to actual installation.

Check nameplate information against available power supply and model number description in Fig. 3.

**NOTE:** Be sure to remove the styrofoam shipping pad from the thermostatic expansion valve (TXV). Verify that it has been removed. See Fig. 5.

**Accessories** - Refer to instructions shipped with each accessory for specific information.

Table 1A — 524J\*\*\*A Physical Data, English — Cooling Units

UNIT 524J*	07A	08A	12A	14A	16A
<b>NOMINAL CAPACITY (Tons)</b>	6	7 <sup>1</sup> / <sub>2</sub>	10	12 <sup>1</sup> / <sub>2</sub>	15
<b>OPERATING WEIGHT (lb)</b>					
Base Unit with TXV	381	385	405	670	685
Plenum	175	175	175	225	225
<b>FANS</b>					
Qty...Diam. (in.)	1...15	1...15	1...15	2...15	2...15
Nominal Airflow (cfm)	2400	3000	4000	5000	6000
Airflow Range (cfm)	1800–3000	2250–3750	3000–5000	3750–6250	4500–7500
Nominal Motor Hp (Standard Motor)					
208/230–1–60	1.3	2.4	—	—	—
208/230–3–60 and 460–3–60	2.4	2.4	2.4	2.9	3.7
575–3–60	1.0	2.0	2.0	3.0	3.0
Motor Speed (rpm)					
208/230–1–60	1725	1725	—	—	—
208/230–3–60 and 460–3–60	1725	1725	1725	1725	1725
575–3–60	1725	1725	1725	1725	1725
<b>REFRIGERANT</b>	R-410A				
Operating charge (lb) (approx per circuit) <sup>†</sup>	3.0	3.0	1.5/1.5	2.0/2.0	2.5/2.5
<b>DIRECT-EXPANSION COIL</b>	Enhanced Copper Tubes, Aluminum Sine-Wave Fins				
Max Working Pressure (psig)	650				
Face Area (sq ft)	6.67	8.33	10.0	13.25	17.67
No. of Splits	1	1	2	2	2
No. of Circuits per Split	12	15	9	12	16
Split Type...Percentage	—	—	Face...50/50		
Rows...Fins/in.	4...15	4...15	4...15	4...15	4...15
<b>PIPING CONNECTIONS,</b>					
Quantity...Size (in.)					
DX Coil — Suction (ODF)	1...1 <sup>1</sup> / <sub>8</sub>	1...1 <sup>1</sup> / <sub>8</sub>	2...1 <sup>1</sup> / <sub>8</sub>	2...1 <sup>1</sup> / <sub>8</sub>	2...1 <sup>1</sup> / <sub>8</sub>
DX Coil — Liquid Refrigerant (ODF)		1... <sup>5</sup> / <sub>8</sub>		2... <sup>5</sup> / <sub>8</sub>	
Steam Coil, In (MPT)		1...2 <sup>1</sup> / <sub>2</sub>		1...2 <sup>1</sup> / <sub>2</sub>	
Steam Coil, Out (MPT)		1...1 <sup>1</sup> / <sub>2</sub>		1...1 <sup>1</sup> / <sub>2</sub>	
Hot Water Coil, In (MPT)		1...1 <sup>1</sup> / <sub>2</sub>			1...2
Hot Water Coil, Out (MPT)		1...1 <sup>1</sup> / <sub>2</sub>			1...2
Condensate (PVC)	1...1 <sup>1</sup> / <sub>4</sub> ODM/1 IDF				
<b>FILTERS</b>	Throwaway — Factory Supplied				
Quantity...Size (in.)	4...16 x 24 x 2			4...16 x 20 x 2 4...16 x 24 x 2	
Access Location	Either Side				
<b>STEAM COIL<sup>‡</sup></b>					
Max Working Pressure (psig at 260°F)	20				
Total Face Area (sq ft)	6.67	6.67	6.67	13.33	13.33
Rows...Fins/in.	1...9	1...9	1...9	1...10	1...10
<b>HOT WATER COIL<sup>‡</sup></b>					
Max Working Pressure (psig)	150				
Total Face Area (sq ft)	6.67	6.67	6.67	13.33	13.33
Rows...Fins/in.	2...8.5	2...8.5	2...8.5	2...8.5	2...8.5
Water Volume					
(gal)		8.3		13.9	
(ft <sup>3</sup> )		1.1		1.85	

LEGEND

- DX — Direct Expansion
- TXV — Thermostatic Expansion Valve
- † Units are shipped without refrigerant charge.
- ‡ Field installed accessory only.

524J

Table 1B — 524J\*\*\*A Physical Data, SI — Cooling Units

UNIT 524J*	07A	08A	12A	14A	16A
<b>NOMINAL CAPACITY (kW)</b>	21	26	35	43	52
<b>OPERATING WEIGHT (kg)</b>					
Base Unit with TXV	173	175	184	304	311
Plenum	80	80	80	102	102
<b>FANS</b>					
Qty...Diam. (mm)	1...381	1...381	1...381	2...381	2...381
Nominal Airflow (L/s)	1133	1604	1888	2360	2831
Airflow Range (L/s)	850–1416	1203–2006	1416–2360	1770–2949	2124–3539
Nominal Motor kW (Standard Motor)					
208/230–1–60	0.97	1.79	—	—	—
208/230–3–60 and 460–3–60	1.79	1.79	1.79	2.16	2.16
575–3–60	0.75	1.49	1.49	2.24	2.24
Motor Speed (r/s)					
208/230–1–60	28.8	28.8	—	—	—
208/230–3–60 and 460–3–60	28.8	28.8	28.8	28.8	28.8
575–3–60	28.8	28.8	28.8	28.8	28.8
<b>REFRIGERANT</b>	R–410A				
Operating charge (kg) (approx per circuit) <sup>†</sup>	1.36	1.36	0.68/0.68	0.90/0.90	1.13/1.13
<b>DIRECT–EXPANSION COIL</b>	Enhanced Copper Tubes, Aluminum Sine–Wave Fins				
Max Working Pressure (kPag)	4481				
Face Area (sq m)	0.62	0.77	0.93	0.93	1.64
No. of Splits	1	1	2	2	2
No. of Circuits per Split	12	15	9	12	16
Split Type...Percentage	—	—	Face...50/50		
Rows...Fins/m	4...591	4...591	4...591	4...591	4...591
<b>PIPING CONNECTIONS,</b>					
Quantity...Size (in.)					
DX Coil — Suction (ODF)	1...1 <sup>1</sup> / <sub>8</sub>	1...1 <sup>1</sup> / <sub>8</sub>	2...1 <sup>1</sup> / <sub>8</sub>	2...1 <sup>1</sup> / <sub>8</sub>	2...1 <sup>1</sup> / <sub>8</sub>
DX Coil — Liquid Refrigerant (ODF)	1... <sup>5</sup> / <sub>8</sub>		2... <sup>5</sup> / <sub>8</sub>		
Steam Coil, In (MPT)	1...2 <sup>1</sup> / <sub>2</sub>		1...2 <sup>1</sup> / <sub>2</sub>		
Steam Coil, Out (MPT)	1...1 <sup>1</sup> / <sub>2</sub>		1...1 <sup>1</sup> / <sub>2</sub>		
Hot Water Coil, In (MPT)	1...1 <sup>1</sup> / <sub>2</sub>			1...2	
Hot Water Coil, Out (MPT)	1...1 <sup>1</sup> / <sub>2</sub>			1...2	
Condensate (PVC)	1...1 <sup>1</sup> / <sub>4</sub> ODM/1 IDF				
<b>FILTERS</b>	Throwaway — Factory Supplied				
Quantity...Size (mm)	4...406 x 610 x 51			4...406 x 508 x 51 4...406 x 610 x 51	
Access Location	Either Side				
<b>STEAM COIL<sup>‡</sup></b>					
Max Working Pressure (kPag at 126° C)	138				
Total Face Area (sq m)	0.62	0.62	0.62	1.24	1.24
Rows...Fins/m	1...355	1...355	1...355	1...394	1...394
<b>HOT WATER COIL<sup>‡</sup></b>					
Max Working Pressure (kPag)	1034				
Total Face Area (sq m)	0.62	0.62	0.62	1.24	1.24
Rows...Fins/m	2...335	2...335	2...335	2...335	2...335
Water Volume					
(L)	31.4			52.6	
(m <sup>3</sup> )	0.031			0.052	

LEGEND

- DX — Direct Expansion
- TXV — Thermostatic Expansion Valve
- † Units are shipped without refrigerant charge.
- ‡ Field installed accessory only.

Table 1C — 524J\*\*\*H Physical Data, English — Heat Pump Units

UNIT 524J*	07H	08H	12H	16H
<b>NOMINAL CAPACITY (Tons)</b>	6	7 <sup>1</sup> / <sub>2</sub>	10	15
<b>OPERATING WEIGHT (lb)</b>				
Base Unit with TXV	385	385	427	713
Plenum	175	175	175	225
<b>FANS</b>				
Qty...Diam. (in.)	1...15	1...15	1...15	2...15
Nominal Airflow (cfm)	2400	3000	4000	6000
Airflow Range (cfm)	1800–3000	2250–3750	3000–5000	4500–7500
Nominal Motor Hp (Standard Motor)				
208/230–1–60	1.3	2.4	—	—
208/230–3–60 and 460–3–60	2.4	2.4	2.4	3.7
575–3–60	1.0	2.0	2.0	3.0
Motor Speed (rpm)				
208/230–1–60	1725	1725	—	—
208/230–3–60 and 460–3–60	1725	1725	1725	1725
575–3–60	1725	1725	1725	1725
<b>REFRIGERANT</b>	R-410A			
Operating charge (lb) (approx per circuit) <sup>†</sup>	3.0	3.0	2.0/2.0	3.0/3.0
<b>DIRECT-EXPANSION COIL</b>	Enhanced Copper Tubes, Aluminum Sine-Wave Fins			
Max Working Pressure (psig)	650			
Face Area (sq ft)	8.33	8.33	10.0	16.56
No. of Splits	1	1	2	2
No. of Circuits per Split	15	12	9	10
Split Type...Percentage	—	—	Face...50/50	Face...50/50
Rows...Fins/in.	3...15	4...15	4...15	4...15
<b>PIPING CONNECTIONS,</b>				
Quantity...Size (in.)				
DX Coil — Suction (ODF)	1...1 <sup>1</sup> / <sub>8</sub>	1...1 <sup>1</sup> / <sub>8</sub>	2...1 <sup>1</sup> / <sub>8</sub>	2...1 <sup>1</sup> / <sub>8</sub>
DX Coil — Liquid Refrigerant (ODF)	1...5 <sup>5</sup> / <sub>8</sub>	1...5 <sup>5</sup> / <sub>8</sub>	2...5 <sup>5</sup> / <sub>8</sub>	2...5 <sup>5</sup> / <sub>8</sub>
Steam Coil, In (MPT)	1...2 <sup>1</sup> / <sub>2</sub>	1...2 <sup>1</sup> / <sub>2</sub>	1...2 <sup>1</sup> / <sub>2</sub>	1...2 <sup>1</sup> / <sub>2</sub>
Steam Coil, Out (MPT)	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>
Hot Water Coil, In (MPT)	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...2
Hot Water Coil, Out (MPT)	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...2
Condensate (PVC)	1...1 <sup>1</sup> / <sub>4</sub> ODM/1 IDF			
<b>FILTERS</b>	Throwaway — Factory Supplied			
Quantity...Size (in.)	4...16 x 24 x 2		4...16 x 20 x 2 4...16 x 24 x 2	
Access Location	Either Side			
<b>STEAM COIL<sup>‡</sup></b>				
Max Working Pressure (psig at 260° F)	20			
Total Face Area (sq ft)	6.67	6.67	6.67	13.33
Rows...Fins/in.	1...9	1...9	1...9	1...10
<b>HOT WATER COIL<sup>‡</sup></b>				
Max Working Pressure (psig)	150			
Total Face Area (sq ft)	6.67	6.67	6.67	13.33
Rows...Fins/in.	2...8.5	2...8.5	2...8.5	2...8.5
Water Volume				
(gal)	8.3		13.9	
(ft <sup>3</sup> )	1.1		1.85	

LEGEND

- DX — Direct Expansion
- TXV — Thermostatic Expansion Valve
- † Units are shipped without refrigerant charge.
- ‡ Field installed accessory only.

524J

Table 1D — 524J\*\*\*H Physical Data, SI — Heat Pump Units

UNIT 524J*	07H	08H	12H	16H
<b>NOMINAL CAPACITY (kW)</b>	21	26	35	52
<b>OPERATING WEIGHT (kg)</b>				
Base Unit with TXV	175	175	194	323
Plenum	80	80	80	102
<b>FANS</b>				
Qty...Diam. (mm)	1...381	1...381	1...381	2...381
Nominal Airflow (L/s)	1133	1604	1888	2831
Airflow Range (L/s)	850–1416	1203–2006	1416–2360	2124–3539
Nominal Motor kW (Standard Motor)				
208/230–1–60	0.97	1.79	—	—
208/230–3–60 and 460–3–60	1.79	1.79	1.79	2.76
575–3–60	0.75	1.49	1.49	2.24
Motor Speed (r/s)				
208/230–1–60	28.8	28.8	—	—
208/230–3–60 and 460–3–60	28.8	28.8	28.8	28.8
575–3–60	28.8	28.8	28.8	28.8
<b>REFRIGERANT</b>	R–410A			
Operating charge (kg) (approx per circuit) <sup>†</sup>	1.36	1.36	0.91/0.91	1.36/1.36
<b>DIRECT–EXPANSION COIL</b>	Enhanced Copper Tubes, Aluminum Sine–Wave Fins			
Max Working Pressure (kPag)	4482			
Face Area (sq m)	0.77	0.77	0.93	1.54
No. of Splits	1	1	2	2
No. of Circuits per Split	12	12	9	10
Split Type...Percentage	—	—	Face...50/50	Face...50/50
Rows...Fins/m	3...591	3...591	3...591	4...591
<b>PIPING CONNECTIONS,</b>				
Quantity...Size (in.)				
DX Coil — Suction (ODF)	1...1 <sup>1</sup> / <sub>8</sub>	1...1 <sup>1</sup> / <sub>8</sub>	2...1 <sup>1</sup> / <sub>8</sub>	2...1 <sup>1</sup> / <sub>8</sub>
DX Coil — Liquid Refrigerant (ODF)	1...5 <sup>5</sup> / <sub>8</sub>	1...5 <sup>5</sup> / <sub>8</sub>	2...5 <sup>5</sup> / <sub>8</sub>	2...5 <sup>5</sup> / <sub>8</sub>
Steam Coil, In (MPT)	1...2 <sup>1</sup> / <sub>2</sub>	1...2 <sup>1</sup> / <sub>2</sub>	1...2 <sup>1</sup> / <sub>2</sub>	1...2 <sup>1</sup> / <sub>2</sub>
Steam Coil, Out (MPT)	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>
Hot Water Coil, In (MPT)	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...2
Hot Water Coil, Out (MPT)	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...1 <sup>1</sup> / <sub>2</sub>	1...2
Condensate (PVC)	1...1 <sup>1</sup> / <sub>4</sub> ODM/1 IDF			
<b>FILTERS</b>	Throwaway — Factory Supplied			
Quantity...Size (mm)	4...406 x 610 x 51			4...406 x 508 x 51 4...406 x 610 x 51
Access Location	Either Side			
<b>STEAM COIL<sup>‡</sup></b>				
Max Working Pressure (kPag at 126° C)	138			
Total Face Area (sq m)	0.62	0.62	0.62	1.24
Rows...Fins/m	1...355	1...355	1...355	1...394
<b>HOT WATER COIL<sup>‡</sup></b>				
Max Working Pressure (kPag)	1034			
Total Face Area (sq m)	0.62	0.62	0.62	1.24
Rows...Fins/m	2...335	2...335	2...335	2...335
Water Volume				
(L)	31.4			52.6
(m <sup>3</sup> )	0.031			0.052

LEGEND


- DX — Direct Expansion
- TXV — Thermostatic Expansion Valve
- † Units are shipped without refrigerant charge.
- ‡ Field installed accessory only.





524J

LEGEND

TXV — Thermostatic Expansion Valve

NOTES:

1. Dimensions in [ ] are in millimeters.
2.  Direction of airflow.
3. Recommended clearance:
  - Rear: 3 in. [914 mm] (2 ft, 6 in. [762 mm] with electric heat accessory)
  - Front: 2 ft, 6 in. [762 mm]
  - Right Side: 2 ft, 6 in. [762 mm]
  - Left Side: 2 ft, 6 in. [762 mm]
  - Local codes or jurisdiction may prevail.
4. Liquid piping not supplied by Carrier.
5. Duct flange is factory supplied and field installed.

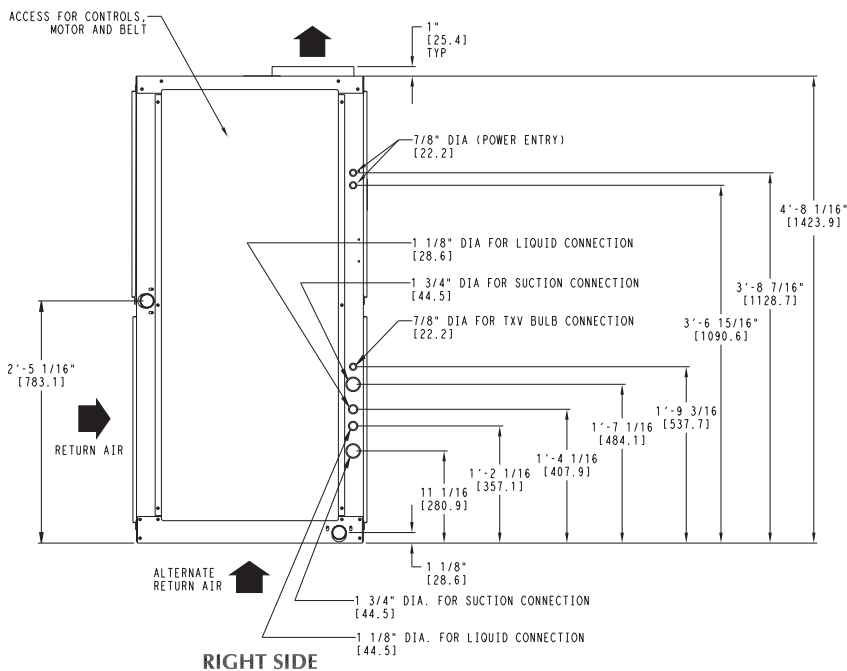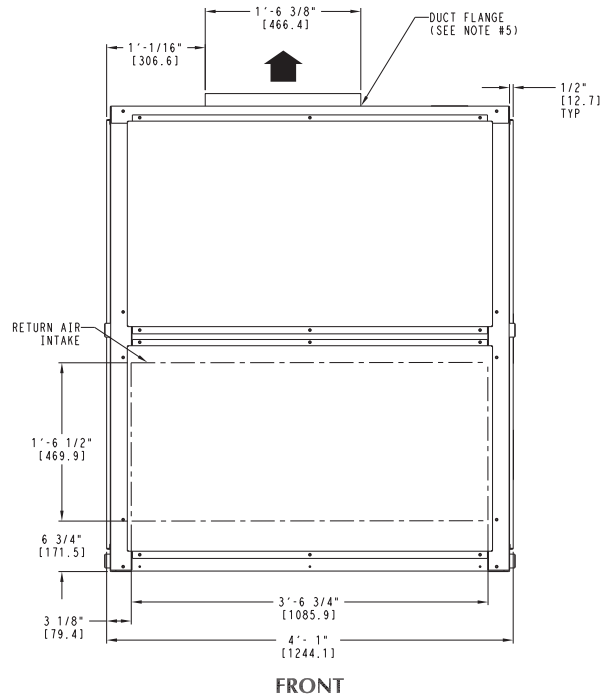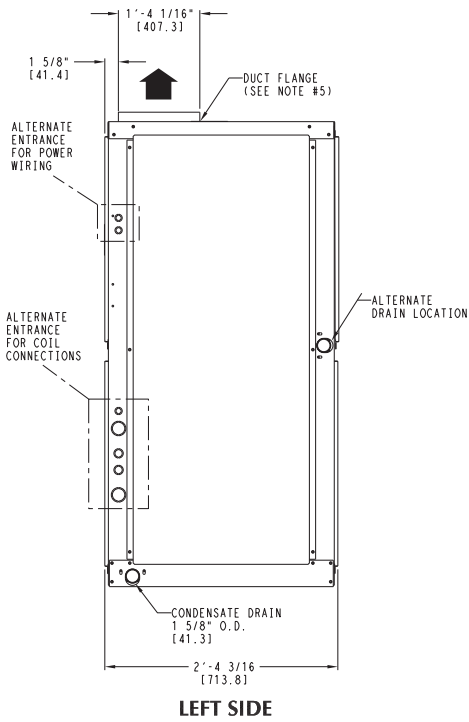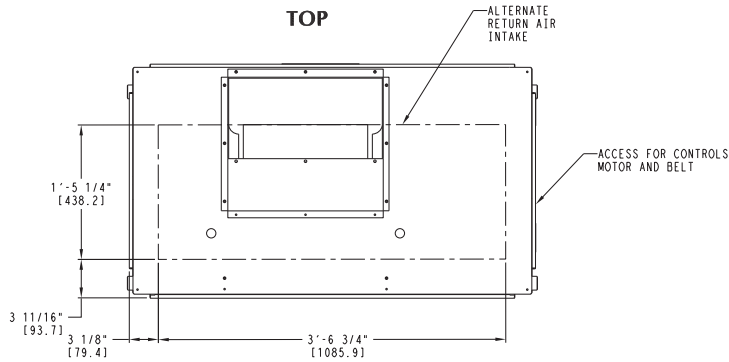


UNIT	UNIT WEIGHT lb (kg)
524J07A	381 (173)
524J08A	385 (175)
524J12A	405 (184)
524J07H	385 (175)
524J08H	385 (175)
524J12H	427(194)

524J

Fig. 1 - Dimensions – Sizes 07 - 12

524J

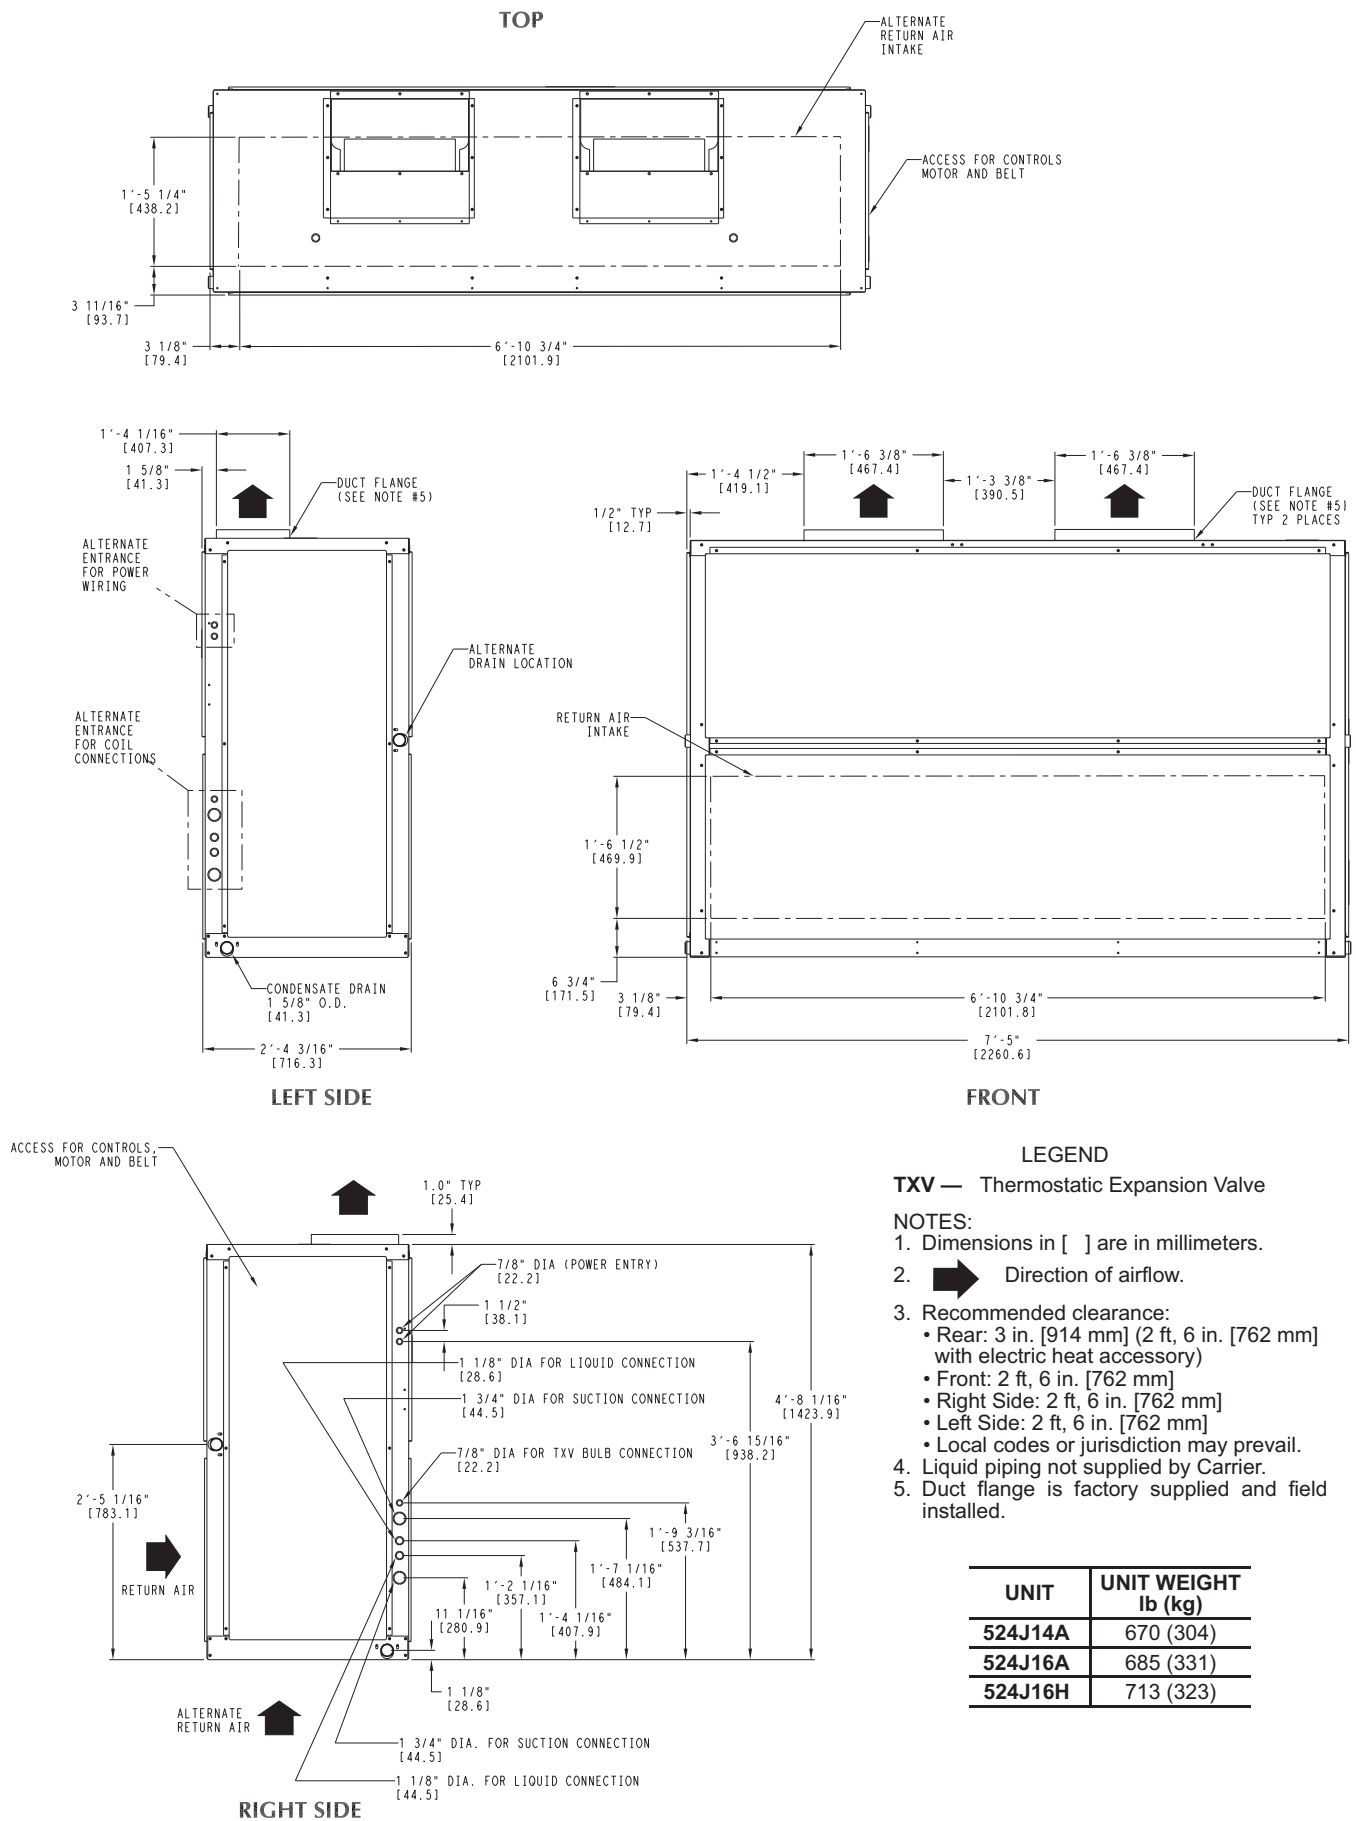

**LEGEND**

**TXV** — Thermostatic Expansion Valve

**NOTES:**

- Dimensions in [ ] are in millimeters.
- Direction of airflow.
- Recommended clearance:
  - Rear: 3 in. [914 mm] (2 ft, 6 in. [762 mm] with electric heat accessory)
  - Front: 2 ft, 6 in. [762 mm]
  - Right Side: 2 ft, 6 in. [762 mm]
  - Left Side: 2 ft, 6 in. [762 mm]
  - Local codes or jurisdiction may prevail.
- Liquid piping not supplied by Carrier.
- Duct flange is factory supplied and field installed.

UNIT	UNIT WEIGHT lb (kg)
524J14A	670 (304)
524J16A	685 (331)
524J16H	713 (323)

**Fig. 2 - Dimensions – Sizes 14 and 16**

C10842



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
5	2	4	J	E	1	4	A	0	0	0	A	2	0	A	A	A

**Model Type**

524J = Bryant Fan Coil  
Puron® R-410A Refrigerant

**Voltage**

E = 460/3/60  
J = 208/230/1/60 (07 and 08 Units Only)  
P = 208/230/3/60 (Size 16 and Indoor Fan 3 Units Only)  
T = 575/3/60

**Nominal Tonnage**

07 = 6 Tons  
08 = 7.5 Tons  
12 = 10 Tons  
14 = 12.5 Tons  
16 = 15 Tons

**Type of Coil**

A = Standard DX Coil  
B = High Capacity DX Coil  
H = DX Coil for Heat Pump Duty

**Not Used**

0 = Not Used

**Not Used**

0 = Not Used

**Packaging**

A = Standard

**Not Used**

A = Not Used

**Service Options**

A = None  
B = Painted Cabinet

**Not Used**

0 = Not Used

**Indoor Fan Options**

1 = Fan Drive and Motor - Low / Motor Efficiency - Standard  
2 = Fan Drive and Motor - Med / Motor Efficiency - Standard  
3 = Fan Drive and Motor - High / Motor Efficiency - Standard

**Coil Options**

A = Al/Cu

**Not Used**

0 = Not Used

524J

**Fig. 3 - Model Number Nomenclature**

C10843

POSITION NUMBER	1	2	3	4	5	6	7	8	9	10
TYPICAL	2	6	1	0	G	1	2	3	4	5

**POSITION**


1-2  
3-4  
5  
6-10

**DESIGNATES**

Week of manufacture (fiscal calendar)  
Year of manufacture ("10" = 2010)  
Manufacturing location (G = ETP, Texas, USA)  
Sequential number

**Fig. 4 - Serial Number Nomenclature**

C10682

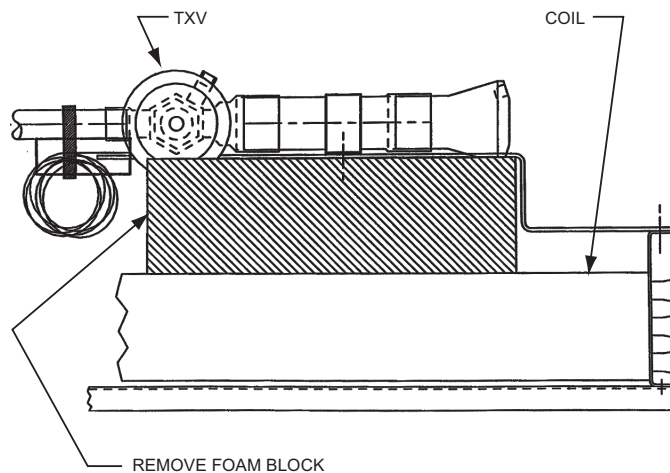

**LEGEND**

TXV — Thermostatic Expansion Valve


**Fig. 5 - Foam Block Location**

C10683

**Unit Positioning** - The unit can be mounted on the floor for vertical application with return air entering the face of the unit and supply air discharging vertically through the top of the unit. The unit can also be applied in a horizontal arrangement with return air entering horizontally and the supply air discharging horizontally. When applying the unit in a horizontal arrangement, ensure the condensate drain pan is located at the bottom center of the unit for adequate condensate disposal. See Fig. 6 for condensate connections for each unit position.

**IMPORTANT:** Do NOT attempt to install unit with return air entering top panel of unit. Condensate will not drain from unit.

Typical positioning and alternate return air locations are shown in Fig. 6. Alternate return air locations can be used by moving the unit panel from the alternate return air location to the standard return air location. Refer to overhead suspension accessory drawing (Fig. 7) for preferred suspension technique. The unit needs support underneath to prevent sagging.

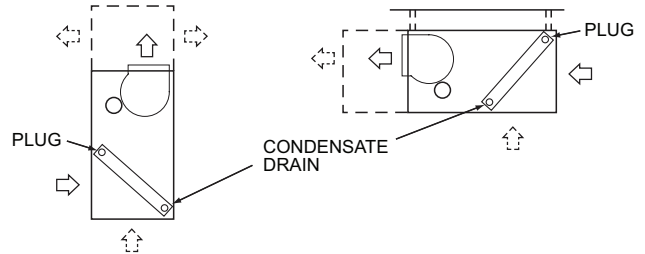


- LEGEND**
- Accessory Line
  - ⇄ Alternate Air Intake and Discharge
  - ⇒ Air Intake and Discharge

**Note:** Maintain recommended clearances per Fig. 1 and Fig. 2

C10684

**Fig. 6 - Typical Unit Positioning**

**OVERHEAD SUSPENSION ACCESSORY**

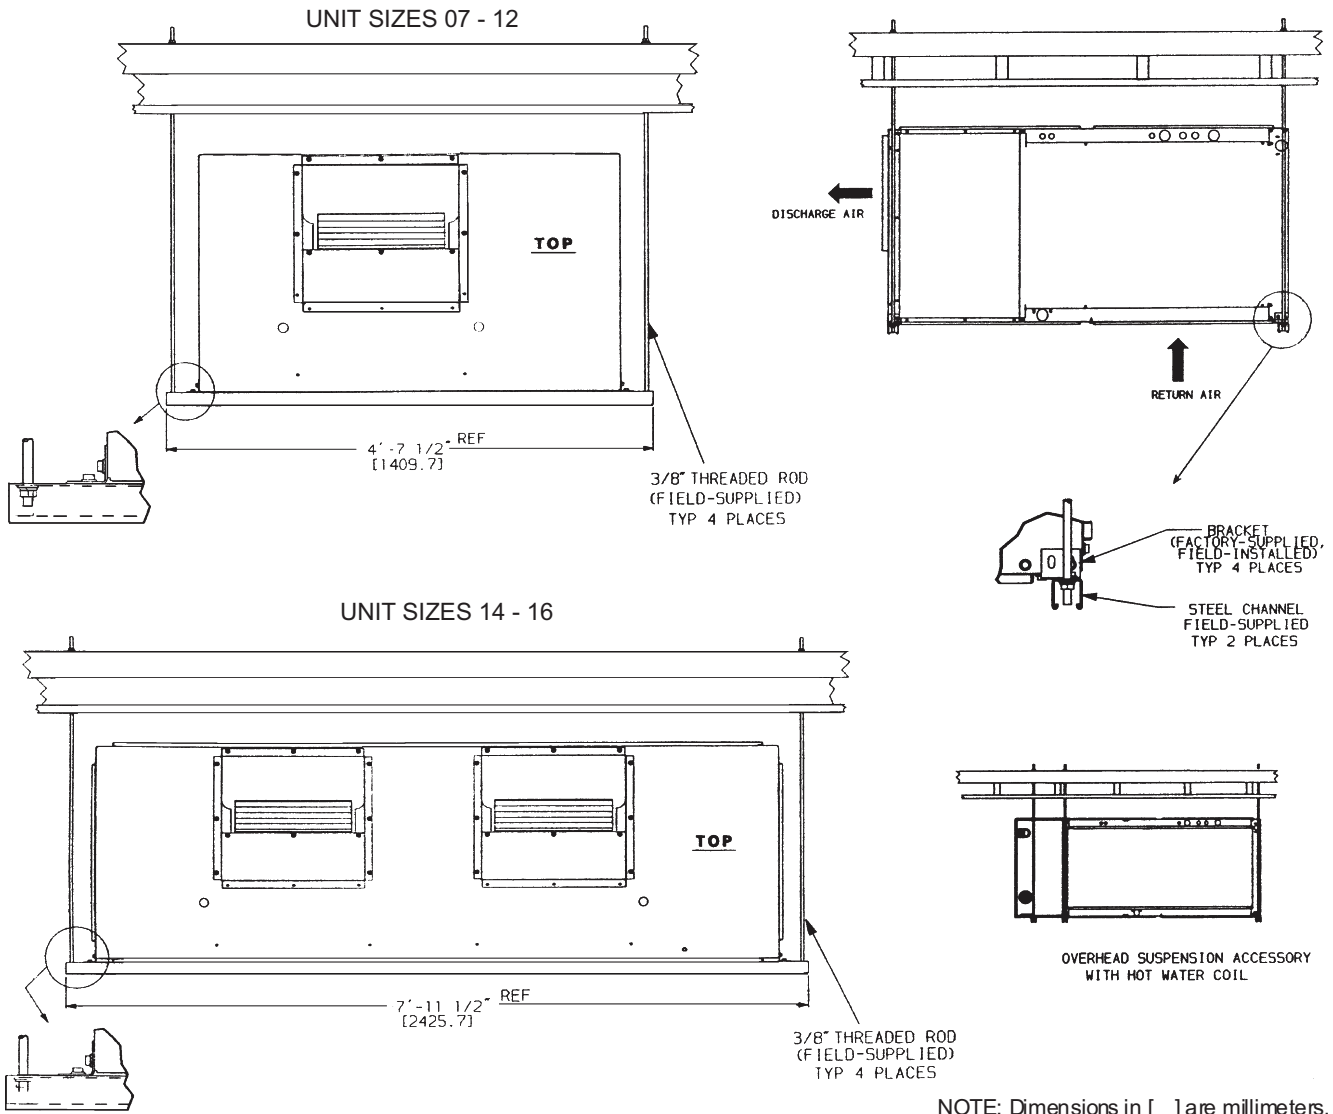

NOTE: Dimensions in [ ] are millimeters.

**Fig. 7 - Preferred Suspension Technique**

C10685

**Unit Isolation** - Where extremely quiet operation is essential, install isolators between floor and base of unit, or between ceiling and top section of unit.

Be sure that unit is level and adequately supported. Use channels at front and sides of unit for reference points when leveling.

**Refrigerant Piping Access** - The 524J Series units come with standard knockouts for refrigerant piping. These knockouts are located on both sides of the unit for installation flexibility. The standard knockouts provide sufficient access to the unit's coils for all 524J\*07A, 08A, 12A, 14A, 16A and 524J\*07H, 08, 12 units. 524J\*16H units require additional holes which must be field-fabricated to accommodate the piping. See Fig. 8 for positions and dimensions of the additional access holes required for the 524J\*16H units. Recommended access hole use is also listed for all units. Note that Fig. 8 shows the access holes on the control-box side of the unit; this is the side of the unit with the coil headers, so it is used most often for piping access.

**IMPORTANT:** Do not bury refrigerant piping underground.

**Refrigerant Piping** - See Tables 1A–1F for refrigerant pipe connection sizes. For ease in brazing, it is recommended that all internal solder joints be made before unit is placed in final position.

The 524J direct-expansion units have internal factory-installed thermostatic expansion valves (TXVs), distributors, and nozzles for use with R-410A. See Table 2 for part numbers. Knockouts are provided in the unit corner posts for 524J refrigerant piping. See Fig. 8, which also lists recommended knockouts and access holes to use for each 524J unit size. Recommended fittings are listed in Table 3.

The sensor bulb capillary tubes must be routed from the TXVs inside the unit through one of the piping access holes. Clamp the TXV sensor bulb on a vertical portion of the suction line, outside the unit. See Fig. 9.


**NOTE:** Be sure to remove the styrofoam shipping pad from the TXV. Verify that it has been removed. See Fig. 5.

**IMPORTANT:** Never attach the sensor to the suction manifold. Do NOT mount the sensor on a trapped portion of the suction line.

The 524J Series evaporator coils have a face-split design. Ensure that lower circuit of coil is first on/last off when connected to the condensing unit and/or system controls. See Fig. 10.

External TXV equalizer connections are provided and factory-brazed into the coil suction manifolds.

If suction line must be horizontal, clamp bulb to suction line at least 45 degrees above bottom, at approximately the 4 o'clock or 8 o'clock position. See Fig.11.

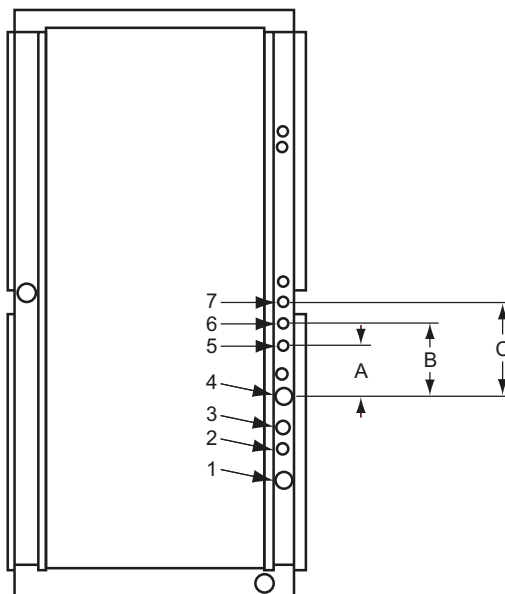


C10686

UNIT	USE HOLE NUMBERS	FIELD-FABRICATED HOLE DIAMETERS in. (mm)			FIELD-FABRICATED HOLE POSITION DIMENSIONS, in. (mm)		
		No. 5	No. 6	No. 7	A	B	C
524J*07A, 08A 524J*07H, 08H	1, 3	—	—	—	—	—	—
524J*12A, 14A, 16A 524J12H	1, 2, 3, 4	—	—	—	—	—	—
524J*16H	3 <sup>†</sup> , 5, 6, 7	1 1/8 (28.6)	1 1/8 (28.6)	1 3/4 (44.5)	3.25 (82.6)	6.125 (155.6)	10.38 (263.7)


<sup>†</sup> Must be enlarged from 1 1/8 in. (28.6mm) to 1 3/4 in. (44.5mm)

NOTE: Access hole knockouts 1–4 are factory-supplied.

**Fig. 8 - Refrigerant Piping Access Holes**

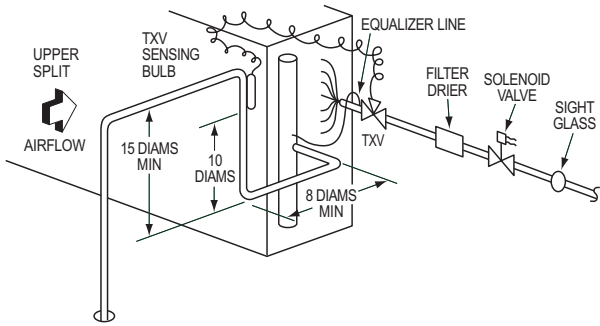

Single Circuit Coil Piping Configuration - 524J\*07, 08  
For single compressor condensing units.

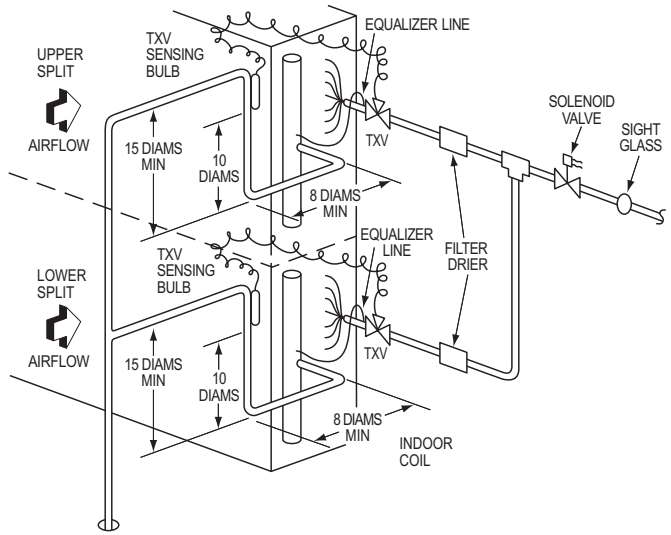

Dual Circuit Coil Piping Configuration - 524J\*12-16  
For single compressor condensing units


**LEGEND:**

TXV – Thermostatic Expansion Valve


NOTE: Component location arrangement shown for field installation of sight glasses, solenoid valves, filter driers, and TXV sensing bulbs. The TXVs and equalizer lines are factory installed.

C10844

**Fig. 9 - Face-Split Coil Suction and Liquid Line Piping (Typical)**

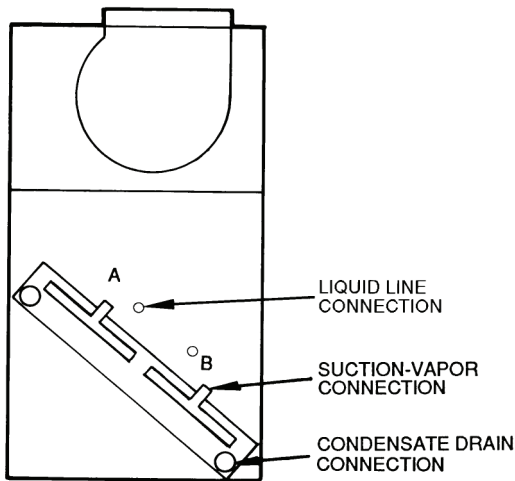


FIRST ON/LAST OFF = B  
VERTICAL INSTALLATION

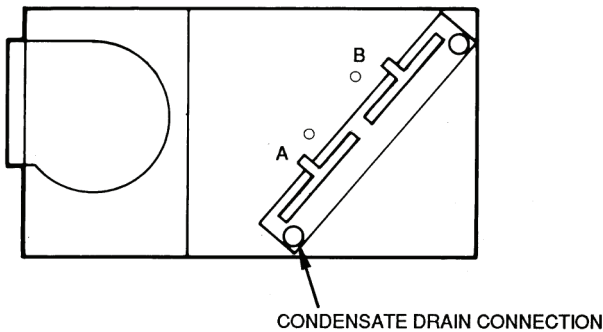

FIRST ON/LAST OFF = A  
HORIZONTAL INSTALLATION

C10688

**Fig. 10 - Typical Evaporator Coil Connections (524J)**

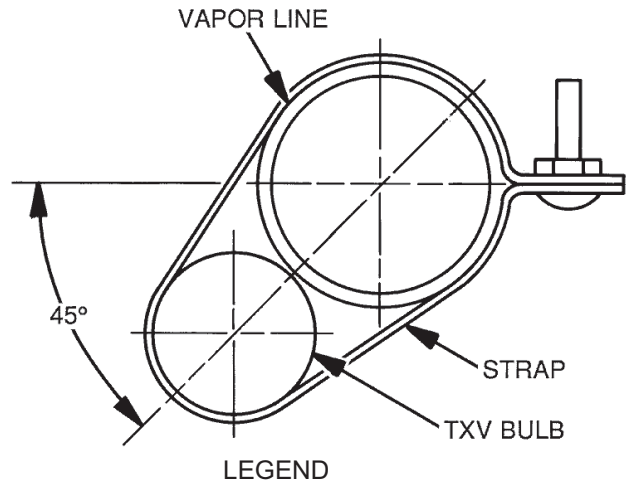

TXV — Thermostatic Expansion Valve

NOTE: The 8 o'clock position is shown above.

C10689

**Fig. 11 - TXV Sensing Bulb Location**

**Table 2 – Factory-Installed Nozzle and Distributor Data**

UNIT	COIL TYPE STD	TXV Qty...Part No.	DISTRIBUTOR Qty...Part No.	FEEDER TUBES PER DISTRIBUTOR† Qty...Size (in.)	NOZZLE Qty...Part No.
524J*07A	4 Row	1...BBIZE-5-GA	1...1135	12... <sup>1</sup> / <sub>4</sub>	1...G4
524J*07H	3 Row	1...BBIZE-5-GA	1...1136	15... <sup>1</sup> / <sub>4</sub>	1...G5
524J*08A	4 Row	1...BBIZE-6-GA	1...1136	15... <sup>1</sup> / <sub>4</sub>	1...G5
524J*08H	4 Row	1...BBIZE-8-GA	1...1113	12... <sup>3</sup> / <sub>16</sub>	1...G5
524J*12A	4 Row	2...BBIZE-4-GA	2...1135	9... <sup>1</sup> / <sub>4</sub>	2...G3
524J*12H	4 Row	2...BBIZE-5-GA	2...1113	9... <sup>3</sup> / <sub>16</sub>	2...G3
524J*16H	4 Row	2...BBIZE-8-GA	2...1113	10... <sup>3</sup> / <sub>16</sub>	2...G5
524J*14A	4 Row	2...BBIZE-5-GA	2...1113	12... <sup>3</sup> / <sub>16</sub>	2...G3
524J*16A	4 Row	2...BBIZE-6-GA	2...1136	16... <sup>3</sup> / <sub>16</sub>	2...G4

† Feeder tube size is <sup>1</sup>/<sub>4</sub> in. (6.35 mm).

NOTE: Hot gas bypass applications require field-supplied auxiliary side connector.

**Table 3 – Fitting Requirements**

UNIT	ACCESS HOLE NO.‡	CONNECTION TYPE	CIRCUIT	FITTINGS REQUIRED† (in.)
524J*07A 524J*07H	1	Suction	—	1 <sup>1</sup> / <sub>8</sub> Street Elbow 1 <sup>1</sup> / <sub>8</sub> Nipple, 10 <sup>5</sup> / <sub>8</sub> L 1 <sup>1</sup> / <sub>8</sub> Long Radius Elbow
	3	Liquid	—	5 <sup>5</sup> / <sub>8</sub> Street Elbow 5 <sup>5</sup> / <sub>8</sub> Nipple, 8 <sup>5</sup> / <sub>8</sub> L 5 <sup>5</sup> / <sub>8</sub> Long Radius Elbow
524J*08A 524J*08H	1	Suction	—	1 <sup>1</sup> / <sub>8</sub> Street Elbow 1 <sup>1</sup> / <sub>8</sub> Nipple, 8 <sup>5</sup> / <sub>8</sub> L 1 <sup>1</sup> / <sub>8</sub> Long Radius Elbow
	3	Liquid	—	5 <sup>5</sup> / <sub>8</sub> Street Elbow 5 <sup>5</sup> / <sub>8</sub> Nipple, 8 <sup>5</sup> / <sub>8</sub> L 5 <sup>5</sup> / <sub>8</sub> Long Radius Elbow
524J*12A	1	Suction	Lower	(2) 1 <sup>1</sup> / <sub>8</sub> Street Elbow
	2	Liquid	Lower	5 <sup>5</sup> / <sub>8</sub> Street Elbow 5 <sup>5</sup> / <sub>8</sub> Nipple, 8 <sup>1</sup> / <sub>2</sub> L 5 <sup>5</sup> / <sub>8</sub> Long Radius Elbow
	3	Liquid	Upper	5 <sup>5</sup> / <sub>8</sub> Street Elbow 5 <sup>5</sup> / <sub>8</sub> Nipple, 13 <sup>1</sup> / <sub>2</sub> L 5 <sup>5</sup> / <sub>8</sub> Long Radius Elbow
	4	Suction	Upper	1 <sup>1</sup> / <sub>8</sub> Nipple, 5 <sup>3</sup> / <sub>4</sub> L 1 <sup>1</sup> / <sub>8</sub> Long Radius Elbow 1 <sup>1</sup> / <sub>8</sub> Nipple, 12 L 1 <sup>1</sup> / <sub>8</sub> Long Radius Elbow

‡ See Fig. 8 for access hole location by number.

† Fittings are listed in order from header or tee stub connection out to access hole in corner support post.

Table 3 - Fitting Requirement (cont)


UNIT	ACCESS HOLE NO.†	CONNECTION TYPE	CIRCUIT	FITTINGS REQUIRED† (in.)
524J*12H	1	Suction	Lower	(2) 1 1/8 Street Elbow
	2	Liquid	Lower	5/8 Street Elbow 5/8 Nipple, 5 1/2 L 5/8 Long Radius Elbow
	3	Liquid	Upper	5/8 Street Elbow 5/8 Nipple, 10 1/2 L 5/8 Long Radius Elbow
	4	Suction	Upper	1 1/8 Nipple, 5 5/8 L 1 1/8 Long Radius Elbow 1 1/8 Nipple, 12 L 1 1/8 Long Radius Elbow
524J*14A	1	Suction	Lower	1 1/8 Street Elbow 1 1/8 Nipple, 7 5/8 L 1 1/8 Long Radius Elbow
	2	Liquid	Lower	5/8 Street Elbow 5/8 Nipple, 1 7/16 L 5/8 Long Radius Elbow
	3	Liquid	Upper	5/8 Street Elbow 5/8 Nipple, 11 1/2 L 5/8 Long Radius Elbow
	4	Suction	Upper	1 1/8 Nipple, 5 5/8 L 1 1/8 Long Radius Elbow 1 1/8 Nipple, 13 L 1 1/8 Long Radius Elbow
524J*16A	1	Suction	Lower	1 1/8 Street Elbow 1 1/8 Nipple, 7 3/4 L 1 1/8 Long Radius Elbow
	2	Liquid	Lower	5/8 Street Elbow 5/8 Nipple, 1 3/8 L 5/8 Long Radius Elbow
	3	Liquid	Upper	5/8 Street Elbow 5/8 Nipple, 11 1/2 L 5/8 Long Radius Elbow
	4	Suction	Upper	1 1/8 Nipple, 5 5/8 L 1 1/8 Long Radius Elbow 1 1/8 Nipple, 13 L 1 1/8 Long Radius Elbow
524J*16H	3	Suction	Lower	1 1/8 Nipple, 3 L 1 1/8 Long Radius Elbow
	5	Suction	Lower	5/8 Nipple, 2 7/8 L 5/8 45° Elbow 5/8 Nipple, 1 5/8 L 5/8 Long Radius Elbow
	6	Liquid	Upper	5/8 Nipple, 2 7/8 L 5/8 45° Elbow 5/8 Nipple, 4 1/4 L 5/8 Long Radius Elbow
	7	Suction	Upper	1 1/8 Nipple, 5 L 1 1/8 45° Elbow 1 1/8 Nipple, 8 3/4 L 1 1/8 Long Radius Elbow

‡ See Fig. 8 for access hole location by number.

† Fittings are listed in order from header or tee stub connection out to access hole in corner support post.

524J

**Condensate Drain** — Install a trapped condensate drain line to unit connection as shown in Fig. 12. The unit drain connection is a PVC stub. See Fig. 13. Some areas may require an adapter to connect to either galvanized steel or copper pipe. For these applications, install a field-supplied threaded PVC adapter.

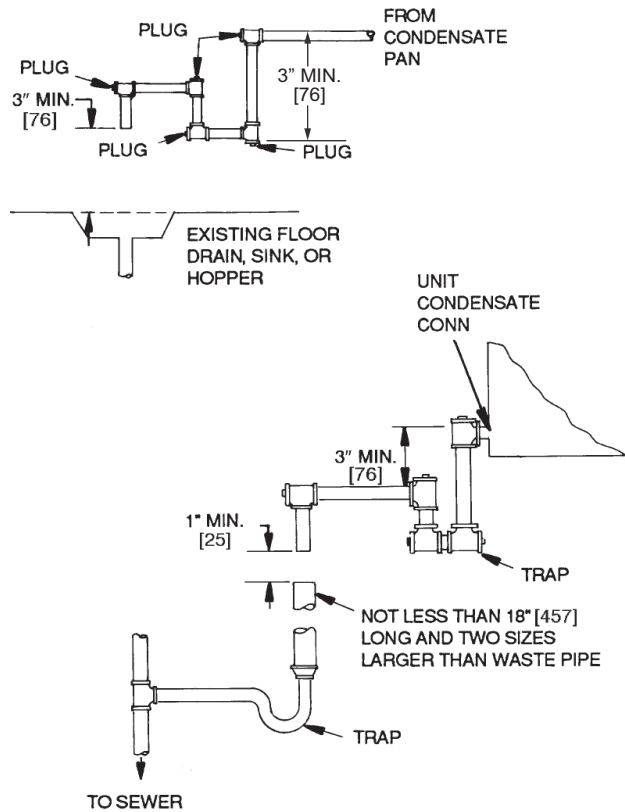


NOTE: Dimensions in [ ] are in millimeters

**Fig. 12 - Condensate Drains**

C10691

**NOTE:** A trap must be installed in the condensate drain line to ensure that the static pressure of fans is balanced with the water column in the drain line and that condensate can drain completely from pan. Without a trap, air can be drawn up drain line until water level in condensate pan becomes equal to static pressure created by fans, preventing complete drainage. Conditions will worsen as filters become dirty.

Install clean-out plugs in trap. Pitch drain line downward to an open floor drain or sump. Provide service clearance around drain line to permit removal of unit panels. Observe all local sanitary codes.

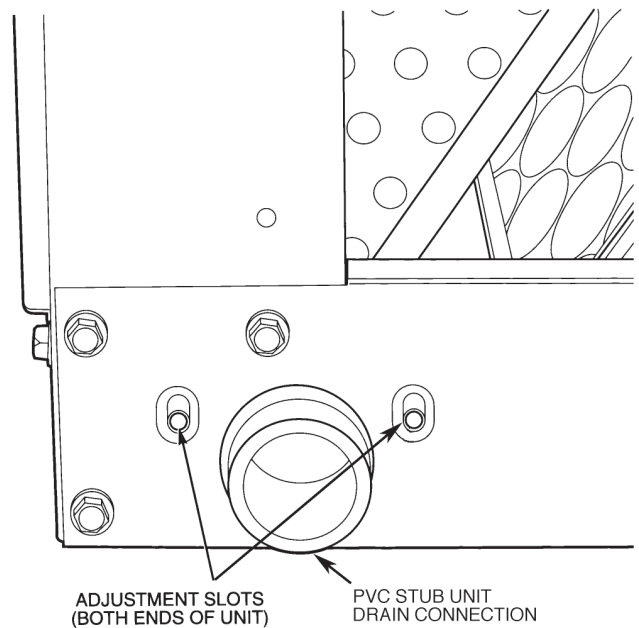

**Fig. 13 - Drain Pan Slope Adjustment**

C10692

As shipped, the unit's condensate drain pan is NOT sloped towards the drain connection. The pan slope must be changed to pitch towards the side of the unit with the drain connection. See Fig. 13. Loosen the 2 screws next to the drain outlet at both ends of the unit, push drain pan down in the slots near the drain connection, and up in the slots on the opposite end. Re-tighten screws. The pan should have a pitch of at least  $\frac{1}{4}$ -in. over its length toward the drain connection.

**Fan Motor and Drives** - Motor and drive packages are factory installed in all units. The motor and drive packages consist of the following items:

- 1 — fan motor
- 1 — adjustable motor pulley
- 1 — fan pulley
- 1 — fan belt  
(524J\*07A-12A, 524J\*07H-12H units)
- 2 — matched fan belts  
(524J\*14A-16A, 524J\*16H units)

For instructions on changing fan rotation, changing drive speeds and adjusting drives, see Pulley and Drive Adjustment in the Service section.

**Power Supply and Wiring** - Check the unit data plate to ensure that available power supply matches electrical characteristics of the unit. Provide a disconnect switch with an integrated lock-out feature of size required to provide adequate fan motor starting current. See Tables 4-6 for unit electrical data.

## ⚠ WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Do not use gas piping as an electrical ground. Unit cabinet must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur. This ground may consist of electrical wire connected to unit ground lug in control compartment, or conduit approved for electrical ground when installed in accordance with NEC (National Electrical Code); ANSI/NFPA 70, latest edition (in Canada, Canadian Electrical Code CSA [Canadian Standards Association] C22.1), and local electrical codes.


524J

## ⚠ WARNING

### FIRE HAZARD

Failure to follow this warning could result in intermittent operation or performance satisfaction.


Do not connect aluminum wire between disconnect switch and fan coil unit. Use only copper wire. (See Fig. 14)

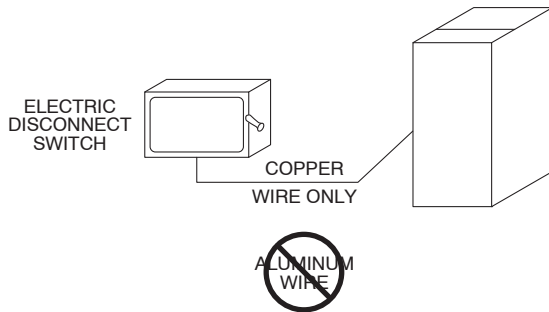

A93033

**Fig. 14 - Disconnect Switch and Unit**

Install disconnect switch and power wiring in accordance with all applicable local codes. See Fig. 14-16 and the unit label diagram. For units with motor sizes less than 5 Hp (3.7 kW), connect power wiring to unit with no. 10 ring terminal. For units with motor sizes of 5 Hp (3.7 kW) or more, connect power wiring with 1/4-in. ring terminal.

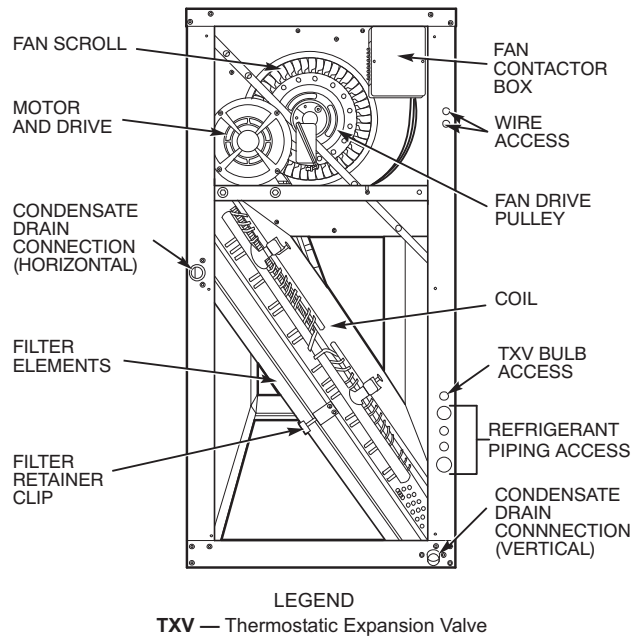


C10693

**Fig. 15 - Wiring and Service Access (Side Panel Removed)**

The 524J size 07-16 units that have motors wired for 460-v, 3-ph, 60 Hz operation can be field-converted to 208/230-v, 3-ph, 60 Hz operation. Rewire the motor according to the diagram plate on the motor. After reconfiguring the motor, mark the motor specifying 208-v or 230-v operation replacing the 460-v sticker information on the units' corner post.

Fan motors are factory-installed on all units. Indoor-fan contactors are located in the fan contactor box behind the side access panel (see Fig. 15 and 16). Wire the thermostat to the 24-v control circuit terminal block located in the side of the fan contactor control box, according to Fig. 17 or the unit label diagram. If the air handler is part of a split system, complete the wiring from the condensing unit to the thermostat shown in Fig. 17.

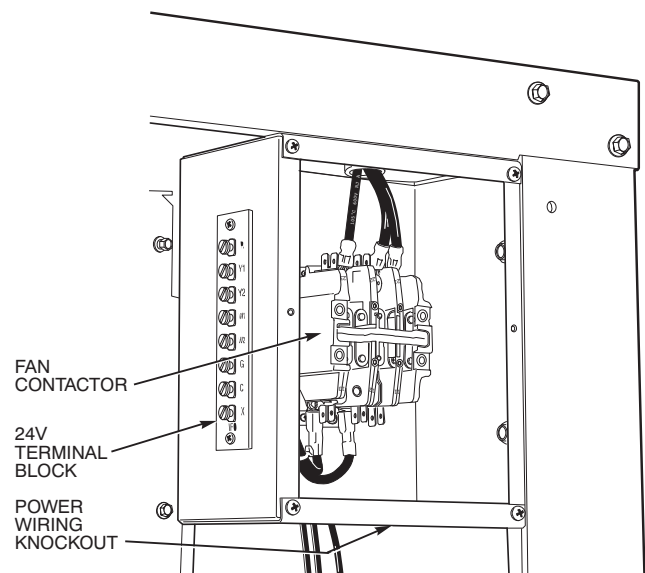

C10694

**Fig. 16 - Fan Contactor Box and Terminal Block (Cover Removed) (Typical)**



**Table 4 – Electrical Data, Standard Motors**

UNIT	V-PH-Hz†	VOLTAGE LIMITS	FAN MOTOR		POWER SUPPLY	
			Hp (kW)	FLA	Minimum Circuit Amps	MOCP
524J*07A 524J*07H	208/230-1-60	187-253	1.3 (0.97)	7.6	9.5	15
	208/230-3-60	187-253	2.4 (1.79)	5.8	7.3	15
	460-3-60	414-506	2.4 (1.79)	2.6	3.3	15
	575-3-60	518-632	1.0 (0.75)	1.4	1.7	15
524J*08A 524J*08H	208/230-1-60	187-253	2.4 (1.79)	11.0	13.8	20
	208/230-3-60	187-253	2.4 (1.79)	5.8	7.3	15
	460-3-60	414-506	2.4 (1.79)	2.6	3.3	15
	575-3-60	518-632	2.0 (1.49)	2.4	8.0	15
524J*12A 524J*12H	208/230-3-60	187-253	2.4 (1.79)	5.8	7.5	15
	460-3-60	414-506	2.4 (1.79)	2.6	3.3	15
	575-3-60	518-632	2.0 (1.49)	2.4	3.0	15
524J*14A	208/230-3-60	187-253	2.4 (1.79)	5.8	7.5	15
	460-3-60	414-506	2.4 (1.79)	2.6	3.3	15
	575-3-60	518-632	3.0 (2.24)	3.8	4.8	15
524J*16A 524J*16H	208/230-3-60	187-253	3.7 (2.76)	10.6	13.3	20
	460-3-60	414-506	3.7 (2.76)	4.6	6.0	15
	575-3-60	518-632	3.0 (2.24)	3.8	4.8	15

See Legend and Notes on page 21.

**Table 5 – Electrical Data, Alternate Motors**

UNIT	V-PH-Hz†	VOLTAGE LIMITS	FAN MOTOR		POWER SUPPLY	
			Hp (kW)	FLA	Minimum Circuit Amps	MOCP
524J*07A 524J*07H	208/230-1-60	187-253	2.4 (1.79)	11.0/11.0	13.8/13.8	20
	208/230-3-60	187-253	2.9 (2.16)	7.5	9.4	15
	460-3-60	414-506	2.9 (2.16)	3.4	4.3	15
	575-3-60	518-632	2.0 (1.49)	2.4	3.0	15
524J*08A 524J*08H	208/230-1-60	187-253	2.4 (1.79)	11.0	13.8	15
	208/230-3-60	187-253	2.9 (2.16)	7.5/7.5	9.4/9.4	15
	460-3-60	414-506	2.9 (2.16)	3.4	4.3	15
	575-3-60	518-632	3.0 (2.24)	3.8	4.8	15
524J*12A 524J*12H	208/230-3-60	187-253	3.7 (2.76)	10.5/10.5	13.3/13.3	20
	460-3-60	414-506	3.7 (2.76)	4.8	6.0	15
	575-3-60	518-632	3.0 (2.24)	3.8	4.8	15
524J*14A	208/230-3-60	187-253	3.7 (2.76)	10.2	12.7	20
	460-3-60	414-506	3.7 (2.76)	4.8	6.0	15
	575-3-60	518-632	5.0 (3.73)	5.1	6.4	15
524J*16A 524J*16H	208/230-3-60	187-253	5.0 (3.73)	14.7/13.6	18.4/17.0	30/25
	460-3-60	414-506	5.0 (3.73)	6.8	8.5	15
	575-3-60	518-632	5.0 (3.73)	5.1	6.4	15

See Legend and Notes on page 21.

**Table 6 – Fan Contactor Coil Data**

UNIT 524J*	VOLTAGE (vac)	MAXIMUM HOLDING VA
07A, 08A, 12A, 14A, 16A 07H, 08H, 12H, 16H	24	10

524J

**Legend and Notes for Tables 4 and 5**

**LEGEND:**

FLA – Full Load Amps

MOC – Maximum Overcurrent Protection

† Motors are designed for satisfactory operation within 10% of normal voltage shown. Voltages should not exceed the limits shown in the Voltage Limits column.

**NOTES:**

1. Minimum circuit amps (MCA) and MOC values are calculated in accordance with The NEC, Article 440.
2. Motor FLA values are established in accordance with Underwriters' Laboratories (UL), Standard 1995.
3. **Unbalanced 3-Phase Supply Voltage**  
Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the formula in the example (see column to the right) to determine the percentage of voltage imbalance.
4. **Installation with Accessory Electric Heaters**  
Size the Field Power Wiring between the heater TB1 and the 524J indoor fan motor per NEC Article 430-28 (1) or (2) (depends on length of conduit between heater enclosure and 524J power entry location). Install wires in field-installed conduit.

Example: Supply voltage is 230-3-60

$$\% \text{ Voltage Imbalance} = 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$



AB = 393 v  
BC = 403 v  
AC = 396 v

$$\text{Average Voltage} = \frac{(393 + 403 + 396)}{3} = \frac{1192}{3} = 397$$

Determine maximum deviation from average voltage.

(AB) 397 – 393 = 4 v

(BC) 403 – 397 = 6 v

(AC) 397 – 396 = 1 v

Maximum deviation is 4 v.


Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{6}{397} = 1.5\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

**IMPORTANT:** If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.

524J

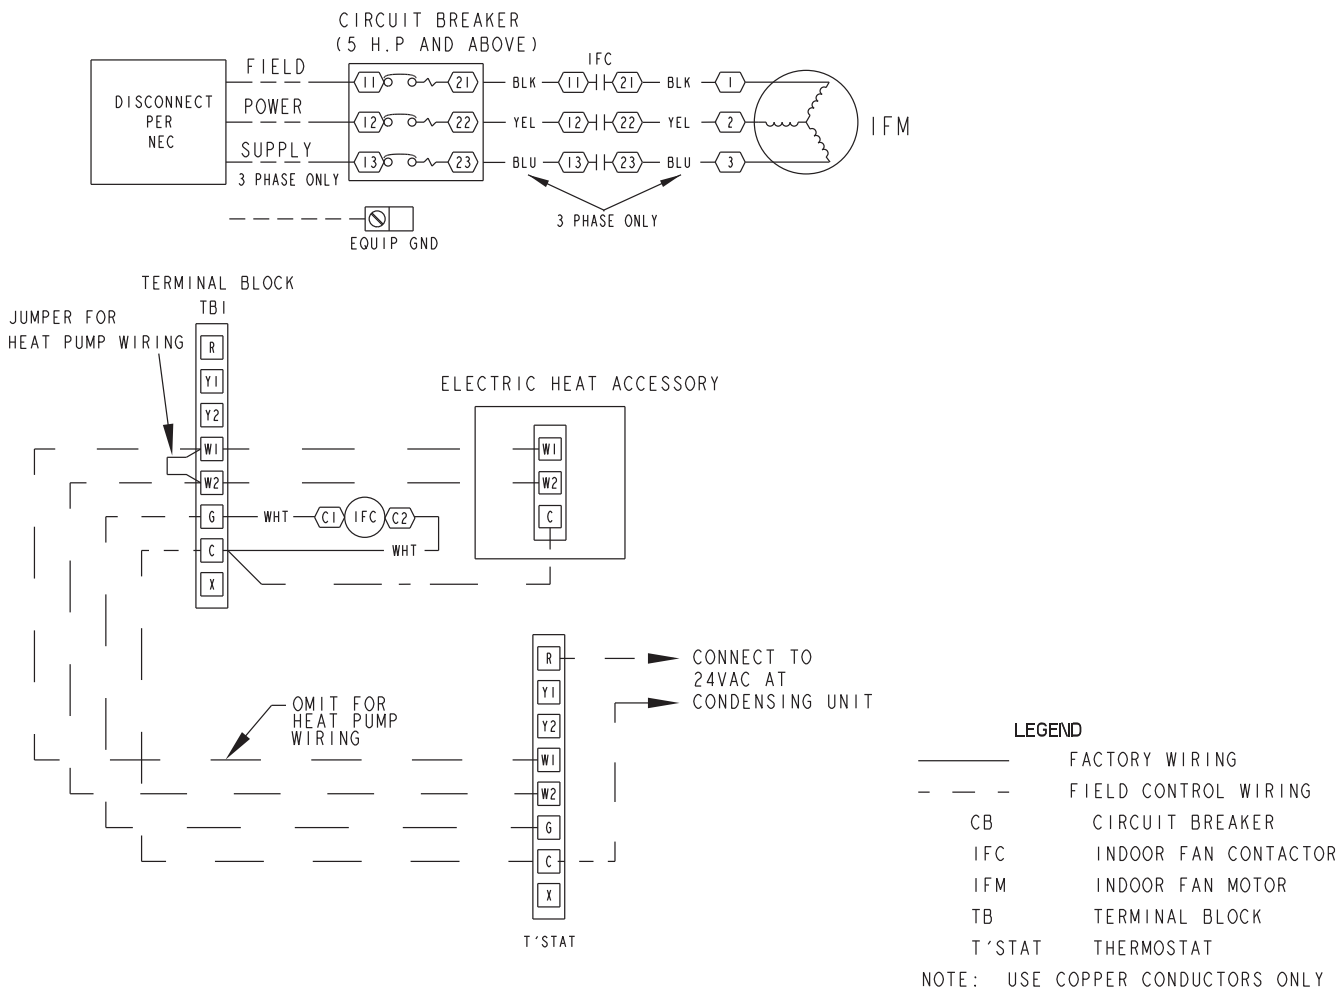

**Fig. 17 - Unit Wiring**

C10695

**Connecting Ductwork** - Refer to the System Design Manual for the recommended design and layout of ductwork. Fig. 18 shows recommended duct connection to units with 2 fans.

**⚠ CAUTION**


**UNIT OPERATION HAZARD**

Failure to follow this caution could cause equipment damage.

Do not operate unit without ductwork or discharge plenum unless fan speed has been adjusted for external static pressure of zero in. wg. Failure to do so may result in motor overload.

**DISCHARGE CONNECTIONS** — Duct flanges are factory-supplied; they are shipped inside the unit attached to the hairpin end of the coil tube sheet for field installation. Using the existing screws, install the duct flanges on the unit's fan deck. Each fan discharge requires 2 flanges; each flange must be bent in the middle to conform to the discharge opening. See Fig. 19. After flanges are installed, connect them to the supply duct using a canvas connection to prevent vibration. It is important that this connection be properly fabricated to prevent high air friction losses and air noise.

**RETURN CONNECTIONS** — When using return-air ductwork, route return-air duct to the unit's return air inlet near the filter rack, using a canvas connection to prevent transmission of unit vibration. If the duct blocks off the unit's access panel, provide a slip joint in the ductwork to permit removal for servicing.

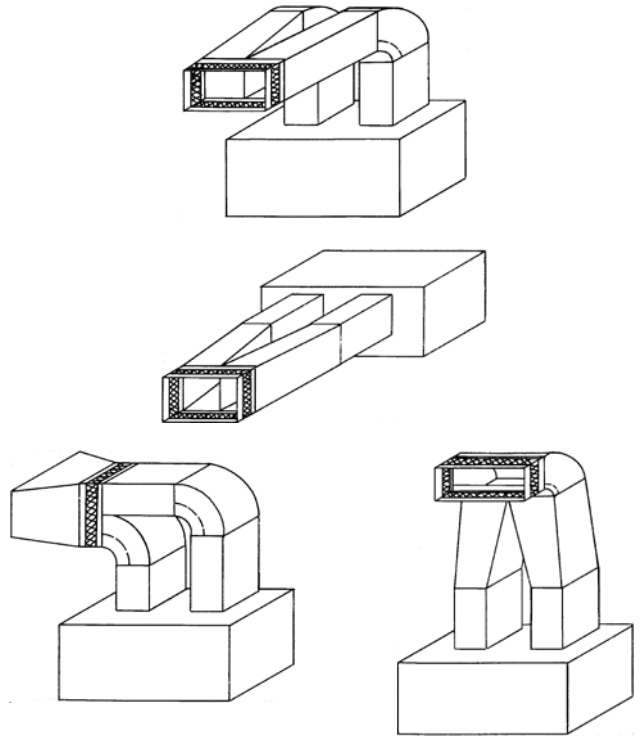


**Fig. 18 - Typical Fan Discharge Connections for Multiple Fan Units**

C10696

**OUTDOOR-AIR INLET CONNECTIONS** — Connect outdoor-air inlet to field-installed accessory economizer. Refer to Economizer Installation Instructions.

**Return-Air Filters** - Type and size of filters are shown in Tables 1A – 1D and are factory-supplied and factory-installed. In all units with 2 fans, a filter replacement tool (hook) is shipped inside the unit for field use when replacing filters. See the Service section for instructions on filter element replacement.

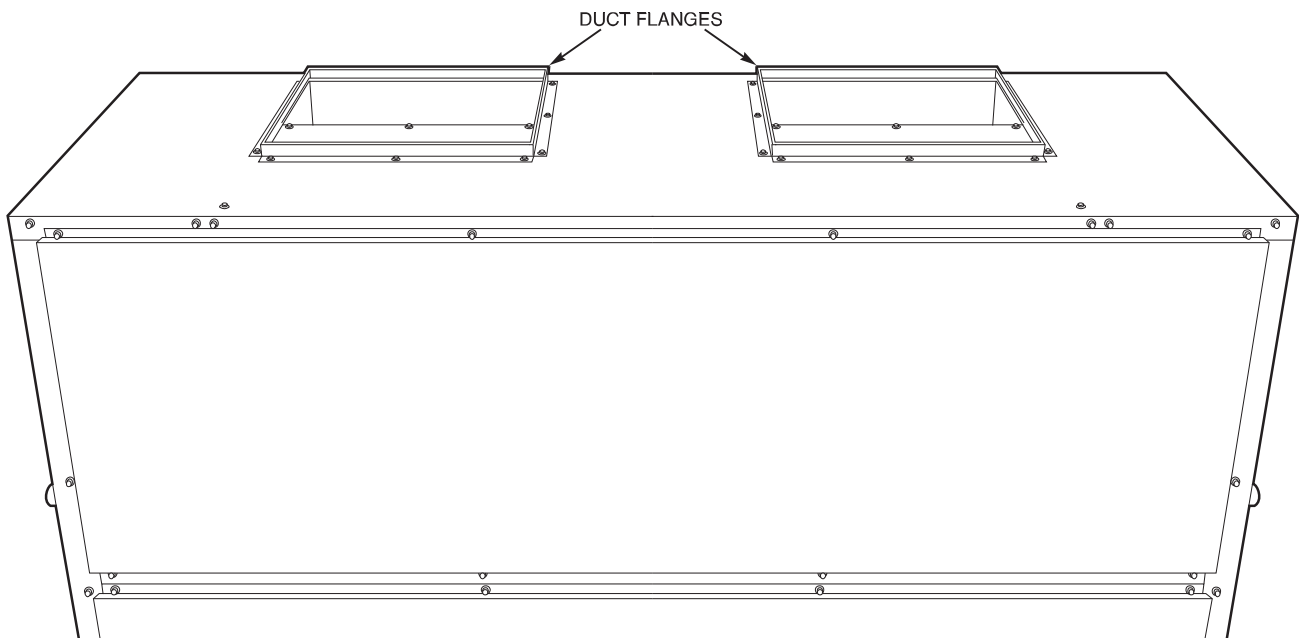

**Fig. 19 - Duct Flange Installation**

C10697

524J

## START-UP

Before starting unit, check the following and correct as necessary:

- Is unit solidly supported?
- Is fan adjusted for speed and pulley alignment?
- Are pulleys, motor, and bearings securely mounted?
- Are there any loose parts that will rattle or vibrate?
- Is condensate drain pan pitched for correct drainage?
- Are coil baffle plates tight against coil to prevent air bypass?
- Are all panels securely fastened?
- Are all electrical connections correct and tight?
- Is TXV bulb located on suction tube per Fig. 20?
- Is the capillary tube to the bulb free of kinks and not subject to pinching?
- Is the bulb well secured to the suction tube with strap?

Also refer to condensing unit or outdoor heat pump section instructions before starting a split system. A split system start-up checklist is provided at the end of these instructions.

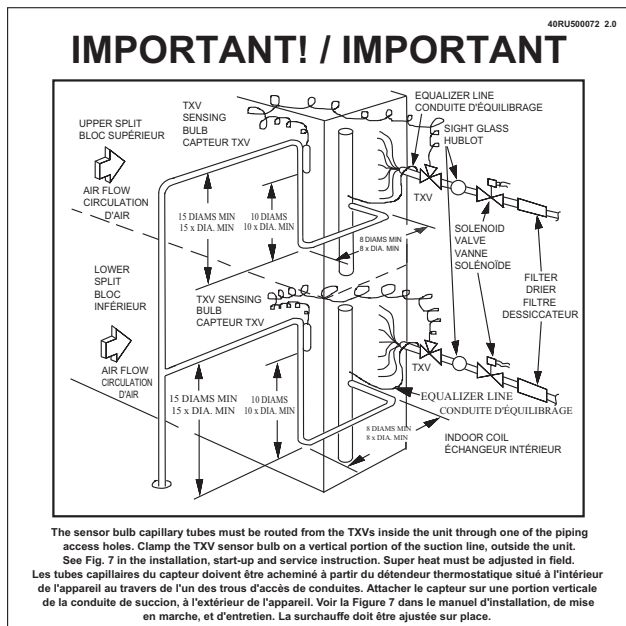


Fig. 20 - Label, TXV Bulb Location

### Adjusting TXV for Superheat —

The unit-mounted thermostatic expansion valve(s) is/are factory set to provided superheat at the bulb location in 10°F to 15°F (5.5°C to 8.3°C) range. Actual system load conditions may require adjustment of the factory setting. To adjust the TXV superheat setting:

1. Remove the seal cap from the bottom of the TXV body.

2. To increase superheat, turn the stem clockwise. To decrease the superheat, turn the stem counterclockwise. Do not turn the stem more than one full turn.
3. Wait until suction pressure and superheat stabilize. This may take more than 30 minutes.
4. Continue adjustment until superheat reaches 10°F to 15°F (5.5°C to 8.3°C).
5. Replace the seal cap; tighten.

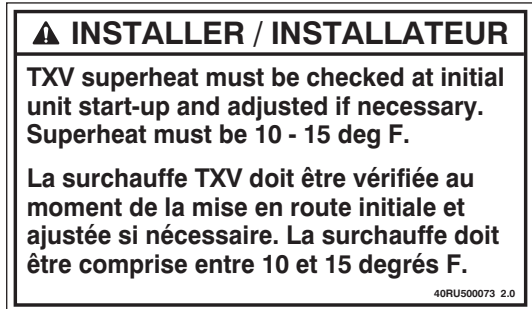


Fig. 21 - Label, TXV Adjustment

## SERVICE

Inspection and maintenance should be performed at regular intervals and should include the following:

- Complete cleaning of cabinet, fan wheel, cooling coil, condensate pan and drain, heating coils, and return-air grille (if present).
- Inspection of panels and sealing of unit against air leakage.
- Adjustment of fan motor, belt, bearings, and wheels.
- Cleaning or replacement of filters.
- Testing for cooling/heating system leaks.
- Checking of all electrical connections.

## WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Before performing service or maintenance operations on unit, always turn off main power switch to unit and install lockout tag. Unit may have more than one power switch.

Most unit service can be performed by removing one or both of the unit's side panels. Coil cleaning or removal or insulation cleaning may require removal of a rear, top, or bottom panel, depending on the unit's orientation. When service is completed, replace unit panels.

**Panels** - Panels are fastened to unit frame with sheet metal screws. Fan and coil compartment must be sealed tightly after service to prevent air from bypassing the cooling coil.


**Fan Motor Lubrication** - Fan motor supplied with unit is permanently lubricated and requires no further lubrication.

**Fan Shaft Bearings** - Bearings on size 07-12 units are sealed, permanently lubricated bearings that require no further lubrication. Size 14-16 units have pillow-block bearings (Fig. 22) that must be lubricated with suitable bearing grease approximately every 3 months. See Table 7 for suitable lubricants.

**Table 7 – Lubricant Data**

MANUFACTURER	LUBRICANT
<b>Mobil</b>	Mobilplex EP No. 2
<b>Sunoco</b>	Prestige 42
<b>Texaco</b>	Multifak 2
<b>Texaco</b>	Regal AFB-2*

\*Preferred lubricant, contains rust and oxidation inhibitors.

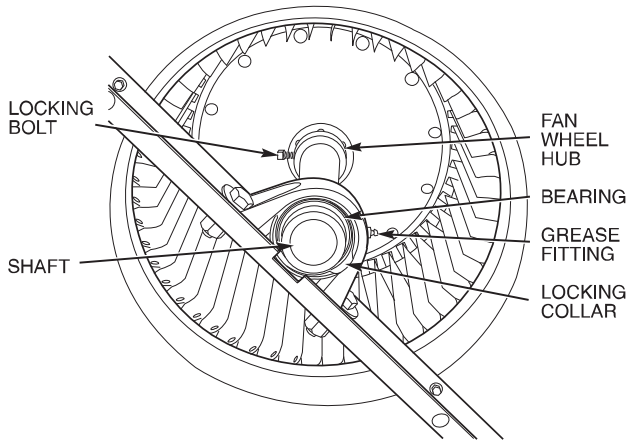


C10698

**Fig. 22 - Fan Shaft, Bearings, and Fan Wheel (Typical)**


**Centering Fan Wheel** - If fan and fan shaft assembly are not properly centered, blades may scrape against the blower side scroll plate or may create an objectionable whistling noise. It may be necessary to adjust individual fan wheels or move entire fan shaft. See the following two sections.

**Fan Shaft Position Adjustment** - Loosen setscrew or locking collar of each fan shaft bearing. Slide shaft into correct position and replace locking collar (Fig. 23). To replace locking collar, push collar up against inner face of bearing. Turn collar in direction of fan rotation until tight, and tighten setscrew. Tightening locking collar in direction of fan rotation results in further tightening of collar should setscrew work itself loose.

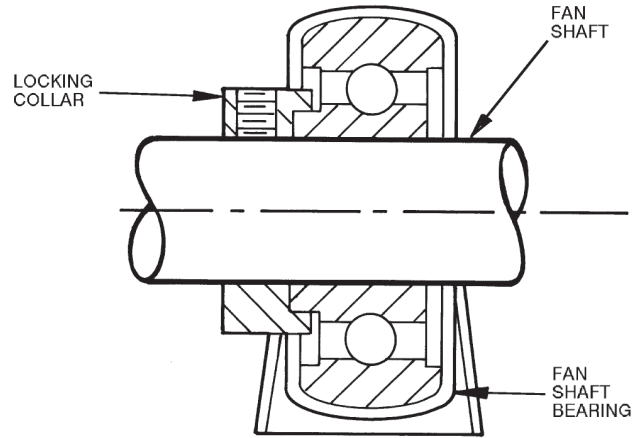

C10699

**Fig. 23 - Fan Shaft Bearing**

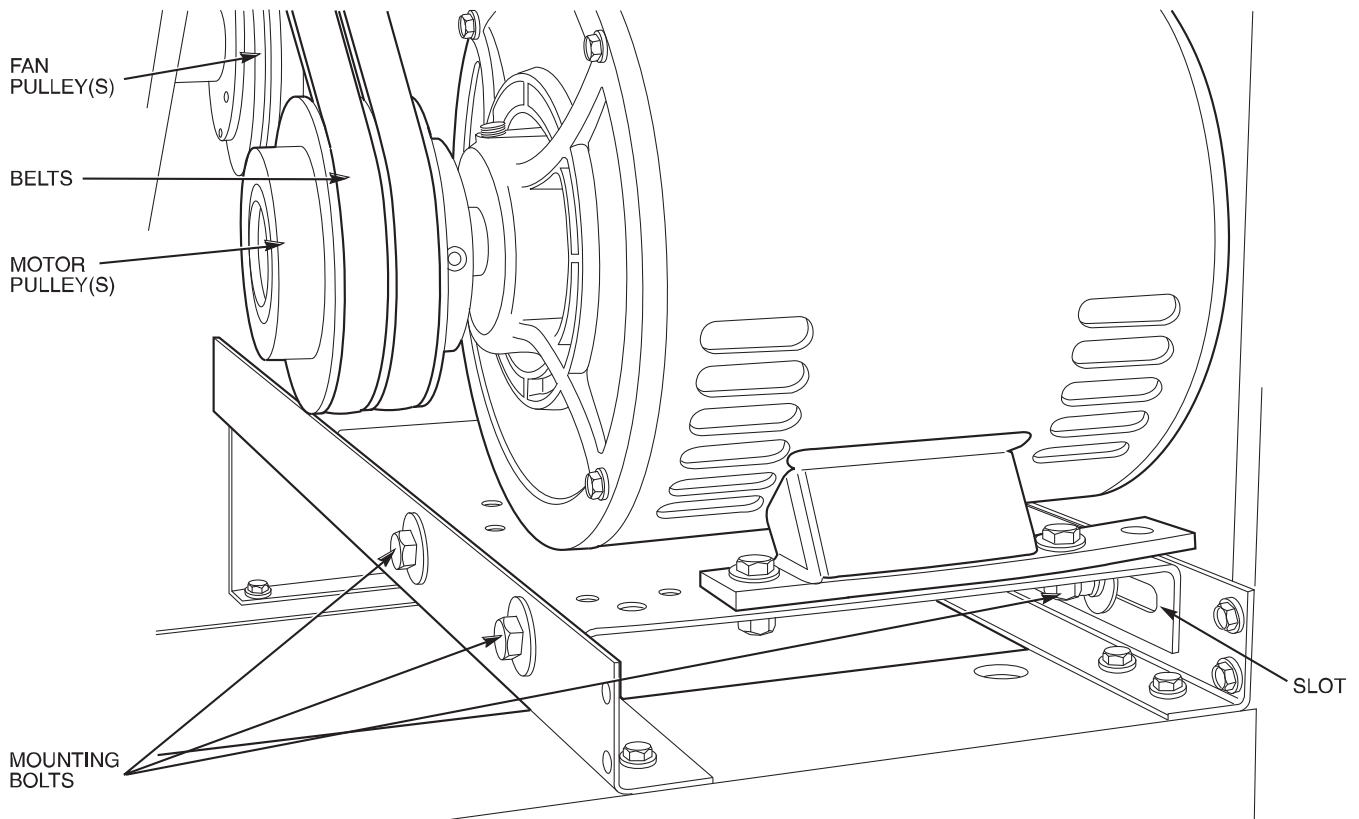

C10700

**Fig. 24 - Fan Motor Mounting**

524J


**Individual Fan Wheel Adjustment** - Loosen the 2 locking bolts holding fan wheel hub to shaft. See Fig. 22. Position fan wheel in center of the fan housing and tighten locking bolts. Clearance between wheel and housing should be the same on both sides.

**Fan Belts** - Motor mounting plate and motor support angles are slotted to permit both vertical and horizontal adjustment. Adjust belt(s) for correct deflection by loosening motor plate mounting bolts, moving motor/plate assembly forward or back, and re tightening bolts. Press down on belt with one finger midway between fan and motor pulleys to check deflection. For units with motor sizes up to and including 3.7 Hp (2.76 kW), correct deflection is  $\frac{3}{16}$ -in. (4.8 mm). For larger motor sizes, correct deflection is  $\frac{1}{8}$ -in. (3.2 mm). See Fig. 24.

If complete belt replacement is required during servicing, loosen the motor plate mounting bolts (Fig. 24), move motor/plate assembly towards fan pulley, and pull belt(s) off pulleys. Reverse the procedure with new bolts and readjust deflection.

**Fan Rotation** - Correct fan rotation with respect to fan outlet is shown in Fig. 25.

To reverse the direction of rotation of a 3-phase fan motor, reverse any 2 of the power leads. Refer to the connection diagram on the inside of motor terminal box cover for proper reversing procedure of single-phase motor.

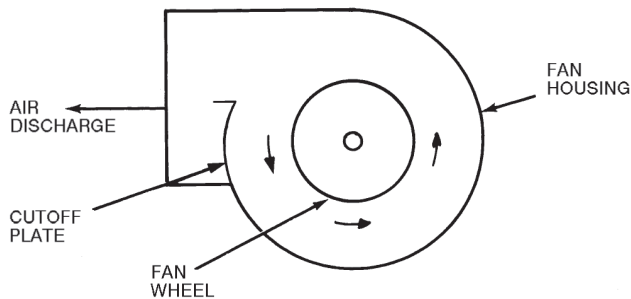


**Fig. 25 - Fan Rotation**

C10701

**Fan Pulley Alignment** - Align as follows:

1. Loosen setscrews on pulleys.
2. Align pulleys visually and tighten setscrews on fan pulley to lock it in place.
3. Use the methods shown in Fig. 26 to check proper pulley alignment.
4. If pulleys are not in correct alignment, loosen the motor holddown bolts and slide the motor axially until the pulleys are aligned.
5. Tighten motor holddown bolts.

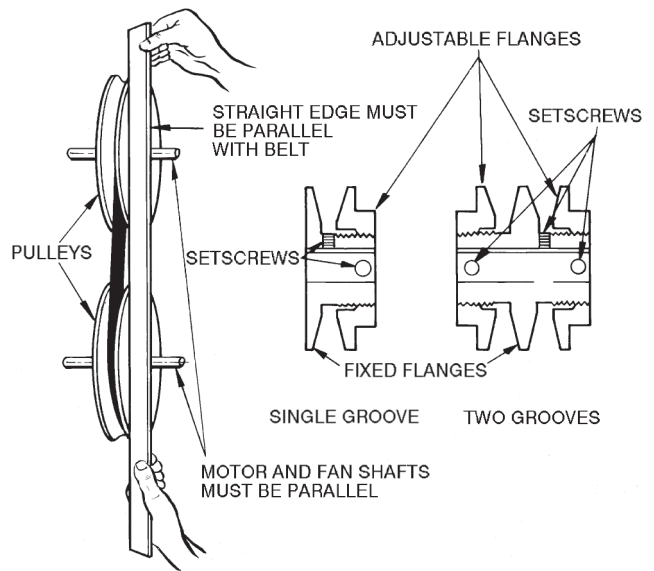

**Fig. 26 - Fan Pulley Adjustments**

C10702

**Pulley and Drive Adjustment** - To obtain desired fan speed, refer to the fan motor and drive data in Tables 8A-11D and adjust fan motor pulley as follows:

1. Remove belt from fan motor pulley after loosening motor from motor base.
2. Loosen setscrew in moveable flange of pulley. Screw moveable flange toward fixed flange to increase the fan speed and away from fixed flange to reduce speed. Before tightening setscrew, make certain that setscrew is over nearest flat surface of pulley hub (Fig. 26).

## ⚠ CAUTION

### UNIT OPERATION HAZARD

Failure to follow this caution could cause equipment damage.

Increasing fan speed produces a greater load on motor. Do not exceed rated capacity of motor.

**Condensate Drains** - Keep condensate drains free of dirt and foreign matter.

**Return-Air Filters** - Refer to Replacing Filters section for filter accessibility and removal. Replace with clean filters of the sizes listed in Tables 1A-1F.

**Coil Removal** - Remove unit panels and corner posts as required. Disconnect coil connections and remove fastening screws. Remove coil through end or side sections of unit.

**Cleaning Cooling Coil** - Remove return-air filters. Remove any heavy dirt that may have accumulated on underside of coil. Coil can be cleaned more easily with a stiff brush, vacuum cleaner, or compressed air when coil is dry. If coil is wet or if water is to be used for cleaning, guard against splashing water on electrical components or damaging surrounding area. Clean coil baffles as applicable and check for tight fit to be sure air does not bypass coil.

**Cleaning Insulation** - The insulation contains an immobilized antimicrobial agent that helps prevent the growth of bacteria and fungi. Clean the inner surface of the insulation according to the separate maintenance instructions shipped with the unit.

**Replacing Filters** - Filters can be removed and installed from either side of the unit. Install new filters in units that have one fan as follows:

1. Remove the side access panel (retain screws).
2. Remove the filter retainer clip (see Fig. 27).
3. Remove old filters by lifting and tilting them out of the filter track. See Fig. 15 and 28.
4. Reverse the procedure to install new filters.


To install new filters in larger units that have 2 fans, follow the preceding steps, but use the factory-supplied filter hook to slide filters within reach for removal. The filter hook is shipped inside the unit in the filter track.

**⚠ CAUTION**

**UNIT OPERATION HAZARD**


Failure to follow this caution could cause equipment damage.

Do not operate unit without air filters.

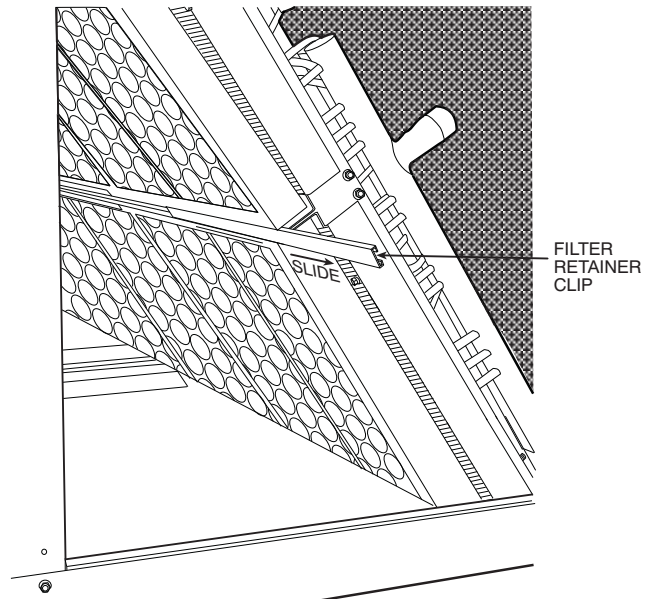

**Fig. 27 - Remove Filter Retainer Clip**

C10703

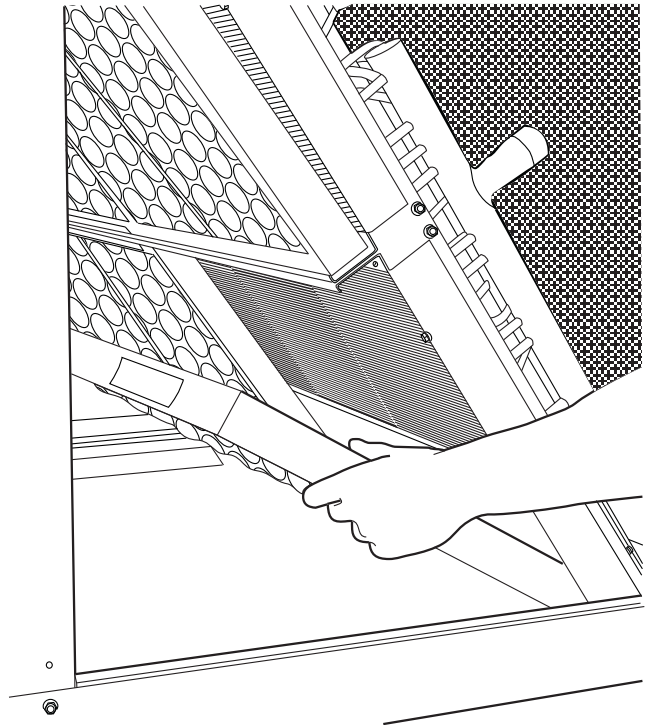

**Fig. 28 - Filter Removal/Replacement**

C10704

524J

Table 8A - Fan Motor Data, Standard Motor — English

UNIT	524J*07A 524J*07H	524J*08A 524J*08H	524J*12A 524J*12H	524J*14A	524J*16A 524J*16H
<b>208/230-1-60</b>					
Speed (rpm)	1725	1725	—	—	—
Hp	1.3	2.4	—	—	—
Frame (NEMA)	56Y	56Y	—	—	—
Shaft Dia (in.)	5/8	5/8	—	—	—
<b>208/230-3-60 and 460-3-60</b>					
Speed (rpm)	1725	1725	1725	1725	1725
Hp	2.4	2.4	2.4	2.9	3.7
Frame (NEMA)	56Y	56Y	56Y	56Y	56Y
Shaft Dia (in.)	5/8	5/8	5/8	7/8	7/8
<b>575-3-60</b>					
Speed (rpm)	1725	1725	1725	1725	1725
Hp	1.0	2.0	2.0	3.0	3.0
Frame (NEMA)	56	56HZ	56HZ	56HZ	56HZ
Shaft Dia (in.)	5/8	7/8	7/8	7/8	7/8

LEGEND

NEMA — National Electrical Manufacturers Association

Table 8B - Fan Motor Data, Alternate Motor — English

UNIT	524J*07A 524J*07H	524J*08A 524J*08H	524J*12A 524J*12H	524J*14A	524J*16A 524J*16H
<b>208/230-1-60</b>					
Speed (rpm)	1725	1725	—	—	—
Hp	2.4	2.4	—	—	—
Frame (NEMA)	56Y	56Y	—	—	—
Shaft Dia (in.)	5/8	5/8	—	—	—
<b>208/230-3-60 and 460-3-60</b>					
Speed (rpm)	1725	1725	1725	1725	1725
Hp	2.9	2.9	3.7	3.7	5.0
Frame (NEMA)	56Y	56Y	Y56Y	Y56Y	S184T
Shaft Dia (in.)	7/8	7/8	7/8	7/8	1 1/8
<b>575-3-60</b>					
Speed (rpm)	1725	1725	1725	1745	1745
Hp	2.0	3.0	3.0	5.0	5.0
Frame (NEMA)	56HZ	56HZ	56HZ	184T	184T
Shaft Dia (in.)	7/8	7/8	7/8	1 1/8	1 1/8

LEGEND

NEMA — National Electrical Manufacturers Association



Table 8C - Fan Motor Data, Standard Motor — SI

UNIT	524J*07A 524J*07H	524J*08A 524J*08H	524J*12A 524J*12H	524J*14A	524J*16A 524J*16H
<b>208/230-1-60</b>					
Speed (r/s)	28.75	28.75	—	—	—
Shaft kW	0.97	1.79	—	—	—
Frame (NEMA)	56Y	56Y	—	—	—
Shaft Dia (mm)	15.9	15.9	—	—	—
<b>208/230-3-60 and 460-3-60</b>					
Speed (r/s)	28.75	28.75	28.75	28.75	28.75
Shaft kW	1.79	1.79	1.79	2.16	2.76
Frame (NEMA)	56Y	56Y	56Y	56Y	56Y
Shaft Dia (mm)	15.9	15.9	15.9	22.2	22.2
<b>575-3-60</b>					
Speed (r/s)	28.75	28.75	28.75	28.75	28.75
Shaft kW	0.746	1.49	1.49	2.24	2.24
Frame (NEMA)	56	56HZ	56HZ	56HZ	56HZ
Shaft Dia (mm)	15.9	22.2	22.2	22.2	22.2

LEGEND

NEMA — National Electrical Manufacturers Association

Table 8D - Fan Motor Data, Alternate Motor — SI

UNIT	524J*07A 524J*07H	524J*08A 524J*08H	524J*12A 524J*12H	524J*14A	524J*16A 524J*16H
<b>208/230-1-60</b>					
Speed (r/s)	28.75	28.75	—	—	—
Shaft kW	1.79	1.79	—	—	—
Frame (NEMA)	56Y	56Y	—	—	—
Shaft Dia (mm)	15.9	15.9	—	—	—
<b>208/230-3-60 and 460-3-60</b>					
Speed (r/s)	28.75	28.75	28.75	28.75	29.08
Shaft kW	2.16	2.16	2.76	2.76	3.73
Frame (NEMA)	56Y	56Y	Y56Y	Y56Y	S184T
Shaft Dia (mm)	22.2	22.2	22.2	22.2	28.6
<b>575-3-60</b>					
Speed (r/s)	28.75	28.75	28.75	29.08	29.08
Shaft kW	1.49	2.24	2.24	3.73	3.73
Frame (NEMA)	56HZ	56HZ	56HZ	184T	184T
Shaft Dia (mm)	22.2	22.2	22.2	28.6	28.6

LEGEND

NEMA — National Electrical Manufacturers Association

524J

Table 9A- Standard Drive Data, 60 Hz — English

UNIT	524J*07A 524J*07H	524J*08A 524J*08H	524J*12A 524J*12H	524J*14A	524J*16A 524J*16H
<b>MOTOR DRIVE</b>					
Motor Pulley Pitch Diameter (in.)	2.4–3.4	2.8–3.8	3.4–4.4	2.8–3.8	2.8–3.8
Pulley Factory Setting Full Turns Open	2.5	2.5	2.5	2.5	2.5
<b>FAN DRIVE</b>					
Pulley Pitch Dia (in.)	8.8	8.8	8.8	9.0	9.0
Pulley Bore (in.)	1	1	1	1 <sup>7</sup> / <sub>16</sub>	1 <sup>7</sup> / <sub>16</sub>
Belt No. — Section	1—A	1—A	1—A	1—A	1—A
Belt Pitch (in.)	40.3	41.3	42.3	42.3	42.3
<b>FAN SPEEDS (rpm)</b>					
Factory Setting	568	647	764	632	632
Range	470–666	549–745	666–863	537–728	537–728
Max Allowable Speed (rpm)	1200	1200	1200	1200	1200
Change per 1/2 Turn of Moveable Motor Pulley Flange	19.6	19.6	19.7	19.1	19.1
<b>MAX FULL TURNS FROM CLOSED POSITION</b>	5	5	5	5	5
<b>SHAFTS CENTER DISTANCE (in.)</b>	10.44–12.32	10.44–12.32	10.44–12.32	10.44–12.32	10.44–12.32

Table 9B - Medium-Static Drive Data, 60 Hz — English

UNIT	524J*07A 524J*07H	524J*08A 524J*08H	524J*12A 524J*12H	524J*14A	524J*16A 524J*16H
<b>MOTOR DRIVE</b>					
Motor Pulley Pitch Diameter (in.)	3.4–4.4	3.4–4.4	3.4–4.4	3.4–4.4	3.7–4.7
Pulley Factory Setting Full Turns Open	2.5	2.5	2.5	2.5	3.0
<b>FAN DRIVE</b>					
Pulley Pitch Dia (in.)	8.8	8.0	8.0	8.2	8.6
Pulley Bore (in.)	1	1	1	1 <sup>7</sup> / <sub>16</sub>	1 <sup>7</sup> / <sub>16</sub>
Belt No. — Section	1—A	1—A	1—A	1—A	1—B
Belt Pitch (in.)	42.3	40.3	40.3	41.3	41.8
<b>FAN SPEEDS (rpm)</b>					
Factory Setting	764	841	841	820	842
Range	666–863	733–949	733–949	715–926	742–943
Max Allowable Speed (rpm)	1200	1200	1200	1200	1200
Change per 1/2 Turn of Moveable Motor Pulley Flange	19.7	21.6	21.6	21.1	16.7
<b>MAX FULL TURNS FROM CLOSED POSITION</b>	5	5	5	5	6
<b>SHAFTS CENTER DISTANCE (in.)</b>	10.44–12.32	10.44–12.32	10.44–12.32	10.44–12.32	10.44–12.32

524J

Table 9C - High-Static Drive Data, 60 Hz — English

UNIT	524J*07A 524J*07H	524J*08A 524J*08H	524J*12A 524J*12H	524J*14A	524J*16A 524J*16H
<b>MOTOR DRIVE</b>					
Motor Pulley Pitch Diameter (in.)	3.4–4.4	3.4–4.4	3.4–4.4	3.7–4.7	4.3–5.3
Pulley Factory Setting Full Turns Open	2.5	2.5	2.5	3.0	3.0
<b>FAN DRIVE</b>					
Pulley Pitch Dia (in.)	7.0	6.0*	6.0	7.4	7.9
Pulley Bore (in.)	1	1	1	1 <sup>7</sup> / <sub>16</sub>	1 <sup>7</sup> / <sub>16</sub>
Belt No. — Section	1—A	1—A	1—A	1—B	1—B
Belt Pitch (in.)	41.3	37.3	37.3	39.8	39.8
<b>FAN SPEEDS (rpm)</b>					
Factory Setting	961	1121	1121	979	1060
Range	838–1084	978–1200*†	978–1200†	873–1096	950–1171
Max Allowable Speed (rpm)	1200	1200	1200	1200	1200
Change per 1/2 Turn of Moveable Motor Pulley Flange	24.6	28.7	28.7	19.4	18.4
<b>MAX FULL TURNS FROM CLOSED POSITION</b>	5	5	5	6	6
<b>SHAFTS CENTER DISTANCE (in.)</b>	10.44–12.32	10.44–12.32	10.44–12.32	10.44–12.32**	9.16–10.99

\* Values for 3-phase motor shown. For single-phase motor, pulley pitch diameter is 7 in. And resulting fan speed is 837–1096 rpm.

† It is possible to adjust drive so that fan speed exceeds maximum allowable. DO NOT exceed 1200 rpm.

\*\* 575-v unit has a center distance of 9.16–10.99.

Table 9D - Standard Drive Data, 60 Hz — SI

UNIT	524J*07A 524J*07H	524J*08A 524J*08H	524J*12A 524J*12H	524J*14A	524J*16A 524J*16H
<b>MOTOR DRIVE</b>					
Motor Pulley Pitch Diameter (mm)	61.0–86.4	71.1–96.5	86.4–111.8	71.1–96.5	71.1–96.5
Pulley Factory Setting Full Turns Open	2.5	2.5	2.5	2.5	2.5
<b>FAN DRIVE</b>					
Pulley Pitch Dia (mm)	224	224	224	229	229
Pulley Bore (mm)	25.4	25.4	25.4	36.5	36.5
Belt No. — Section	1—A	1—A	1—A	1—A	1—A
Belt Pitch (mm)	1024	1049	1074	1074	1074
<b>FAN SPEEDS (r/s)</b>					
Factory Setting	9.5	10.8	12.7	10.5	10.5
Range	7.8–11.1	9.2–12.4	11.1–14.4	9.0–12.1	9.0–12.1
Max Allowable Speed (r/s)	20.0	20.0	20.0	20.0	20.0
Change per 1/2 Turn of Moveable Motor Pulley Flange	0.327	0.327	0.328	0.318	0.318
<b>MAX FULL TURNS FROM CLOSED POSITION</b>	5	5	5	5	5
<b>SHAFTS CENTER DISTANCE (mm)</b>	265–313	265–313	265–313	265–313	265–313

Table 9E - Medium-Static Drive Data, 60 Hz — SI

UNIT	524J*07A 524J*07H	524J*08A 524J*08H	524J*12A 524J*12H	524J*14A	524J*16A 524J*16H
<b>MOTOR DRIVE</b>					
Motor Pulley Pitch Diameter (mm)	86.4–111.8	86.4–111.8	86.4–111.8	86.4–111.8	94.0–119.4
Pulley Factory Setting Full Turns Open	2.5	2.5	2.5	2.5	3.0
<b>FAN DRIVE</b>					
Pulley Pitch Dia (mm)	224	203	203	208	218
Pulley Bore (mm)	25.4	25.4	25.4	36.5	36.5
Belt No. — Section	1—A	1—A	1—A	1—A	1—B
Belt Pitch (mm)	1074	1024	1024	1049	1062
<b>FAN SPEEDS (r/s)</b>					
Factory Setting	12.7	14.0	14.0	13.7	14.0
Range	11.1–14.4	12.2–15.8	12.2–15.8	11.9–15.4	12.4–15.7
Max Allowable Speed (r/s)	20.0	20.0	20.0	20.0	20.0
Change per $1/2$ Turn of Moveable Motor Pulley Flange	0.328	0.360	0.360	0.352	0.278
MAX FULL TURNS FROM CLOSED POSITION	5	5	5	5	6
SHAFTS CENTER DISTANCE (mm)	265–313	265–313	265–313	265–313	265–313

Table 9F - High-Static Drive Data, 60 Hz — SI

UNIT	524J*07A 524J*07H	524J*08A 524J*08H	524J*12A 524J*12H	524J*14A	524J*16A 524J*16H
<b>MOTOR DRIVE</b>					
Motor Pulley Pitch Diameter (mm)	86.4–111.8	86.4–111.8	86.4–111.8	94.0–119.4	109.2–134.6
Pulley Factory Setting Full Turns Open	2.5	2.5	2.5	3.0	3.0
<b>FAN DRIVE</b>					
Pulley Pitch Dia (mm)	178	152*	152	188	201
Pulley Bore (mm)	25.4	25.4	25.4	36.5	36.5
Belt No. — Section	1—A	1—A	1—A	1—B	1—B
Belt Pitch (mm)	1049	947	947	1011	1011
<b>FAN SPEEDS (r/s)</b>					
Factory Setting	16.0	18.7	18.7	16.3	17.7
Range	14.0–18.1	16.3–20.0*†	16.3–20.0†	14.4–18.3	15.8–19.5
Max Allowable Speed (r/s)	20.0	20.0	20.0	20.0	20.0
Change per $1/2$ Turn of Moveable Motor Pulley Flange	0.410	0.478	0.478	0.323	0.307
MAX FULL TURNS FROM CLOSED POSITION	5	5	5	6	6
SHAFTS CENTER DISTANCE (mm)	265–313	265–313	265–313	265–313**	232–279

\* Values for 3-phase motor shown. For single-phase motor, pulley pitch diameter is 178 mm and resulting fan speed is 14.0–18.3 r/s.

† It is possible to adjust drive so that fan speed exceeds maximum allowable. DO NOT exceed 20 r/s.

\*\* 575-v unit has a center distance of 233–279.

**Table 10A - 524J Standard Fan Performance Data — 0.0-2.4 in. wg External Static Pressure — English**

UNIT	AIRFLOW (Cfm)	EXTERNAL STATIC PRESSURE (in. wg)													
		0.0		0.2		0.4		0.6		0.8		1.0		1.2	
		Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp
524J*07A 524J*07H	1,800	399	0.19	454	0.24	548	0.35	634	0.47	713	0.60	785	0.74	850	0.89
	2,100	446	0.28	497	0.34	583	0.46	660	0.59	733	0.73	802	0.88	867	1.05
	2,400	498	0.40	541	0.47	622	0.60	693	0.74	760	0.89	824	1.05	885	1.22
	2,700	544	0.55	588	0.63	663	0.78	730	0.93	792	1.09	851	1.26	909	1.44
	3,000	594	0.73	635	0.82	707	0.99	770	1.15	828	1.32	883	1.50	937	1.69
524J*08A 524J*08H	2,250	273	0.08	493	0.37	580	0.49	656	0.62	727	0.76	794	0.92	858	1.08
	2,600	322	0.15	540	0.52	622	0.66	693	0.81	757	0.96	819	1.12	878	1.29
	3,000	552	0.65	595	0.73	673	0.91	740	1.07	800	1.24	856	1.41	910	1.60
	3,400	615	0.91	653	1.01	726	1.21	789	1.40	846	1.59	899	1.78	950	1.97
	3,750	671	1.20	706	1.31	773	1.53	834	1.74	889	1.95	940	2.16	988	2.37
524J*12A 524J*12H	3,000	399	0.29	573	0.69	654	0.86	722	1.03	784	1.19	841	1.37	896	1.55
	3,500	604	0.92	641	1.02	714	1.22	780	1.42	838	1.61	892	1.81	942	2.01
	4,000	680	1.33	713	1.45	778	1.68	839	1.91	896	2.14	947	2.36	995	2.58
	4,500	756	1.86	787	1.99	845	2.26	901	2.52	955	2.78	1005	3.03	1051	3.28
	5,000	834	2.51	861	2.67	914	2.96	966	3.25	1016	3.54	1064	3.82	1109	4.11
524J*14A	3,750	394	0.40	453	0.52	558	0.80	643	1.10	717	1.39	785	1.71	848	2.04
	4,300	436	0.57	487	0.70	586	1.00	670	1.34	742	1.67	806	2.01	867	2.36
	5,000	492	0.86	535	0.99	623	1.31	704	1.69	775	2.08	838	2.47	896	2.86
	5,700	550	1.23	587	1.37	664	1.71	740	2.11	809	2.55	872	2.99	929	3.43
	6,250	596	1.59	630	1.74	700	2.09	770	2.51	837	2.97	899	3.45	955	3.94
524J*16A 524J*16H	4,500	428	0.59	475	0.70	570	0.99	656	1.33	730	1.68	796	2.02	856	2.38
	5,300	488	0.92	528	1.04	609	1.34	689	1.71	762	2.11	827	2.51	886	2.92
	6,000	542	1.29	578	1.43	649	1.74	721	2.11	791	2.55	855	3.00	914	3.46
	6,800	604	1.83	637	1.99	700	2.32	763	2.70	826	3.15	888	3.64	946	4.15
	7,500	660	2.42	690	2.59	747	2.95	804	3.34	861	3.79	919	4.29	975	4.83

See Legend and Notes on page 36.

**524J**

**Table 10A- 524J Standard Fan Performance Data — 0.0-2.4 in. wg External Static Pressure — English (cont)**

UNIT	AIRFLOW (Cfm)	EXTERNAL STATIC PRESSURE (in. wg)											
		1.4		1.6		1.8		2.0		2.2		2.4	
		Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp
524J*07A 524J*07H	1,800	910	1.04	965	1.20	1016	1.36	1065	1.52	1111	1.69	1155	1.86
	2,100	927	1.21	983	1.38	1035	1.56	1084	1.74	1131	1.92	1175	2.11
	2,400	944	1.41	999	1.59	1052	1.78	1101	1.98	1149	2.18	1193	2.38
	2,700	964	1.63	1018	1.82	1069	2.03	1118	2.24	1165	2.45	—	—
	3,000	989	1.89	1039	2.10	1089	2.31	1136	2.53	1183	2.76	—	—
524J*08A 524J*08H	2,250	918	1.26	975	1.43	1029	1.62	1079	1.80	1126	1.99	1172	2.18
	2,600	936	1.48	991	1.67	1044	1.87	1094	2.07	1142	2.28	1188	2.49
	3,000	963	1.79	1014	1.99	1064	2.20	1113	2.42	1159	2.64	—	—
	3,400	998	2.18	1045	2.39	1092	2.61	1137	2.83	1182	3.07	—	—
	3,750	1034	2.58	1078	2.80	1122	3.03	1164	3.27	—	—	—	—
524J*12A 524J*12H	3,000	949	1.74	1000	1.93	1050	2.14	1099	2.36	1147	2.58	1192	2.81
	3,500	990	2.21	1037	2.42	1083	2.64	1128	2.86	1172	3.10	—	—
	4,000	1040	2.80	1084	3.03	1126	3.26	1167	3.50	—	—	—	—
	4,500	1094	3.53	1136	3.78	1176	4.03	—	—	—	—	—	—
	5,000	1151	4.39	1191	4.66	—	—	—	—	—	—	—	—
524J*14A	3,750	909	2.37	968	2.74	1026	3.12	1080	3.51	1131	3.92	1181	4.32
	4,300	925	2.73	980	3.11	1034	3.52	1084	3.92	1135	4.35	1184	4.78
	5,000	950	3.26	1002	3.67	1052	4.09	1101	4.53	1148	4.98	1190	5.44
	5,700	981	3.88	1031	4.33	1079	4.79	1125	5.25	1169	5.73	—	—
	6,250	1007	4.42	1057	4.91	1103	5.40	1148	5.90	1191	6.40	—	—
524J*16A 524J*16H	4,500	912	2.75	967	3.13	1019	3.52	1070	3.92	1120	4.35	1168	4.79
	5,300	940	3.33	992	3.75	1041	4.18	1088	4.61	1134	5.06	1179	5.52
	6,000	968	3.92	1018	4.38	1066	4.85	1112	5.32	1156	5.80	1198	6.29
	6,800	1000	4.67	1050	5.19	1097	5.71	1142	6.23	1185	6.76	—	—
	7,500	1028	5.39	1078	5.97	1125	6.54	1170	7.11	—	—	—	—

See Legend and Notes on page 36.

**Table 10B - 524J Standard Fan Performance Data — 0-600 kPa External Static Pressure — SI**

UNIT	AIRFLOW (L/s)	EXTERNAL STATIC PRESSURE (kPa)													
		0		50		100		150		200		250		300	
		r/s	kW	r/s	kW	r/s	kW	r/s	kW	r/s	kW	r/s	kW	r/s	kW
524J*07A 524J*07H	850	6.64	0.14	7.56	0.18	9.13	0.26	10.56	0.35	11.88	0.45	13.08	0.55	14.16	0.66
	990	7.73	0.21	8.28	0.25	9.71	0.34	11.00	0.44	12.22	0.54	13.37	0.66	14.44	0.78
	1130	8.30	0.30	9.02	0.35	10.36	0.45	11.55	0.55	12.67	0.66	13.73	0.78	14.76	0.91
	1270	9.06	0.41	9.79	0.47	11.06	0.58	12.17	0.69	13.20	0.81	14.19	0.94	15.14	1.07
	1420	9.91	0.55	10.58	0.61	11.78	0.74	12.83	0.86	13.80	0.99	14.72	1.12	15.61	1.26
524J*08A 524J*08H	1060	4.55	0.06	8.21	0.27	9.67	0.37	10.93	0.46	12.11	0.57	13.23	0.68	14.30	0.81
	1230	5.37	0.11	8.99	0.38	10.37	0.49	11.55	0.60	12.62	0.71	13.65	0.84	14.64	0.96
	1420	9.21	0.48	9.92	0.55	11.22	0.67	12.33	0.80	13.33	0.92	14.27	1.05	15.17	1.19
	1600	10.25	0.68	10.89	0.75	12.09	0.90	13.15	1.04	14.10	1.18	14.99	1.33	15.83	1.47
	1770	11.18	0.90	11.76	0.98	12.88	1.14	13.90	1.30	14.82	1.45	15.67	1.61	16.46	1.77
524J*12A 524J*12H	1420	6.65	0.22	9.55	0.51	10.89	0.64	12.04	0.77	13.06	0.89	14.02	1.02	14.93	1.15
	1650	10.06	0.68	10.69	0.76	11.90	0.91	13.00	1.06	13.97	1.20	14.86	1.35	15.70	1.50
	1890	11.33	0.99	11.88	1.08	12.96	1.25	13.99	1.43	14.93	1.59	15.78	1.76	16.58	1.92
	2120	12.61	1.38	13.11	1.49	14.08	1.68	15.02	1.88	15.92	2.07	16.74	2.26	17.51	2.44
	2360	13.90	1.87	14.36	1.99	15.23	2.21	16.10	2.42	16.94	2.64	17.73	2.85	18.48	3.06
524J*14A	1770	6.57	0.30	7.54	0.39	9.31	0.60	10.72	0.82	11.95	1.04	13.09	1.27	14.13	1.52
	2030	7.27	0.43	8.11	0.52	9.76	0.75	11.16	1.00	12.36	1.25	13.44	1.50	14.45	1.76
	2360	8.20	0.64	8.92	0.74	10.38	0.98	11.73	1.26	12.91	1.55	13.97	1.84	14.93	2.13
	2690	9.16	0.92	9.79	1.02	11.07	1.27	12.33	1.58	13.48	1.90	14.53	2.23	15.48	2.56
	2950	9.93	1.18	10.50	1.30	11.66	1.56	12.83	1.87	13.95	2.22	14.98	2.58	15.92	2.94
524J*16A 524J*16H	2120	7.13	0.44	7.91	0.52	9.50	0.74	10.94	0.99	12.17	1.25	13.26	1.51	14.26	1.77
	2500	8.13	0.68	8.80	0.78	10.15	1.00	11.48	1.27	12.70	1.57	13.78	1.87	14.76	2.18
	2830	9.03	0.96	9.63	1.07	10.81	1.30	12.01	1.58	13.18	1.90	14.25	2.24	15.23	2.58
	3210	10.07	1.37	10.62	1.48	11.66	1.73	12.71	2.01	13.77	2.35	14.80	2.71	15.76	3.09
	3540	10.99	1.81	11.50	1.93	12.45	2.20	13.40	2.49	14.35	2.83	15.31	3.20	16.24	3.60

See Legend and Notes on page 36.

**Table 10B - 524J Standard Fan Performance Data — 0-600 kPa External Static Pressure — SI (cont)**

UNIT	AIRFLOW (L/s)	EXTERNAL STATIC PRESSURE (kPa)											
		350		400		450		500		550		600	
		r/s	kW	r/s	kW	r/s	kW	r/s	kW	r/s	kW	r/s	kW
524J*07A 524J*07H	850	15.16	0.78	16.08	0.89	16.94	1.01	17.74	1.13	18.51	1.26	19.25	1.39
	990	15.44	0.90	16.38	1.03	17.25	1.16	18.07	1.30	18.84	1.43	19.58	1.57
	1130	15.73	1.05	16.65	1.19	17.53	1.33	18.36	1.48	19.14	1.62	19.89	1.77
	1270	16.07	1.21	16.96	1.36	17.82	1.51	18.64	1.67	19.42	1.83	—	—
	1420	16.48	1.41	17.32	1.56	18.14	1.72	18.94	1.89	19.71	2.06	—	—
524J*08A 524J*08H	1060	15.31	0.94	16.25	1.07	17.14	1.20	17.98	1.34	18.77	1.48	19.53	1.63
	1230	15.60	1.10	16.51	1.24	17.39	1.39	18.23	1.54	19.03	1.70	19.80	1.86
	1420	16.05	1.33	16.90	1.48	17.74	1.64	18.54	1.80	19.32	1.97	—	—
	1600	16.64	1.62	17.42	1.78	18.20	1.94	18.95	2.11	19.69	2.29	—	—
	1770	17.23	1.93	17.97	2.09	18.70	2.26	19.41	2.44	—	—	—	—
524J*12A 524J*12H	1420	15.81	1.29	16.67	1.44	17.51	1.60	18.32	1.76	19.11	1.92	19.87	2.09
	1650	16.51	1.65	17.29	1.80	18.05	1.97	18.80	2.13	19.53	2.31	—	—
	1890	17.34	2.09	18.06	2.26	18.77	2.43	19.45	2.61	—	—	—	—
	2120	18.24	2.63	18.93	2.82	19.59	3.00	—	—	—	—	—	—
	2360	19.18	3.27	19.85	3.48	—	—	—	—	—	—	—	—
524J*14A	1770	15.15	1.77	16.13	2.04	17.10	2.33	18.00	2.62	18.85	2.92	19.68	3.22
	2030	15.41	2.04	16.34	2.32	17.24	2.62	18.07	2.92	18.92	3.24	19.73	3.56
	2360	15.84	2.43	16.70	2.74	17.54	3.05	18.35	3.38	19.14	3.71	19.83	4.06
	2690	16.36	2.89	17.19	3.23	17.98	3.57	18.75	3.92	19.49	4.27	—	—
	2950	16.79	3.30	17.61	3.66	18.39	4.03	19.13	4.40	19.84	4.77	—	—
524J*16A 524J*16H	2120	15.20	2.05	16.12	2.33	16.98	2.62	17.83	2.92	18.67	3.24	19.47	3.57
	2500	15.67	2.49	16.53	2.80	17.35	3.12	18.13	3.44	18.90	3.77	19.65	4.12
	2830	16.13	2.92	16.97	3.27	17.77	3.62	18.53	3.97	19.26	4.33	19.97	4.69
	3210	16.66	3.48	17.50	3.87	18.29	4.26	19.03	4.65	19.75	5.04	—	—
	3540	17.13	4.02	17.97	4.45	18.75	4.88	19.50	5.30	—	—	—	—

See Legend and Notes on page 36.

**Table 10C - 524J High-Capacity Fan Performance Data — 0.0-2.4 in. wg External Static Pressure — English**

UNIT	AIRFLOW (Cfm)	EXTERNAL STATIC PRESSURE (in. wg)													
		0.0		0.2		0.4		0.6		0.8		1.0		1.2	
		Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp
524J*07A 524J*07H	1,800	419	0.21	471	0.26	564	0.37	649	0.49	727	0.63	797	0.77	862	0.92
	2,100	471	0.31	519	0.37	602	0.49	679	0.62	751	0.77	819	0.92	882	1.09
	2,400	524	0.44	568	0.51	645	0.64	715	0.79	781	0.94	844	1.11	905	1.28
	2,700	578	0.61	619	0.69	690	0.84	755	0.99	816	1.15	875	1.33	932	1.51
	3,000	633	0.81	671	0.90	738	1.07	799	1.24	856	1.41	910	1.60	963	1.79
524J*08A 524J*08H	2,250	290	0.10	510	0.39	594	0.51	669	0.65	739	0.79	806	0.95	870	1.12
	2,600	349	0.19	561	0.55	640	0.70	709	0.84	773	1.00	834	1.16	893	1.34
	3,000	579	0.70	621	0.79	695	0.96	759	1.12	818	1.30	874	1.47	928	1.66
	3,400	646	0.99	683	1.09	752	1.29	813	1.48	869	1.67	920	1.86	970	2.06
	3,750	705	1.31	739	1.42	804	1.63	862	1.85	915	2.05	964	2.26	1011	2.48
524J*12A 524J*12H	3,000	421	0.35	592	0.73	670	0.90	737	1.06	797	1.23	854	1.41	908	1.59
	3,500	626	0.98	664	1.08	735	1.28	798	1.48	855	1.67	908	1.87	958	2.07
	4,000	706	1.42	738	1.54	803	1.77	862	2.00	917	2.23	967	2.45	1014	2.67
	4,500	786	1.99	815	2.12	873	2.39	929	2.65	980	2.90	1028	3.16	1073	3.41
	5,000	867	2.70	893	2.84	946	3.14	997	3.43	1046	3.72	1092	4.00	1135	4.28
524J*14A	3,750	410	0.43	467	0.55	567	0.83	649	1.12	721	1.41	788	1.72	851	2.05
	4,300	455	0.62	504	0.74	599	1.05	679	1.38	748	1.70	811	2.04	871	2.39
	5,000	514	0.92	556	1.06	641	1.39	718	1.76	786	2.14	847	2.52	903	2.91
	5,700	575	1.32	612	1.47	686	1.82	759	2.23	825	2.66	884	3.09	939	3.52
	6,250	624	1.71	657	1.87	725	2.24	793	2.66	856	3.12	915	3.59	969	4.06
524J*16A 524J*16H	4,500	437	0.61	483	0.72	576	1.01	660	1.35	732	1.69	797	2.03	856	2.38
	5,300	499	0.95	538	1.07	617	1.37	696	1.74	767	2.13	830	2.53	888	2.94
	6,000	555	1.34	590	1.48	659	1.79	730	2.17	798	2.59	860	3.04	918	3.49
	6,800	620	1.91	651	2.06	712	2.39	774	2.78	836	3.22	896	3.71	952	4.21
	7,500	677	2.52	706	2.69	761	3.04	817	3.44	873	3.89	929	4.39	984	4.93

See Legend and Notes on page 36.

**524J**

**Table 10C - 524J High-Capacity Fan Performance Data — 0.0-2.4 in. wg External Static Pressure — English (cont)**

UNIT	AIRFLOW (Cfm)	EXTERNAL STATIC PRESSURE (in. wg)											
		1.4		1.6		1.8		2.0		2.2		2.4	
		Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp	Rpm	Bhp
524J*07A 524J*07H	1,800	921	1.07	975	1.23	1026	1.39	1074	1.55	1120	1.72	1164	1.90
	2,100	942	1.26	997	1.43	1048	1.61	1097	1.79	1143	1.97	1186	2.16
	2,400	963	1.47	1017	1.66	1069	1.85	1118	2.05	1164	2.25	—	—
	2,700	987	1.71	1039	1.91	1090	2.12	1138	2.33	1185	2.55	—	—
	3,000	1015	1.99	1065	2.20	1113	2.42	1161	2.65	—	—	—	—
524J*08A 524J*08H	2,250	930	1.29	986	1.47	1039	1.65	1089	1.84	1136	2.03	1181	2.22
	2,600	950	1.53	1005	1.72	1057	1.92	1107	2.13	1154	2.33	—	—
	3,000	980	1.86	1031	2.06	1081	2.27	1129	2.49	1175	2.72	—	—
	3,400	1018	2.26	1065	2.48	1111	2.70	1156	2.93	—	—	—	—
	3,750	1057	2.69	1101	2.92	1144	3.15	1186	3.39	—	—	—	—
524J*12A 524J*12H	3,000	961	1.78	1012	1.98	1062	2.19	1111	2.41	1158	2.64	—	—
	3,500	1005	2.27	1052	2.49	1098	2.71	1142	2.94	1186	3.18	—	—
	4,000	1058	2.90	1101	3.13	1143	3.36	1184	3.60	—	—	—	—
	4,500	1116	3.66	1157	3.91	1196	4.16	—	—	—	—	—	—
	5,000	1176	4.56	—	—	—	—	—	—	—	—	—	—
524J*14A	3,750	912	2.39	971	2.76	1028	3.14	1083	3.54	1135	3.95	1185	4.36
	4,300	928	2.75	982	3.13	1036	3.53	1087	3.94	1138	4.37	1187	4.81
	5,000	956	3.30	1007	3.71	1056	4.13	1104	4.56	1151	5.00	1196	5.46
	5,700	990	3.96	1039	4.40	1086	4.85	1130	5.31	1174	5.78	—	—
	6,250	1019	4.54	1067	5.02	1112	5.50	1156	5.99	1198	6.49	—	—
524J*16A 524J*16H	4,500	912	2.75	967	3.12	1019	3.52	1070	3.92	1120	4.35	1168	4.79
	5,300	942	3.34	992	3.76	1041	4.18	1088	4.61	1134	5.06	1179	5.52
	6,000	971	3.95	1020	4.40	1067	4.86	1112	5.33	1156	5.81	1198	6.29
	6,800	1005	4.72	1054	5.23	1101	5.75	1145	6.27	1187	6.79	—	—
	7,500	1036	5.48	1084	6.04	1131	6.61	1174	7.17	—	—	—	—

See Legend and Notes on page 36.

Table 10D - 524J High-Capacity Fan Performance Data — 0-600 kPa External Static Pressure — SI

UNIT	AIRFLOW (L/s)	EXTERNAL STATIC PRESSURE (kPa)													
		0		50		100		150		200		250		300	
		r/s	kW	r/s	kW	r/s	kW	r/s	kW	r/s	kW	r/s	kW	r/s	kW
524J*07A 524J*07H	850	6.98	0.16	7.86	0.19	9.40	0.27	10.81	0.37	12.11	0.47	13.29	0.57	14.36	0.69
	990	7.84	0.23	8.64	0.27	10.03	0.36	11.31	0.46	12.52	0.57	13.65	0.69	14.71	0.81
	1130	8.73	0.33	9.46	0.38	10.75	0.48	11.91	0.59	13.01	0.70	14.07	0.83	15.08	0.96
	1270	9.63	0.45	10.31	0.51	11.51	0.62	12.58	0.74	13.60	0.86	14.58	0.99	15.53	1.13
	1420	10.55	0.61	11.18	0.67	12.30	0.80	13.31	0.92	14.26	1.05	15.17	1.19	16.05	1.33
524J*08A 524J*08H	1060	4.83	0.07	8.50	0.29	9.91	0.38	11.15	0.48	12.32	0.59	13.44	0.71	14.50	0.83
	1230	5.81	0.14	9.35	0.41	10.67	0.52	11.81	0.63	12.88	0.74	13.90	0.87	14.89	1.00
	1420	9.65	0.52	10.35	0.59	11.59	0.71	12.66	0.84	13.64	0.97	14.57	1.10	15.47	1.24
	1600	10.76	0.74	11.39	0.81	12.54	0.96	13.55	1.10	14.48	1.24	15.34	1.39	16.17	1.53
	1770	11.74	0.97	12.32	1.06	13.40	1.22	14.37	1.38	15.25	1.53	16.07	1.69	16.86	1.85
524J*12A 524J*12H	1420	7.02	0.26	9.86	0.54	11.17	0.67	12.28	0.79	13.29	0.92	14.23	1.05	15.14	1.19
	1650	10.44	0.73	11.06	0.80	12.25	0.96	13.31	1.10	14.25	1.25	15.13	1.39	15.96	1.54
	1890	11.76	1.06	12.31	1.15	13.38	1.32	14.37	1.49	15.28	1.66	16.11	1.83	16.89	1.99
	2120	13.10	1.48	13.59	1.58	14.55	1.78	15.48	1.97	16.34	2.17	17.14	2.35	17.89	2.54
	2360	14.45	2.01	14.89	2.12	15.76	2.34	16.62	2.56	17.43	2.77	18.20	2.98	18.92	3.19
524J*14A	1770	6.84	0.32	7.78	0.41	9.46	0.62	10.82	0.83	12.02	1.05	13.13	1.28	14.19	1.53
	2030	7.58	0.46	8.40	0.55	9.98	0.78	11.31	1.03	12.47	1.27	13.52	1.52	14.51	1.78
	2360	8.57	0.69	9.27	0.79	10.68	1.04	11.96	1.31	13.09	1.60	14.11	1.88	15.05	2.17
	2690	9.59	0.99	10.20	1.10	11.44	1.36	12.64	1.66	13.74	1.98	14.74	2.30	15.65	2.63
	2950	10.40	1.28	10.96	1.39	12.09	1.67	13.21	1.98	14.27	2.33	15.25	2.68	16.15	3.03
524J*16A 524J*16H	2120	7.28	0.45	8.05	0.54	9.60	0.75	11.00	1.00	12.21	1.26	13.28	1.51	14.27	1.78
	2500	8.32	0.71	8.97	0.80	10.29	1.02	11.59	1.30	12.78	1.59	13.84	1.89	14.80	2.19
	2830	9.25	1.00	9.83	1.10	10.99	1.33	12.16	1.62	13.29	1.93	14.34	2.27	15.30	2.60
	3210	10.33	1.42	10.85	1.54	11.87	1.78	12.90	2.07	13.93	2.40	14.93	2.76	15.87	3.14
	3540	11.29	1.88	11.77	2.01	12.69	2.27	13.62	2.56	14.56	2.90	15.49	3.27	16.40	3.67

See Legend and Notes on page 36.

Table 10D - 524J High-Capacity Fan Performance Data — 0-600 kPa External Static Pressure — SI (cont)

UNIT	AIRFLOW (L/s)	EXTERNAL STATIC PRESSURE (kPa)											
		350		400		450		500		550		600	
		r/s	kW	r/s	kW	r/s	kW	r/s	kW	r/s	kW	r/s	kW
524J*07A 524J*07H	850	15.34	0.80	16.25	0.92	17.10	1.03	17.90	1.16	18.66	1.28	19.39	1.41
	850	15.69	0.94	16.61	1.07	17.47	1.20	18.28	1.33	19.04	1.47	19.77	1.61
	1130	16.04	1.09	16.95	1.23	17.81	1.38	18.63	1.53	19.40	1.67	—	—
	1270	16.44	1.27	17.32	1.42	18.17	1.58	18.97	1.74	19.75	1.90	—	—
	1420	16.91	1.49	17.75	1.64	18.56	1.81	19.34	1.97	—	—	—	—
524J*08A 524J*08H	1060	15.50	0.96	16.43	1.10	17.31	1.23	18.14	1.37	18.93	1.51	19.68	1.66
	1230	15.84	1.14	16.75	1.28	17.62	1.43	18.45	1.58	19.24	1.74	—	—
	1420	16.34	1.38	17.19	1.54	18.01	1.70	18.81	1.86	19.59	2.03	—	—
	1600	16.97	1.69	17.76	1.85	18.52	2.02	19.27	2.19	—	—	—	—
	1770	17.61	2.01	18.35	2.18	19.07	2.35	19.77	2.53	—	—	—	—
524J*12A 524J*12H	1420	16.02	1.33	16.87	1.48	17.71	1.64	18.52	1.80	19.30	1.97	—	—
	1650	16.76	1.70	17.53	1.85	18.29	2.02	19.04	2.19	19.77	2.37	—	—
	1890	17.64	2.16	18.35	2.33	19.05	2.51	19.74	2.69	—	—	—	—
	2120	18.60	2.73	19.28	2.91	19.93	3.10	—	—	—	—	—	—
	2360	19.61	3.40	—	—	—	—	—	—	—	—	—	—
524J*14A	1770	15.21	1.78	16.19	2.06	17.13	2.34	18.04	2.64	18.91	2.94	19.75	3.25
	2030	15.46	2.05	16.37	2.33	17.26	2.63	18.12	2.94	18.96	3.26	19.78	3.59
	2360	15.94	2.46	16.78	2.77	17.60	3.08	18.40	3.40	19.18	3.73	19.94	4.07
	2690	16.51	2.95	17.32	3.28	18.09	3.62	18.84	3.96	19.57	4.31	—	—
	2950	16.99	3.39	17.78	3.74	18.54	4.10	19.26	4.47	19.96	4.84	—	—
524J*16A 524J*16H	2120	15.21	2.05	16.11	2.33	16.98	2.62	17.83	2.93	18.66	3.24	19.47	3.57
	2500	15.69	2.49	16.54	2.80	17.35	3.12	18.14	3.44	18.90	3.77	19.64	4.11
	2830	16.18	2.94	17.01	3.28	17.79	3.63	18.54	3.97	19.27	4.33	19.97	4.69
	3210	16.75	3.52	17.57	3.90	18.34	4.29	19.08	4.67	19.78	5.06	—	—
	3540	17.26	4.09	18.07	4.50	18.84	4.93	19.57	5.35	—	—	—	—

See Legend and Notes on page 36.



**Legend and Notes for Tables 10A and 10C**

**LEGEND**

- Bhp** — Brake Horsepower Input to Fan  
**ESP** — External Static Pressure

**NOTES:**

1. Maximum allowable fan speed is 1200 rpm for all sizes.
2. Fan performance is based on deductions for wet coil, clean 2-in. filters, and unit casing. See table at right for factory-supplied filter pressure drop.
3. Refer to fan motor and drive tables for additional data.

**FACTORY-SUPPLIED PRESSURE DROP — ENGLISH**

UNIT	AIRFLOW (Cfm)	PRESSURE DROP (in. wg)
<b>524J*07A</b> <b>524J*07H</b>	<b>850</b>	0.05
	<b>1150</b>	0.08
	<b>1450</b>	0.11
<b>524J*08A</b> <b>524J*08H</b>	<b>2,250</b>	0.07
	<b>3,000</b>	0.11
	<b>3,750</b>	0.15
<b>524J*12A</b> <b>524J*12H</b>	<b>3,000</b>	0.11
	<b>4,000</b>	0.17
	<b>5,000</b>	0.23
<b>524J*14A</b>	<b>3,750</b>	0.06
	<b>5,000</b>	0.10
	<b>6,250</b>	0.13
<b>524J*16A</b> <b>524J*16H</b>	<b>4,500</b>	0.08
	<b>6,000</b>	0.12
	<b>7,500</b>	0.17

**524J**

**Legend and Notes for Tables 10B and 10D**

**LEGEND**

- ESP** — External Static Pressure

**NOTES:**

1. Maximum allowable fan speed is 20 r/s for all sizes.
2. Fan performance is based on deductions for wet coil, clean 51-mm filters, and unit casing. See table at right for factory-supplied filter pressure drop.
3. Refer to fan motor and drive tables for additional data.

**FACTORY-SUPPLIED PRESSURE DROP — SI**

UNIT	AIRFLOW (L/s)	PRESSURE DROP (Pa)
<b>524J*07A</b> <b>524J*07H</b>	<b>850</b>	13
	<b>1150</b>	20
	<b>1450</b>	28
<b>524J*08A</b> <b>524J*08H</b>	<b>1000</b>	17
	<b>1400</b>	27
	<b>1800</b>	38
<b>524J*12A</b> <b>524J*12H</b>	<b>1450</b>	28
	<b>1900</b>	42
	<b>2350</b>	56
<b>524J*14A</b>	<b>1750</b>	15
	<b>2350</b>	24
	<b>2950</b>	33
<b>524J*16A</b> <b>524J*16H</b>	<b>2100</b>	20
	<b>2800</b>	30
	<b>3500</b>	42



# START-UP CHECKLIST

(SPLIT SYSTEMS WITH 524J UNITS)

## I. PRELIMINARY INFORMATION

OUTDOOR: MODEL NO. \_\_\_\_\_ INDOOR: MODEL NO. \_\_\_\_\_  
SERIAL NO. \_\_\_\_\_ SERIAL NO. \_\_\_\_\_  
ADDITIONAL ACCESSORIES \_\_\_\_\_

## II. PRE-START-UP

### OUTDOOR UNIT

IS THERE ANY SHIPPING DAMAGE? (Y/N) \_\_\_\_\_  
IF SO, WHERE: \_\_\_\_\_

WILL THIS DAMAGE PREVENT UNIT START-UP? (Y/N) \_\_\_\_\_  
CHECK POWER SUPPLY. DOES IT AGREE WITH UNIT? (Y/N) \_\_\_\_\_  
HAS THE GROUND WIRE BEEN CONNECTED? (Y/N) \_\_\_\_\_  
HAS THE CIRCUIT PROTECTION BEEN SIZED AND INSTALLED PROPERLY? (Y/N) \_\_\_\_\_  
ARE THE POWER WIRES TO THE UNIT SIZED AND INSTALLED PROPERLY? (Y/N) \_\_\_\_\_  
HAVE COMPRESSOR HOLDDOWN BOLTS BEEN LOOSENED? (Y/N) \_\_\_\_\_

### CONTROLS

ARE THERMOSTAT(S) & INDOOR FAN CONTROL WIRING CONNECTIONS MADE & CHECKED? (Y/N) \_\_\_\_\_  
ARE ALL WIRING TERMINALS (including main power supply) TIGHT? (Y/N) \_\_\_\_\_  
HAVE OUTDOOR UNIT CRANKCASE HEATERS BEEN ENERGIZED FOR 24 HOURS? (Y/N) \_\_\_\_\_

### INDOOR UNIT

HAS WATER BEEN PLACED IN DRAIN PAN TO CONFIRM PROPER DRAINAGE? (Y/N) \_\_\_\_\_  
ARE PROPER AIR FILTERS IN PLACE? (Y/N) \_\_\_\_\_  
HAVE FAN AND MOTOR PULLEYS BEEN CHECKED FOR PROPER ALIGNMENT? (Y/N) \_\_\_\_\_  
DO THE FAN BELTS HAVE PROPER TENSION? (Y/N) \_\_\_\_\_

### PIPING

HAS FOAM SHIPPING BLOCK BEEN REMOVED FROM THE TXV (Thermostatic Expansion Valve)? (Y/N) \_\_\_\_\_  
ARE LIQUID LINE SOLENOID VALVES LOCATED AT THE INDOOR UNIT (524J\*\*\*A) OR OUTDOOR UNIT (524J\*\*\*H) COILS AS REQUIRED? (Y/N) \_\_\_\_\_  
HAVE LEAK CHECKS BEEN MADE AT COMPRESSORS, CONDENSERS, INDOOR COILS, TXVs (Thermostatic Expansion Valves) SOLENOID VALVES, FILTER DRIERS, AND FUSIBLE PLUGS WITH A LEAK DETECTOR? (Y/N) \_\_\_\_\_  
LOCATE, REPAIR, AND REPORT ANY LEAKS \_\_\_\_\_  
HAVE ALL COMPRESSOR SERVICE VALVES BEEN FULLY OPENED (BACKSEATED) (Y/N) \_\_\_\_\_  
ARE THE COMPRESSOR OIL SIGHT GLASSES SHOWING CORRECT LEVELS? (Y/N) \_\_\_\_\_

524J

### CHECK VOLTAGE IMBALANCE

LINE-TO-LINE VOLTS: AB \_\_\_\_\_ V AC \_\_\_\_\_ V BC \_\_\_\_\_ V

(AB + AC + BC)/3 = AVERAGE VOLTAGE = \_\_\_\_\_ V

MAXIMUM DEVIATION FROM AVERAGE VOLTAGE = \_\_\_\_\_ V

VOLTAGE IMBALANCE = 100 X (MAX DEVIATION)/(AVERAGE VOLTAGE) = \_\_\_\_\_

IF OVER 2% VOLTAGE IMBALANCE, DO NOT ATTEMPT TO START SYSTEM!  
CALL LOCAL POWER COMPANY FOR ASSISTANCE.

### III. START-UP

CHECK INDOOR FAN MOTOR SPEED AND RECORD.

AFTER AT LEAST 10 MINUTES RUNNING TIME, RECORD THE FOLLOWING MEASUREMENTS:

	COMP A1	COMP B1
OIL PRESSURE	_____	_____
SUCTION PRESSURE	_____	_____
SUCTION LINE TEMP	_____	_____
DISCHARGE PRESSURE	_____	_____
DISCHARGE LINE TEMP	_____	_____
ENTERING OUTDOOR UNIT AIR TEMP	_____	_____
LEAVING OUTDOOR UNIT AIR TEMP	_____	_____
INDOOR UNIT ENTERING AIR DB TEMP	_____	_____
INDOOR UNIT ENTERING AIR WB TEMP	_____	_____
INDOOR UNIT LEAVING AIR DB TEMP	_____	_____
INDOOR UNIT LEAVING AIR WB TEMP	_____	_____
COMPRESSOR AMPS (L1/L2/L3)	___/___/___	___/___/___

CHECK THE COMPRESSOR OIL LEVEL SIGHT GLASSES, ARE THE SIGHT GLASSES SHOWING OIL LEVEL AT 1/8 to 1/3 FULL? (Y/N) \_\_\_\_\_

NOTES:

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

524J