

FAN COILS, and ACCESSORY ELECTRIC HEATERS

WIRING DIAGRAMS

FIG.	FIELD- INSTALLED HEATER MODEL	FB4C/ PF4MNP	FE4A/FE5A	FH4C	FV4C	FX4D	FY5B	FZ4A	PF4MA	PF4MB	LABEL
1	KFCEH0401N03A	18,24	x	001	x	19,25	18,24	24	18,19,24,25	x	340816- 101
1	KFCEH0501N05A	18-60	002-006	001-002	002-006	19-61	18-60	24- 61	18-61	19-61	340816- 101
2	KFCEH0801N08A	18-60	002-006	001-003	002-006	19-61	18-60	24- 61	18-61	19-61	340817- 101
2	KFCEH0901N10A	18-60	002-006	001-004	002-006	19-61	18-60	24- 61	18-61	19-61	340817- 101
6	KFCEH1601315A	42-60	002-006	001-004	002-006	43-61	18-60	48- 61	18-61	19-61	340819- 101
7	KFCEH2001318A	42-60	003-006	001-004	002-006	43-61	42-60	48- 61	42-61	37-61	340818- 101
1	KFCEH2401C05A	18-60	002-006	001-002	002-006	19-61	18-60	24- 61	18-61	19-61	340816- 101
2	KFCEH2501C08A	18-60	002-006	001-003	002-006	19-61	18-60	24- 61	18-61	19-61	340817- 101
2	KFCEH2601C10A	18-60	002-006	001-004	002-006	19-61	18-60	24- 61	18-61	19-61	340817- 101
3	KFCEH2901N09A	36-60	002-006	003-004	002-006	37-61	36-60	36- 61	36-60	31-61	340813- 101
4	KFCEH3001F15A	24-60	002-006	001-004	002-006	25-61	24-60	24- 61	24-61	19-61	340814- 101
4	KFCEH3101C15A	24-60	002-006	001-004	002-006	25-61	24-60	24- 61	24-61	19-61	340814- 101
5	KFCEH3201F20A	30-60	002-006	002-004	002-006	31-61	30-60	36- 61	30-61	19-61	340815- 101
5	KFCEH3301C20A	30-60	002-006	002-004	002-006	31-61	30-60	36- 61	30-61	19-61	340815- 101
8,9	KFCEH3401F24A	48,60	004-006	003-004	005-006	49-61	48-60	48- 61	48-61	49-61	340821- 101, 340820- 101
8,9	KFCEH3501F30A	48,60	004-006	003-004	005-006	49-61	48-60	48- 61	48-61	49-61	340821- 101 340820- 101

FAN COIL WITH RBC X- 13 MOTOR OR BROAD OCEAN DIGI MOTOR

FIG.	FACTORY-INSTALLED HEATER MODEL	FB4C	FX4D	FZ4A	LABEL
11	MKFCEH0501N05A	18,24	19,25	--	341018-101
10	MKFCEH0801N08A	18,30	31	--	341017-101
10	MKFCEH0901N10A	24-48	37-61	--	
12	MKFCEH3001F15A	36-60	61	--	341019-101
30	MKFCEH0801N08A	--	--	36,48	342416-101
	MKFCEH0901N10A	--	--		
31	MKFCEH3001F15A	--	--	60,61	342418-101
32	MKFCEH0501N05A	--	--	24	342417-101

FAN COIL WITH COOLING ONLY CONTROL

FIG.	MODEL	SIZE	LABEL
13	FV4C	002-006	326014-101
14	FE4A/FE5A	002-006	333107-101
15	FY5B/PF4MNA	18-60	328964-101
15	FH4C	001-004	328964-101
16	FB4C/FX4D/PF4MNP (RBC)	18-61	336228-101
16	PF4MNA/B	19,25,31,37,43,49,61	336228-101
17	FB4C/FX4D/PF4MNP (BOM)	18-61	337519-101
33	FZ4A	24-61	342415-101

50 HZ EXPORT FAN COILS

FIG.	MODEL	SIZE	LABEL
34	FB4(C/Q)SL (Regal Beloit motor)	018-060	336228-101
35	FB4(C/Q)SL (Broad Ocean motor)	018-060	337519-101

ELECTRIC HEATERS

FIG.	HEATER MODEL	FF1E	LABEL
18	KFDEH0801D05A	18,24,30,36	341080-101
19	KFDEH0901D75A	18,24,30,36	341081-101
19	KFDEH1001D11A	18,24,30,36	341081-101
20	KFEEH0101D05A	19,25,31,37	341082-101
21	KFEEH0201D75A	19,25,31,37	341083-101
21	KFEEH0301D11A	19,25,31,37	341083-101

FIG.	HEATER MODEL	CONTROL TYPE	FFMA	LABEL
22	EHK2-05B	Sequencer - HS	18,24,30,36 Prior to serial number date code 1715V.	202070290385
22	EHK2-08B	Sequencer - HS	18,24,30,36 Prior to serial number date code 1715V.	202070290385
22	EHK2-10B	Sequencer - HS	18,24,30,36 Prior to serial number date code 1715V.	202070290385
23			18-37 Serial number date code 1715V and later.	2020702A717
24	EHK2-05B	Relay - HR	18-37	06-7094-02
24	EHK2-08B	Relay - HR	18-37	06-7094-02
24	EHK2-10B	Relay - HR	18-37	06-7094-02

FIG.	FFMA	LABEL
25	19,31	--
26	25,37	--

FIG.	FPM(A,B)N(C,U)	LABEL
27	ALL with Time Delay Relay	202070290388 Valid for models FPM(A,B)N(C,U)0**000AAAA
28	ALL with Time Delay Board	2020702A1716 Valid for models FPM(A,B)N(C,U)T00ACAA

FIG.	HEATER MODEL	FPMAN(C,U)	FPMBN(C,U)	LABEL
29	EHK3-05B	18-36	18-30	06-7094-03
29	EHK3-08B	18-36	18-30	06-7094-03
29	EHK3-10B	18-36	18-30	06-7094-03

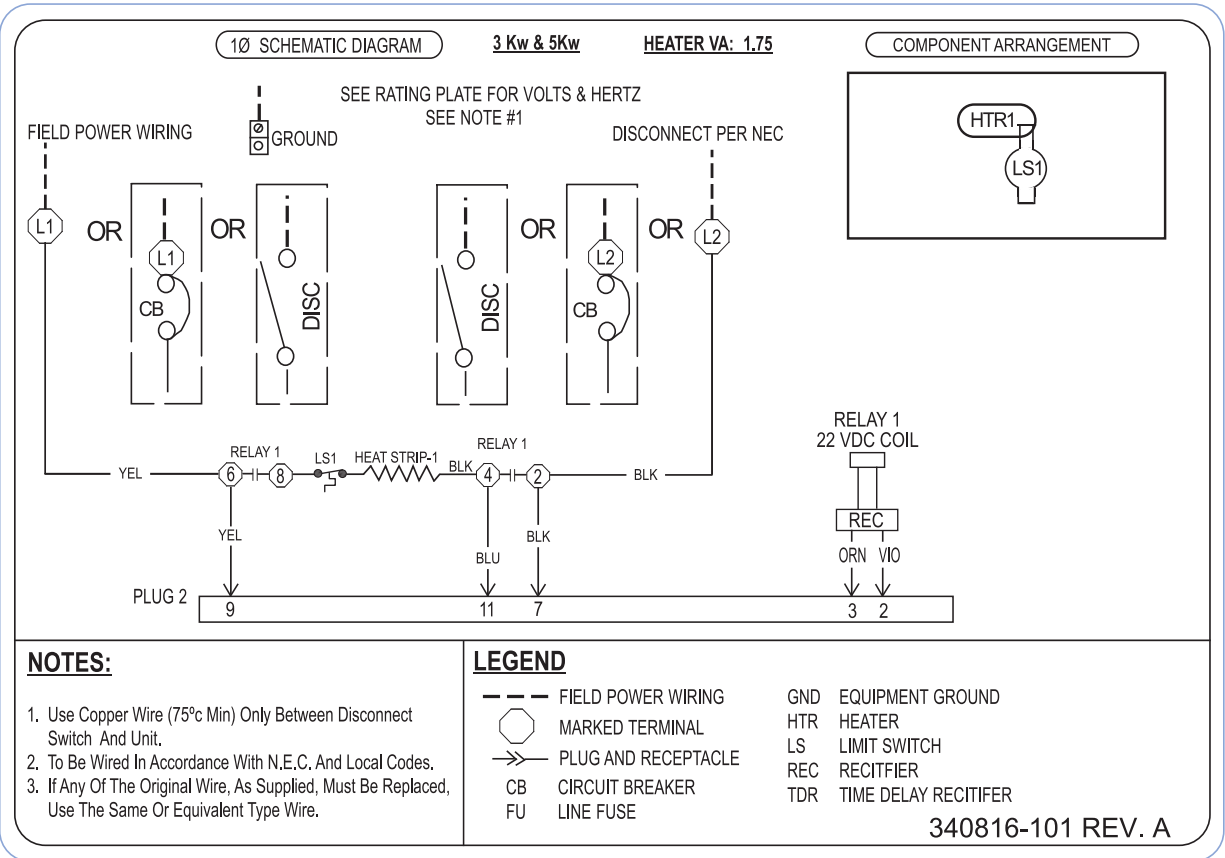


Fig. 1 - 340816-101

A150105


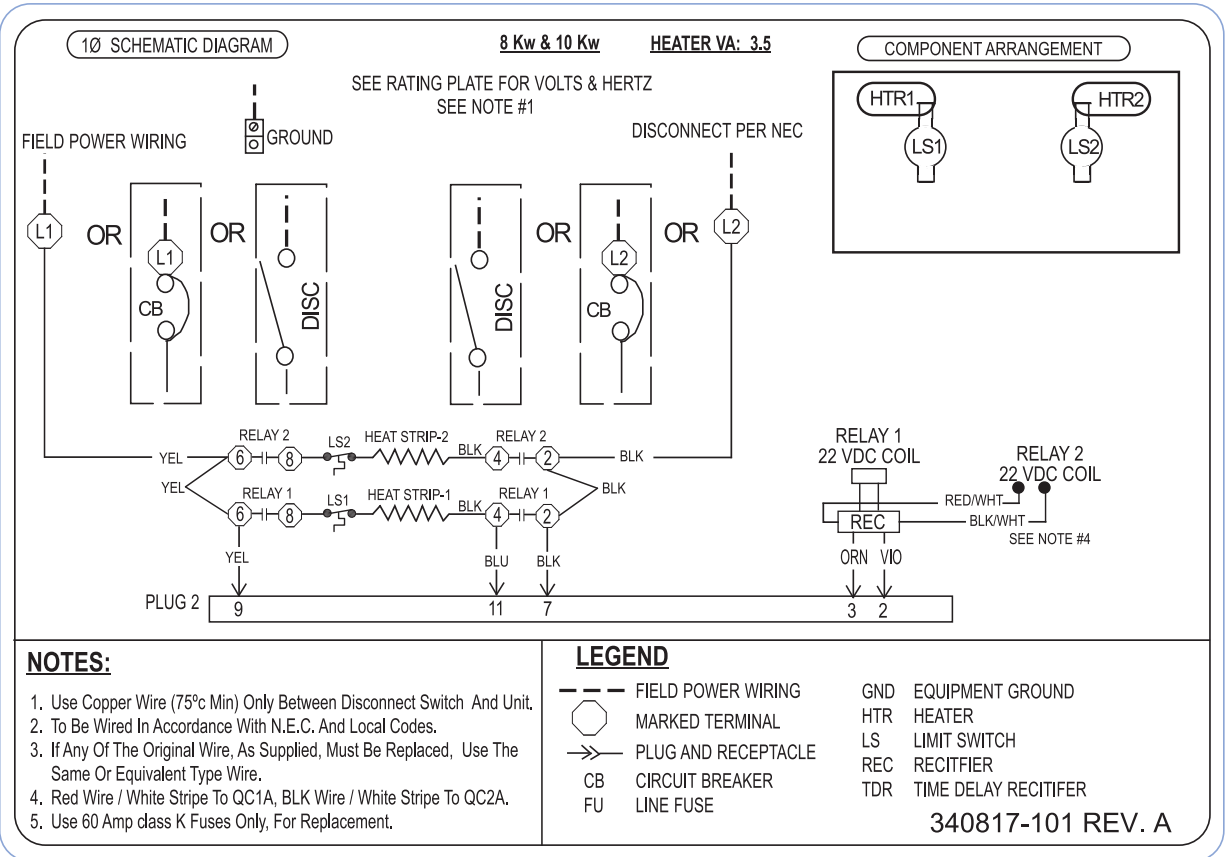



Fig. 2 - 340817-101

A150106

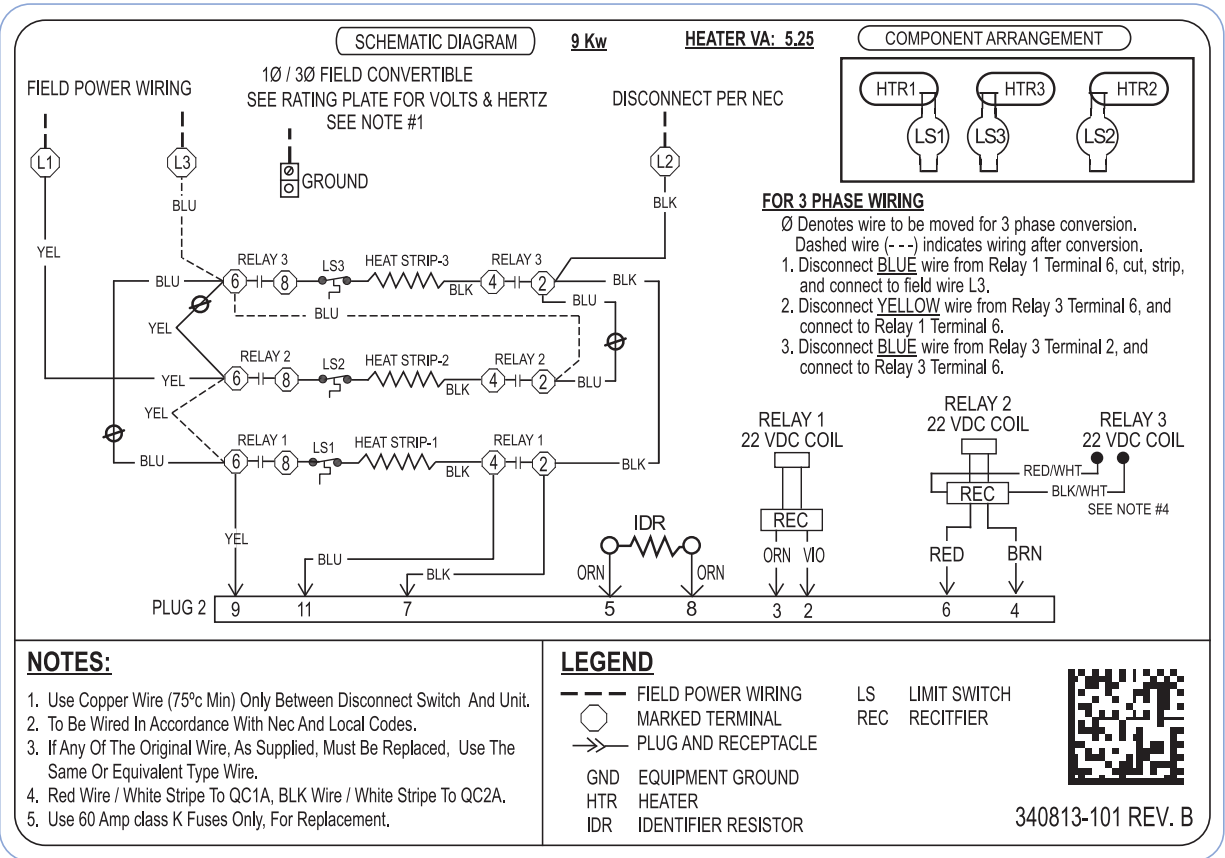

A150102

Fig. 3 - 340813-101

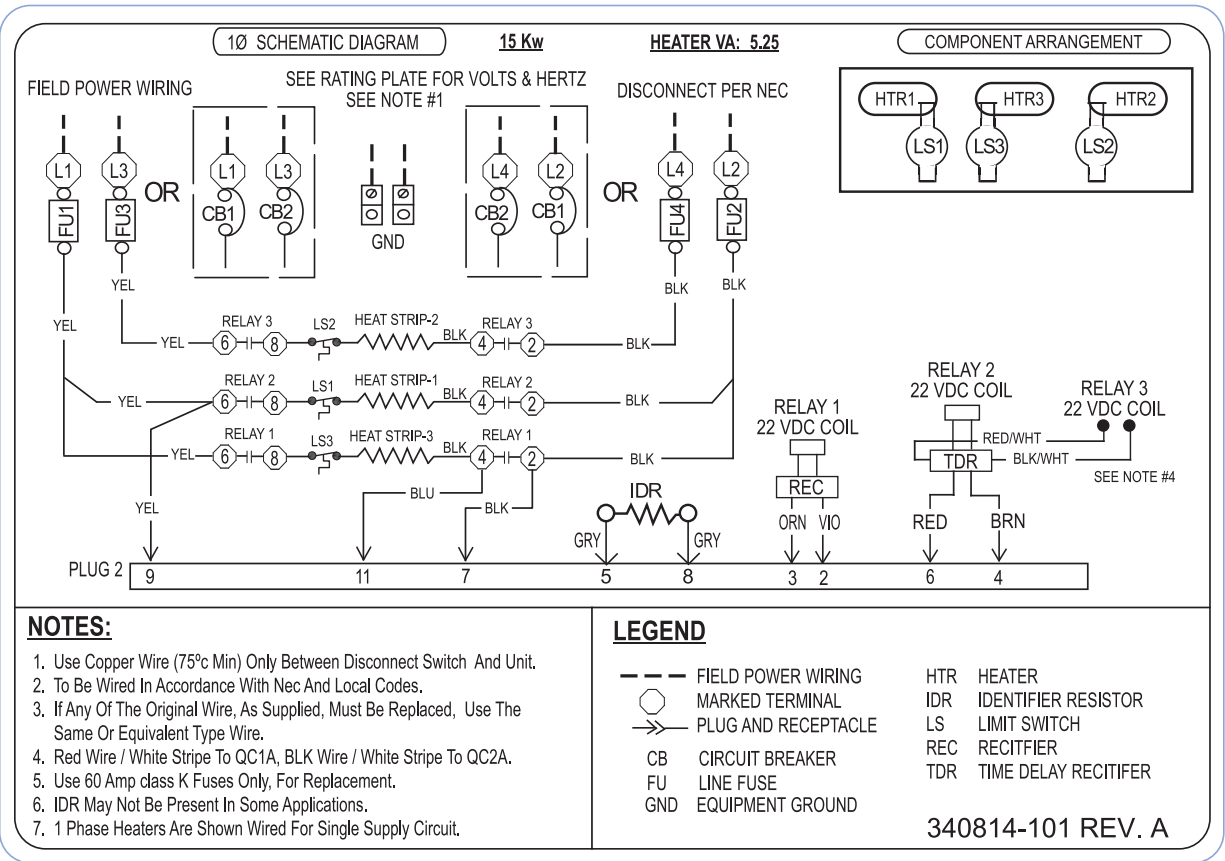

A150103

Fig. 4 - 340814-101

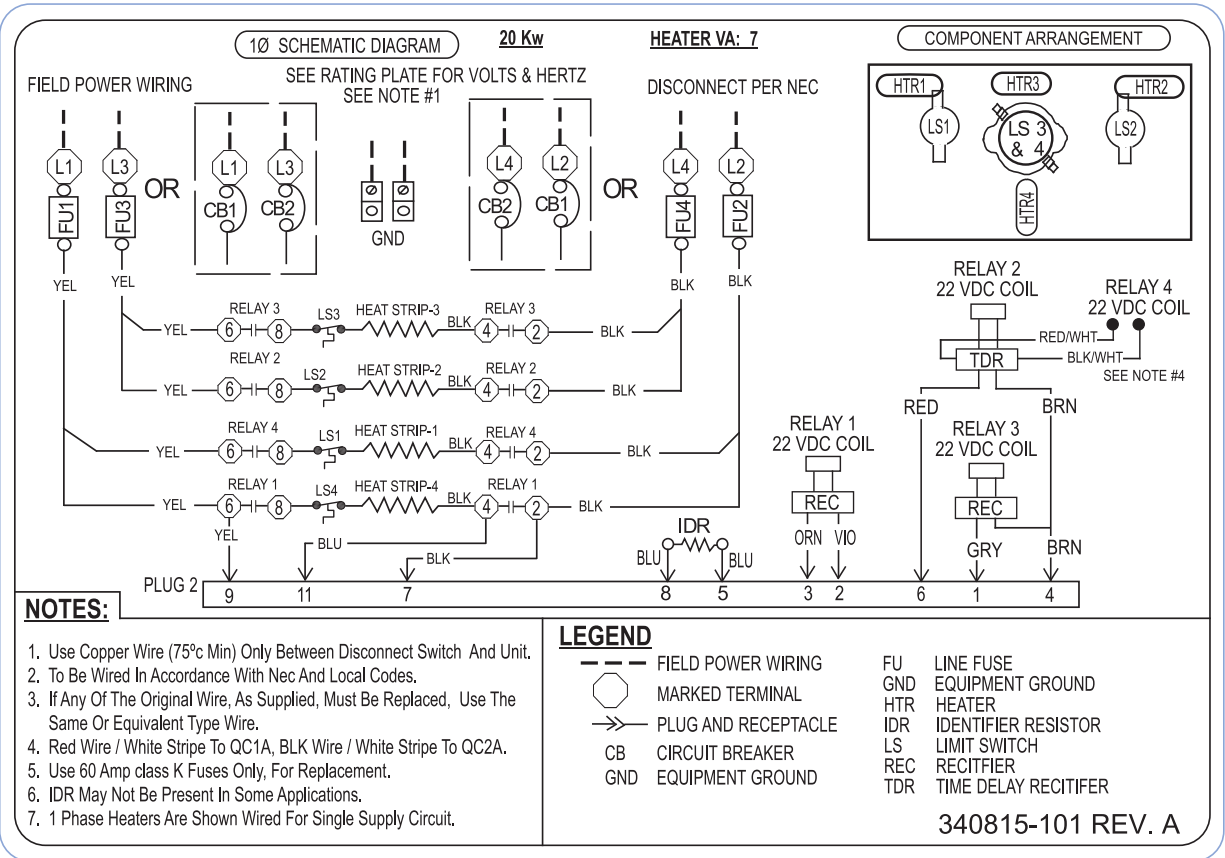


Fig. 5 - 340815-101

A150104

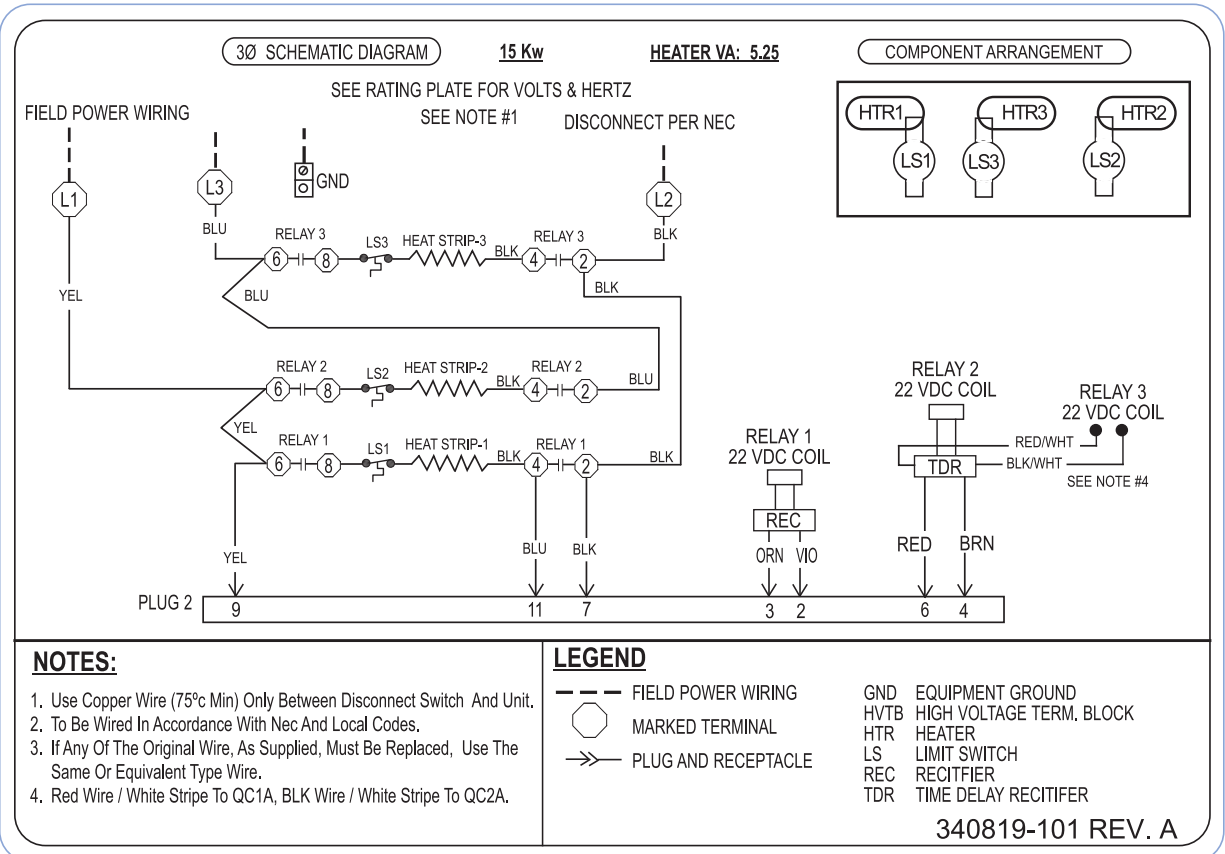


Fig. 6 - 340819-101

A150108

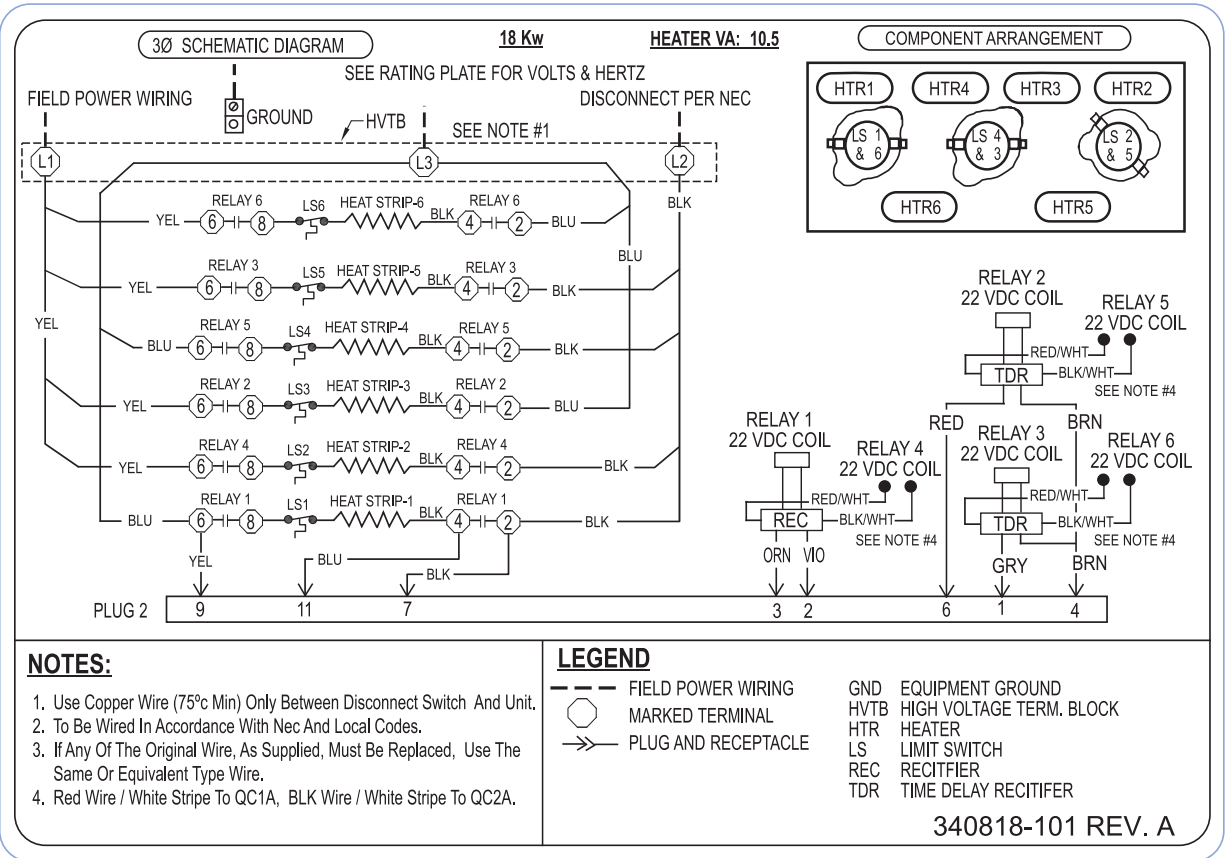


Fig. 7 - 340818-101

A150107

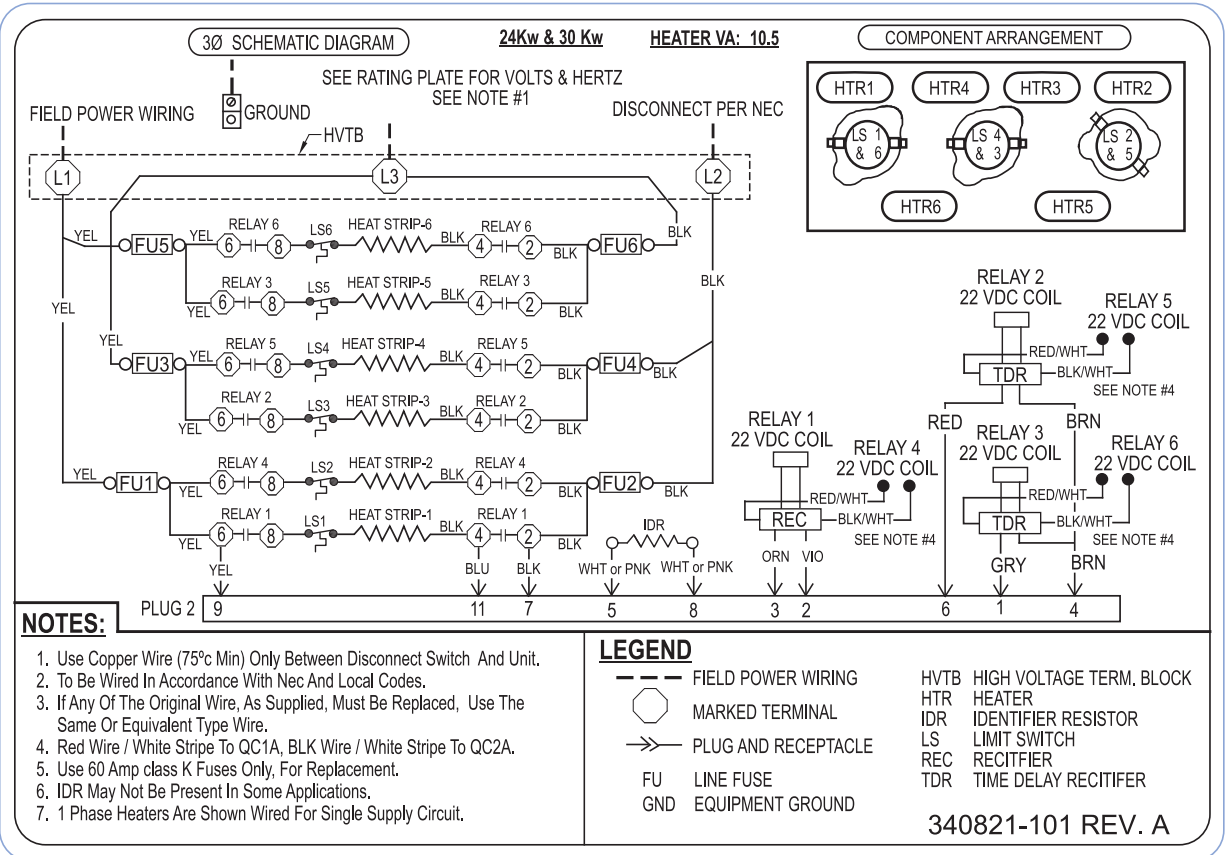


Fig. 8 - 340821-101

A150109

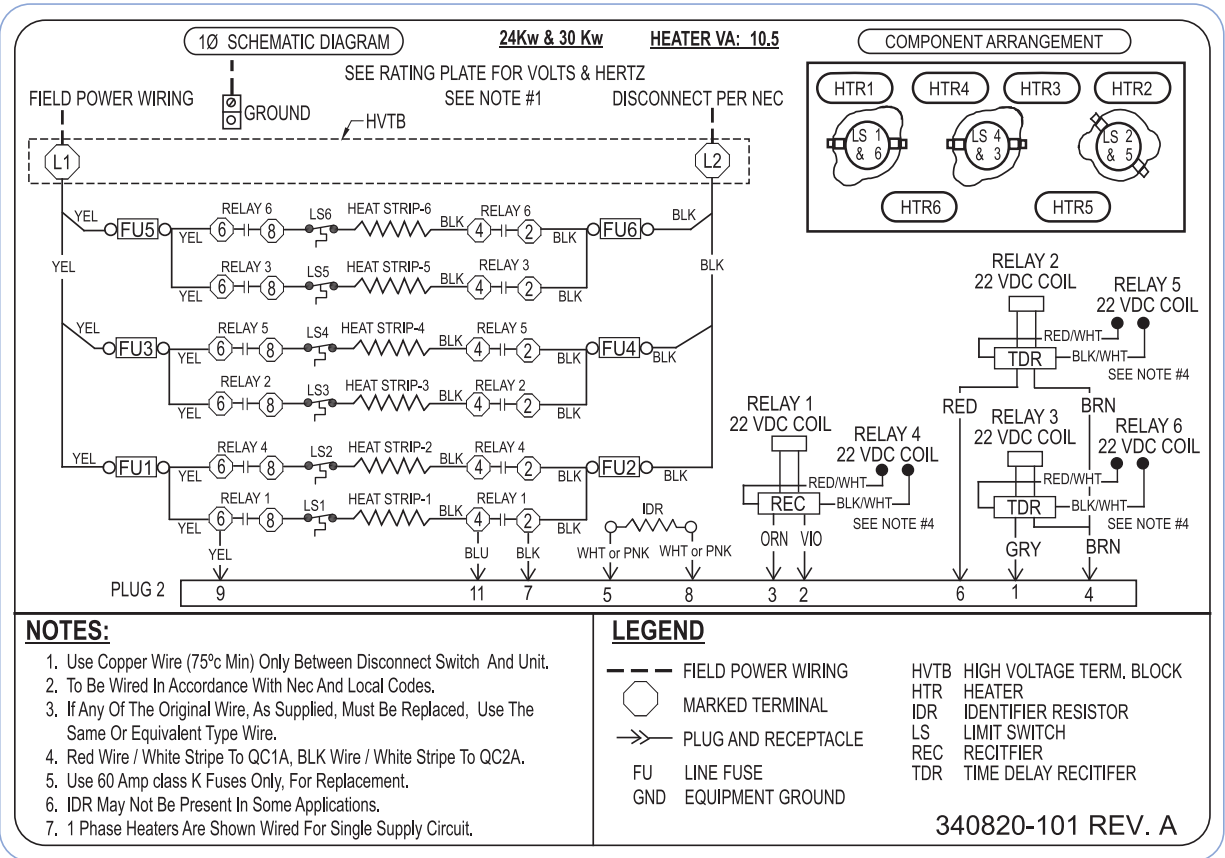


Fig. 9 - 340820-101

A150110

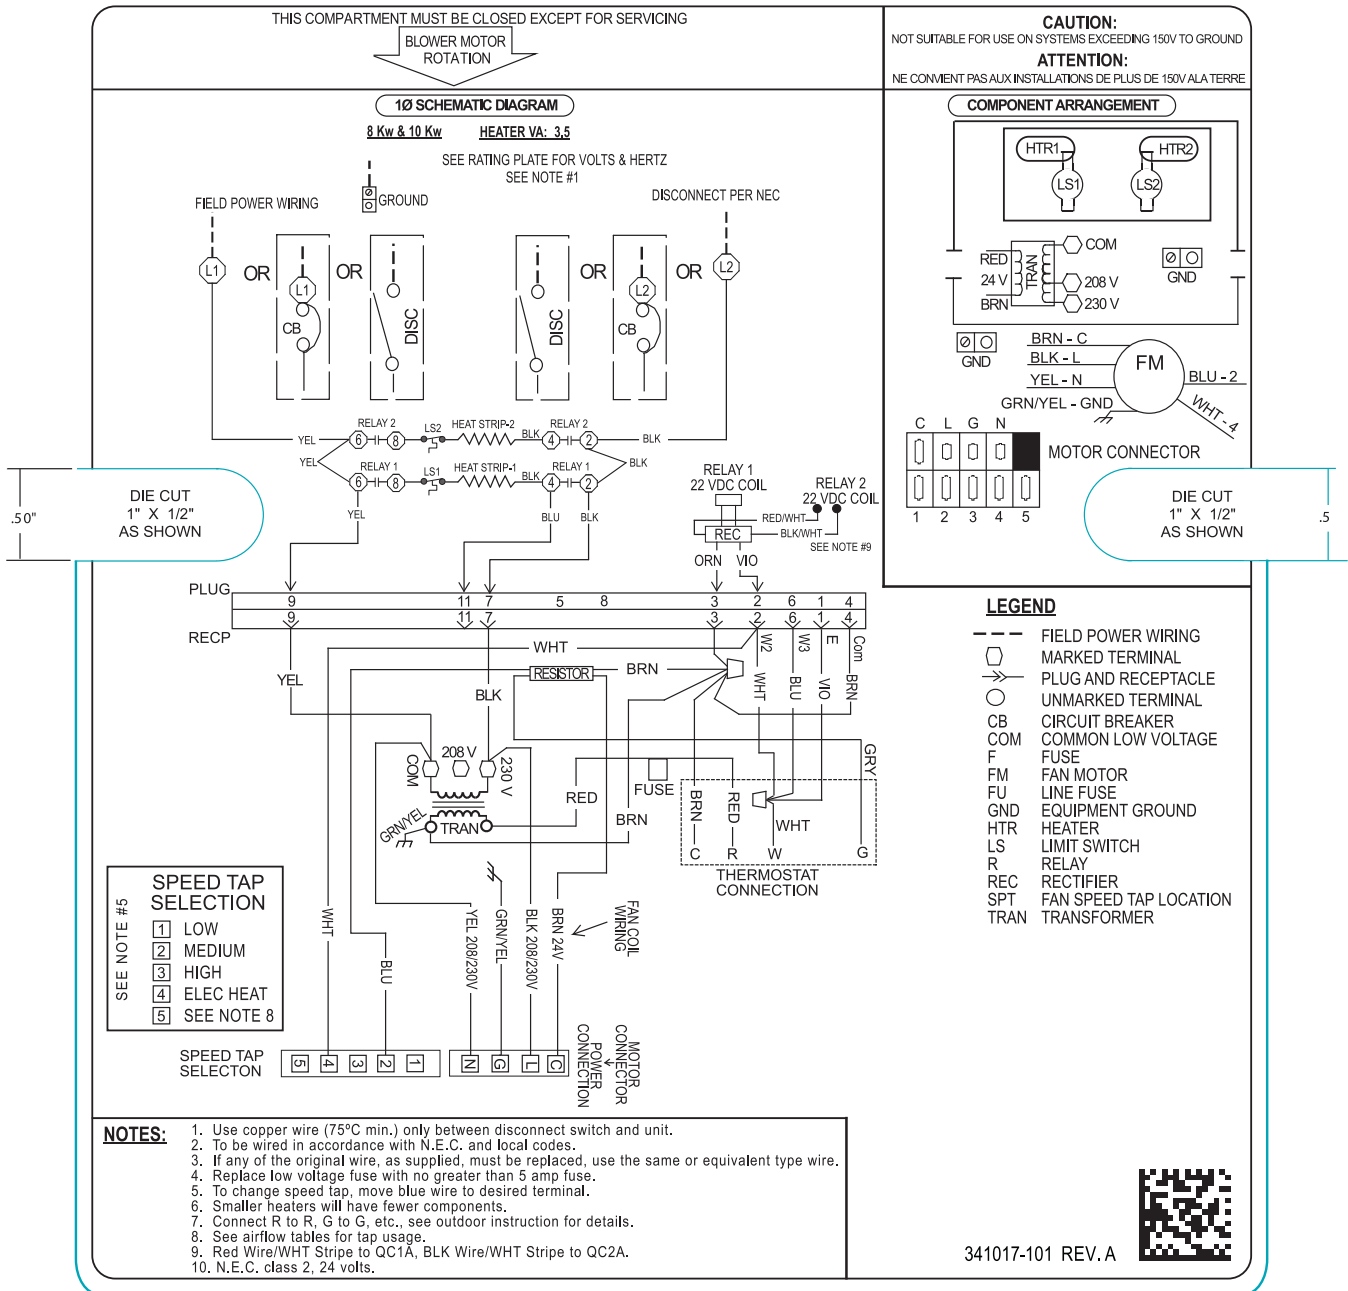


Fig. 10 - 341017-101

A150111

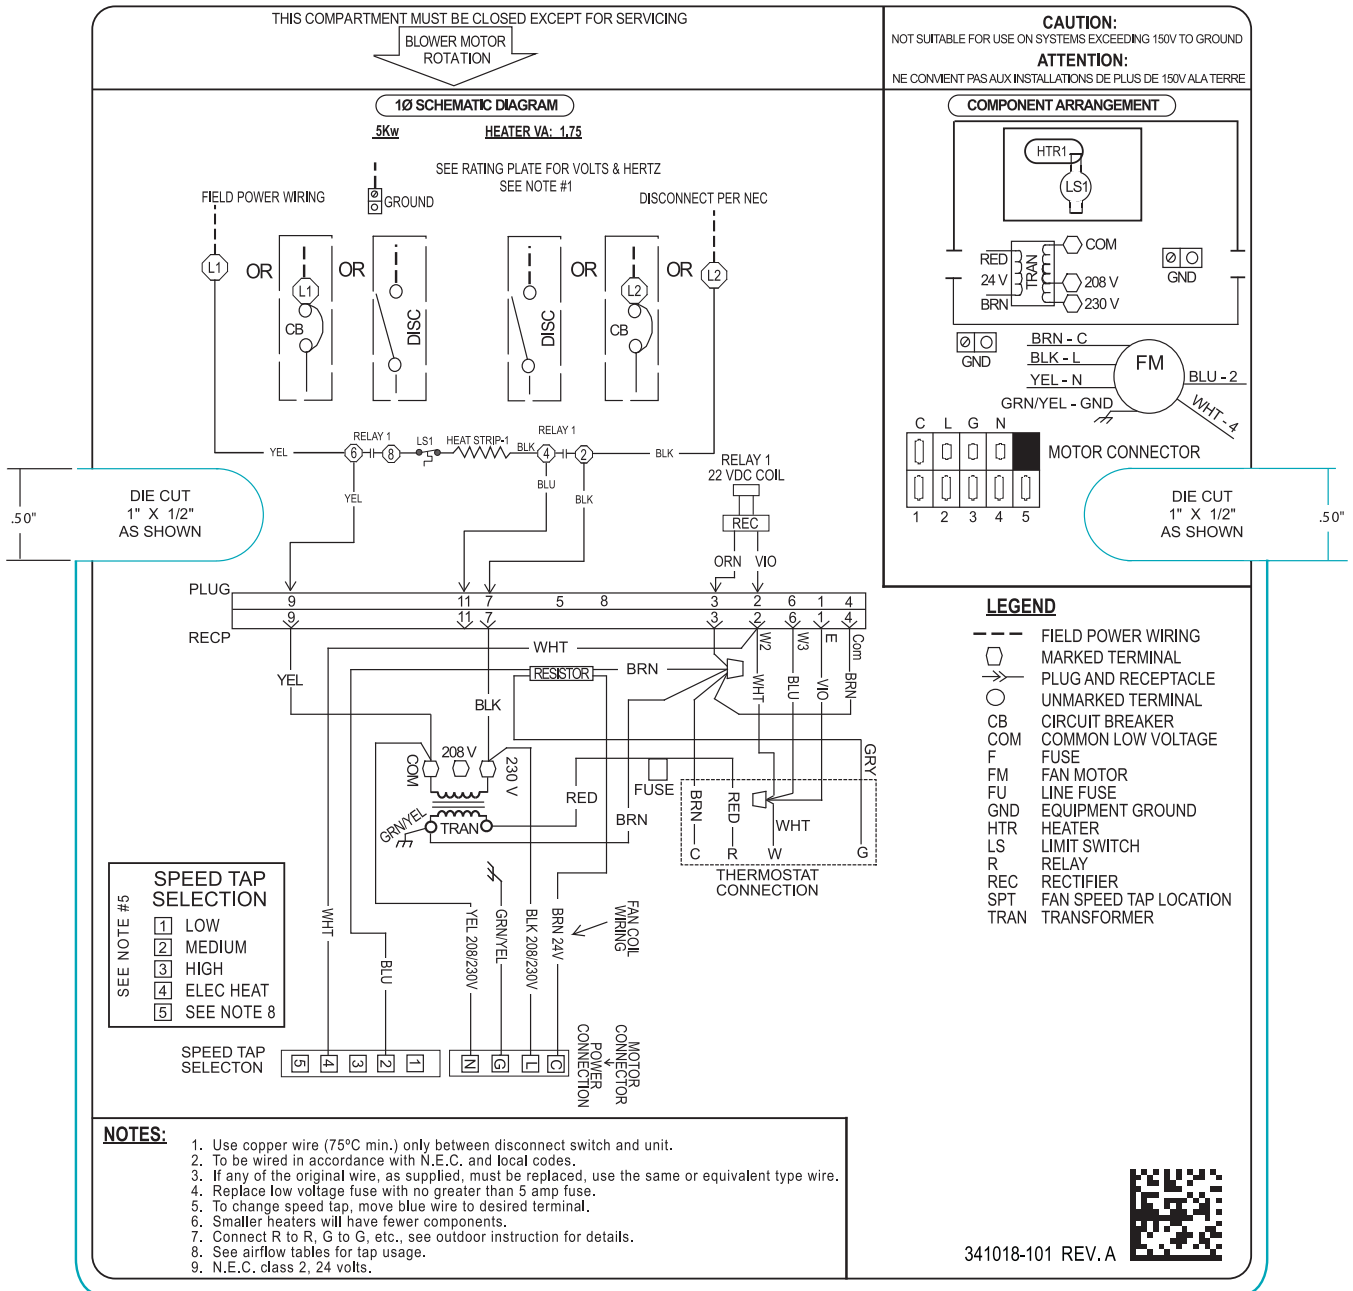


Fig. 11 - 341018- 101

A150112

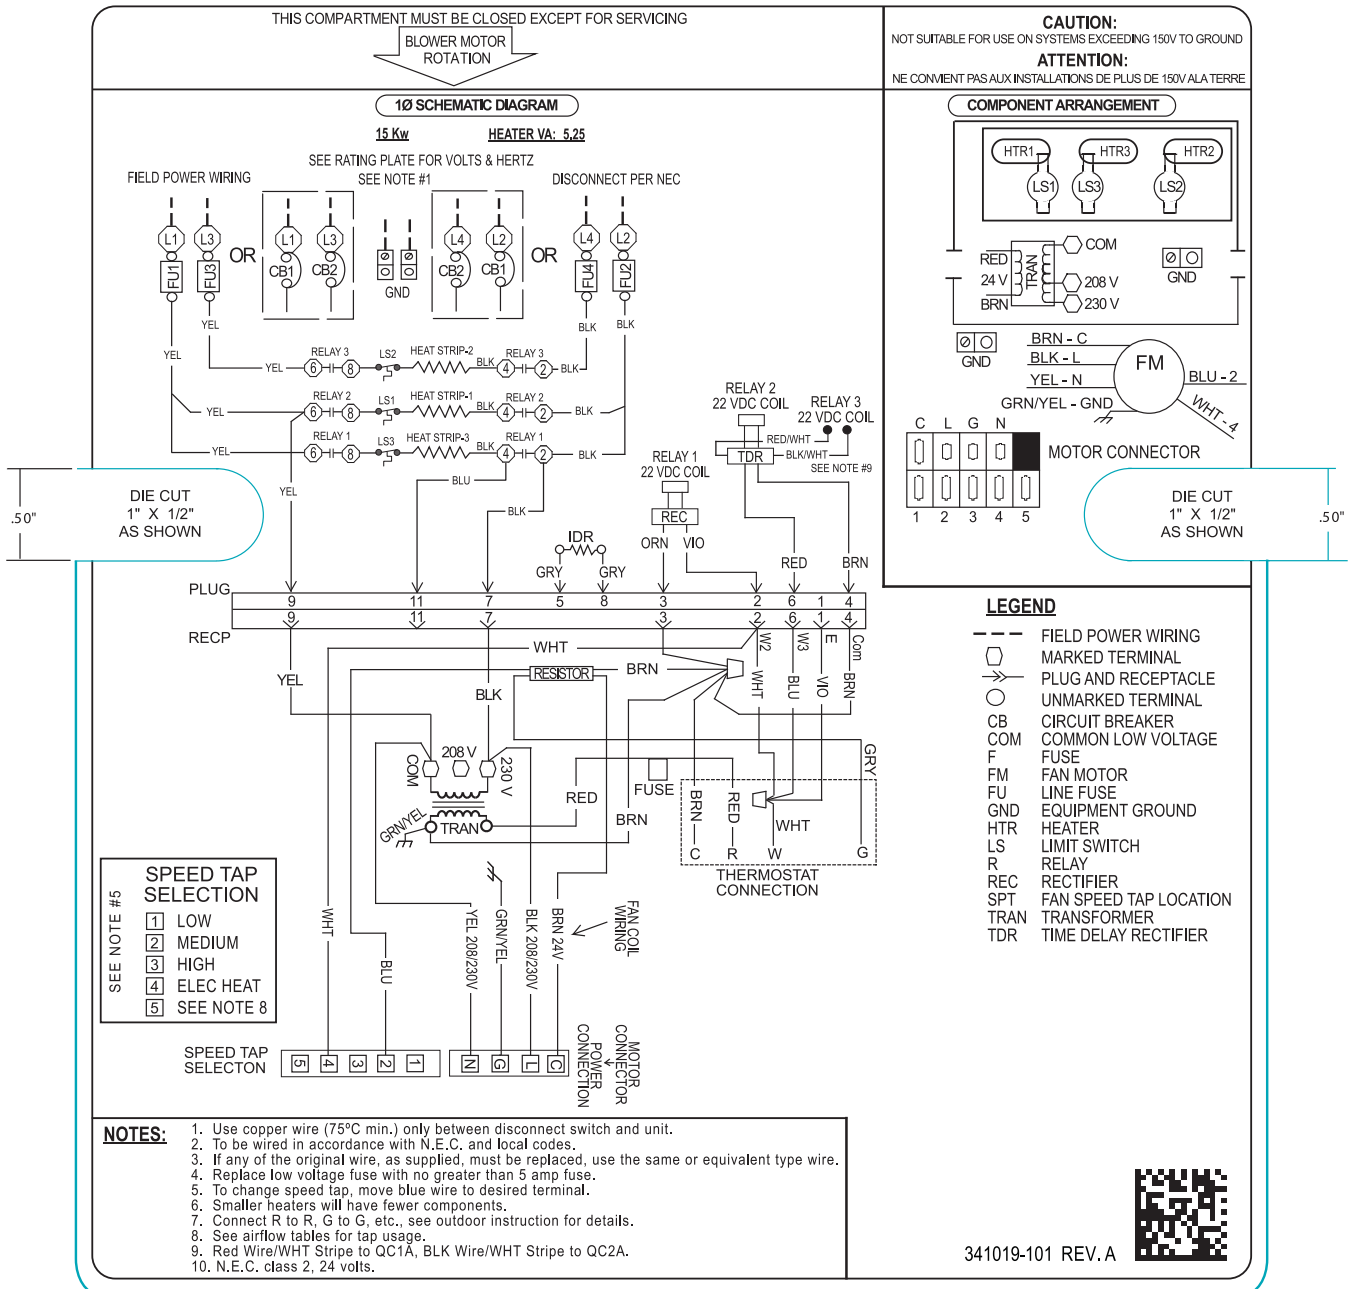



Fig. 12 - 341019- 101

A150113

THIS COMPARTMENT MUST BE CLOSED EXCEPT FOR SERVICING

BLOWER MOTOR ROTATION

COOLING ONLY SCHEMATIC DIAGRAM

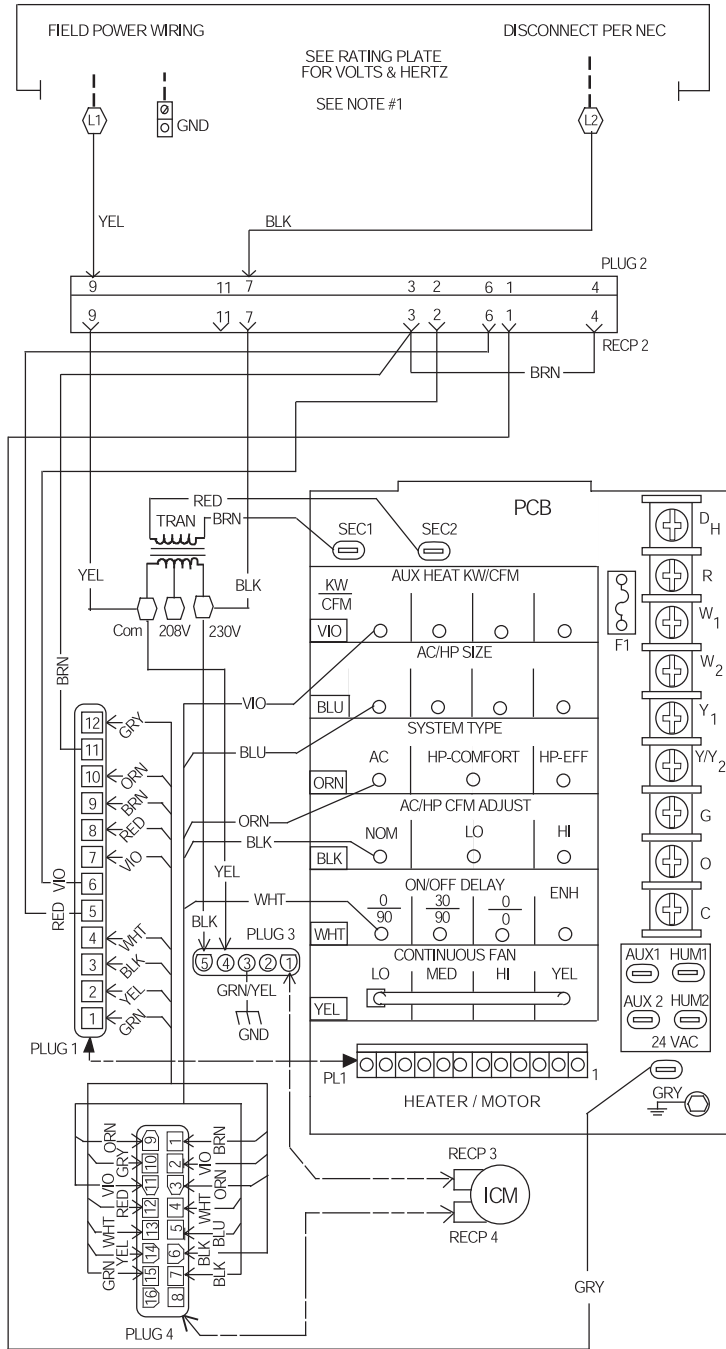


326014-101 REV. D

LEGEND

- FIELD POWER WIRING
- ⬡ MARKED TERMINAL
- ⌞ PLUG AND RECEPTACLE
- COM COMMON
- F1 LOW VOLTAGE FUSE
- GND EQUIPMENT GROUND
- ICM FAN MOTOR
- PCB PRINTED CIRCUIT BOARD
- RECP RECEPTACLE
- TRAN TRANSFORMER

COMPONENT ARRANGEMENT

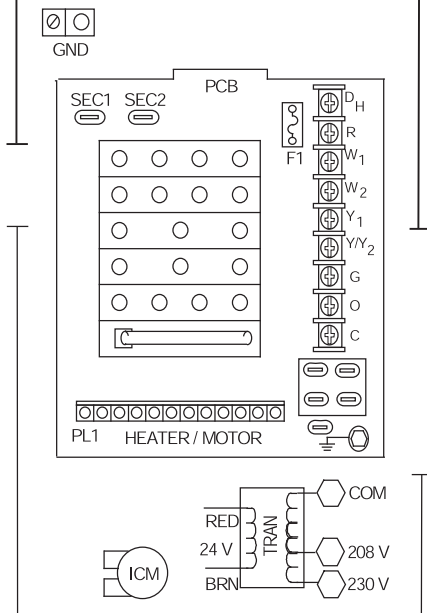

NOTES:

1. USE COPPER WIRE (75°C MIN) ONLY BETWEEN DISCONNECT SWITCH AND UNIT.
2. TO BE WIRED IN ACCORDANCE WITH N.E.C. AND LOCAL CODES.
3. TRANSFORMER PRIMARY LEADS, BLUE 208V, RED 230V.
4. IF ANY OF THE ORIGINAL WIRE, AS SUPPLIED, MUST BE REPLACED, USE THE SAME OR EQUIVALENT TYPE WIRE.
5. REPLACE LOW VOLTAGE FUSE WITH NO GREATER THAN 5 AMP FUSE.
7. USE 60 AMP CLASS K FUSES ONLY, FOR REPLACEMENT.
8. CONNECT R TO R, G TO G, ETC., SEE OUTDOOR INSTRUCTION FOR DETAILS.

Fig. 13 - 326014-101

A07029

THIS COMPARTMENT MUST BE CLOSED EXCEPT FOR SERVICING

BLOWER MOTOR
ROTATION


CAUTION:

NOT SUITABLE FOR USE
ON SYSTEMS EXCEEDING
150V TO GROUND


ATTENTION:

NE CONVIENT PAS A UX
INSTALLATIONS DE PLUS DE
150 V A LA TERRE

COOLING CONTROL ONLY

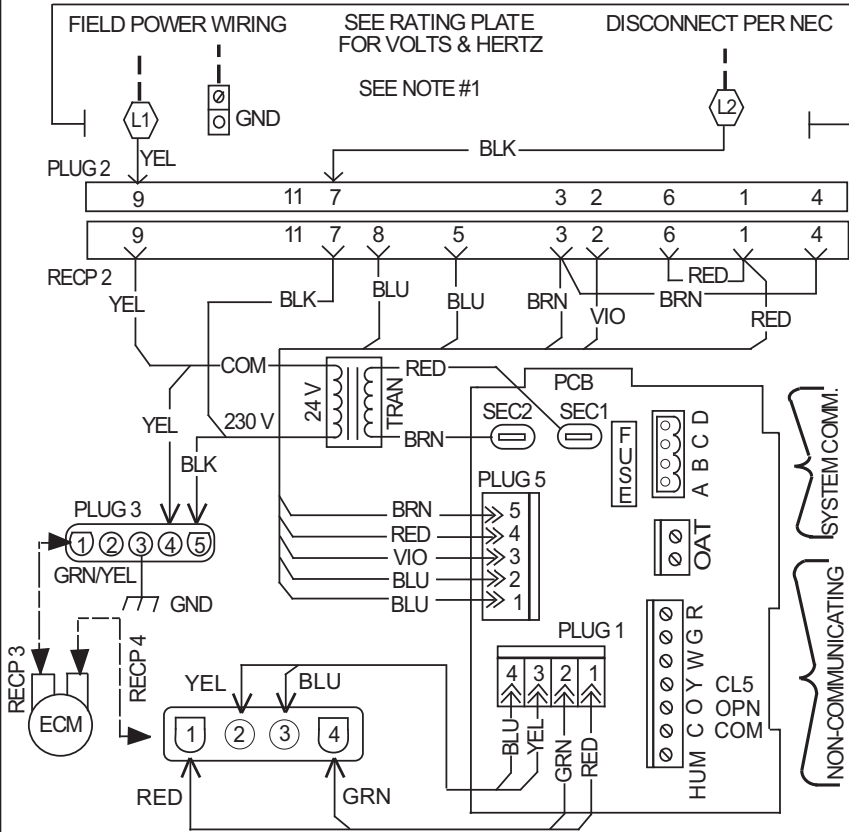

COMPONENT ARRANGEMENT

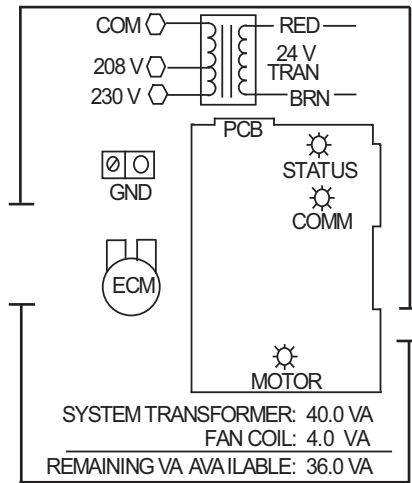

NOTES:

1. Use Copper Wire (75°C Min) Only Between Disconnect Switch And Unit.
2. To Be Wired In Accordance With N.E.C. And Local Codes.
3. If Any Of The Original Wire, As Supplied, Must Be Replaced, Use The Same Or Equivalent Type Wire.
4. Replace Low Voltage Fuse With No Greater Than 5 Amp Fuse.
5. For Use With Communicating Thermostat Only, Connect A To A, B To B, Etc.
6. Communicating Outdoor Units Connect A To A, B To B, Etc.
7. Non - Communicating Outdoor Units Connect R To R, Y To Y, Etc.

TROUBLE SHOOTING INFORMATION:

MOTOR LED

OFF
OFF
ON (FLASHING)
ON (FLASHING)

MOTOR

NOT RUNNING
RUNNING
NOT RUNNING
RUNNING

FAULT / ACTION

NONE - CHECK STATUS LED
MOTOR
MOTOR / HARNESS
NONE

STATUS LED

ON
OFF
16
OTHER

FAULT / ACTION

NONE - STANDBY MODE
NO LOW VOLTAGE OR CONTROL - CHECK POWER AND FUSE
NO SYSTEM COMMUNICATIONS - CHECK WIRING
REFER TO SERVICE SCREENS ON USER INTERFACE OR THE FAN COIL TROUBLESHOOTING GUIDE

LEGEND

- FIELD POWER WIRING
- ◻ MARKED TERMINAL
- ⊞ PLUG AND RECEPTACLE
- COM COMMON
- GND EQUIPMENT GROUND
- ECM FAN MOTOR
- OAT OUTDOOR AIR THERMISTOR
- PCB PRINTED CIRCUIT BOARD
- RECP RECEPTACLE
- TRAN TRANSFORMER




333107-101 REV. B

Fig. 14 - 333107-101

A12363

THIS COMPARTMENT MUST BE CLOSED EXCEPT FOR SERVICING

BLOWER MOTOR
ROTATION

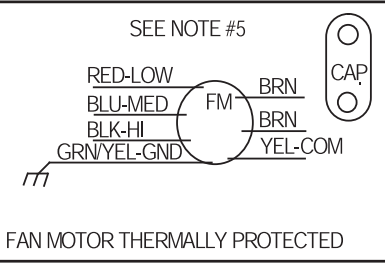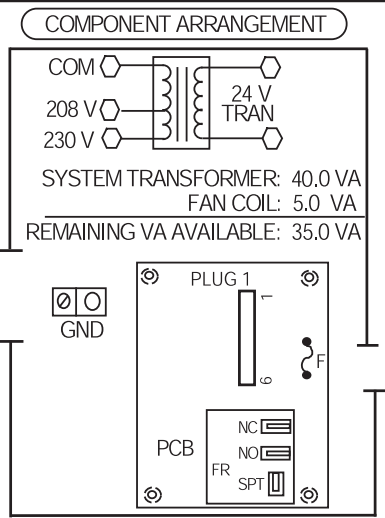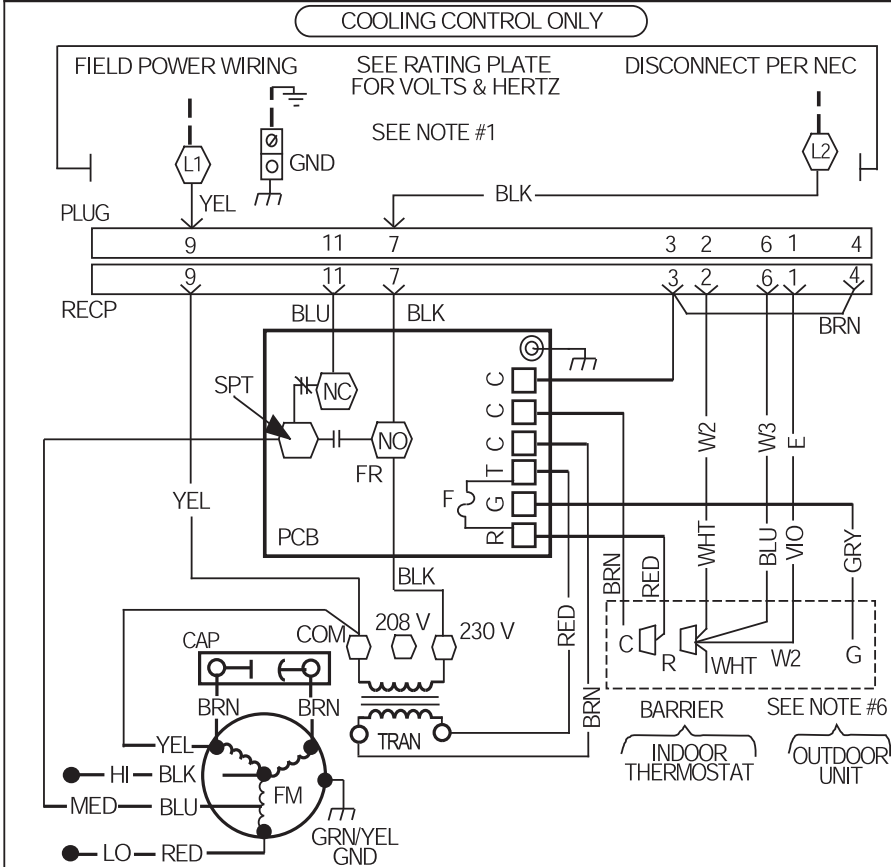

**Minimum Motor Speed Tap Selection
For Electric Heater**

MODEL SIZE	HEATER SIZE KW						
	3,5,8	9	10	15	18	20	24, 30
18	MED *	----	HI	----	---	----	----
24	MED ‡	----	MED ‡	MED ‡	----	----	----
30	----	----	LO	LO	----	MED *	----
36,42, 48, 60	----	LO	LO	LO	LO	LO	LO
70	----	MED	MED	MED	MED	MED	MED

* - MED speed on 3 speed motors and HI speed on 2 speed motors.
 ‡ - MED speed on 3 speed motors and LO speed on 2 speed motors.

NOTES

1. Use Copper Wire (75°C Min) Only Between Disconnect Switch And Unit.
2. To Be Wired In Accordance With NEC And Local Codes.
3. If Any Of The Original Wire, As Supplied, Must Be Replaced, Use The Same Or Equivalent Type Wire.
4. Replace Low Voltage Fuse With No Greater Than 5 Amp Fuse.
5. (3) Speed Motor Shown Optional (2) Speed Motor Uses HI (BLK) And LOW (BLUE or RED).
6. Connect R To R, G To G, Etc. See Outdoor Instruction For Details.

LEGEND

- CAP CAPACITOR
- COM COMMON
- F LOW VOLTAGE FUSE
- FR PCB FAN RELAY
- FM FAN MOTOR
- GND EQUIPMENT GROUND
- PCB PRINTED CIRCUIT BOARD
- RECP RECEPTACLE
- SPT FAN SPEED TAP LOCATION
- TRAN TRANSFORMER
- UNMARKED TERMINAL
- FIELD POWER WIRING
- ◻ MARKED TERMINAL
- ⇨ PLUG AND RECEPTACLE


328964-101 REV. A

Fig. 15 - 328964-101

A07027

THIS COMPARTMENT MUST BE CLOSED EXCEPT FOR SERVICING

BLOWER MOTOR ROTATION

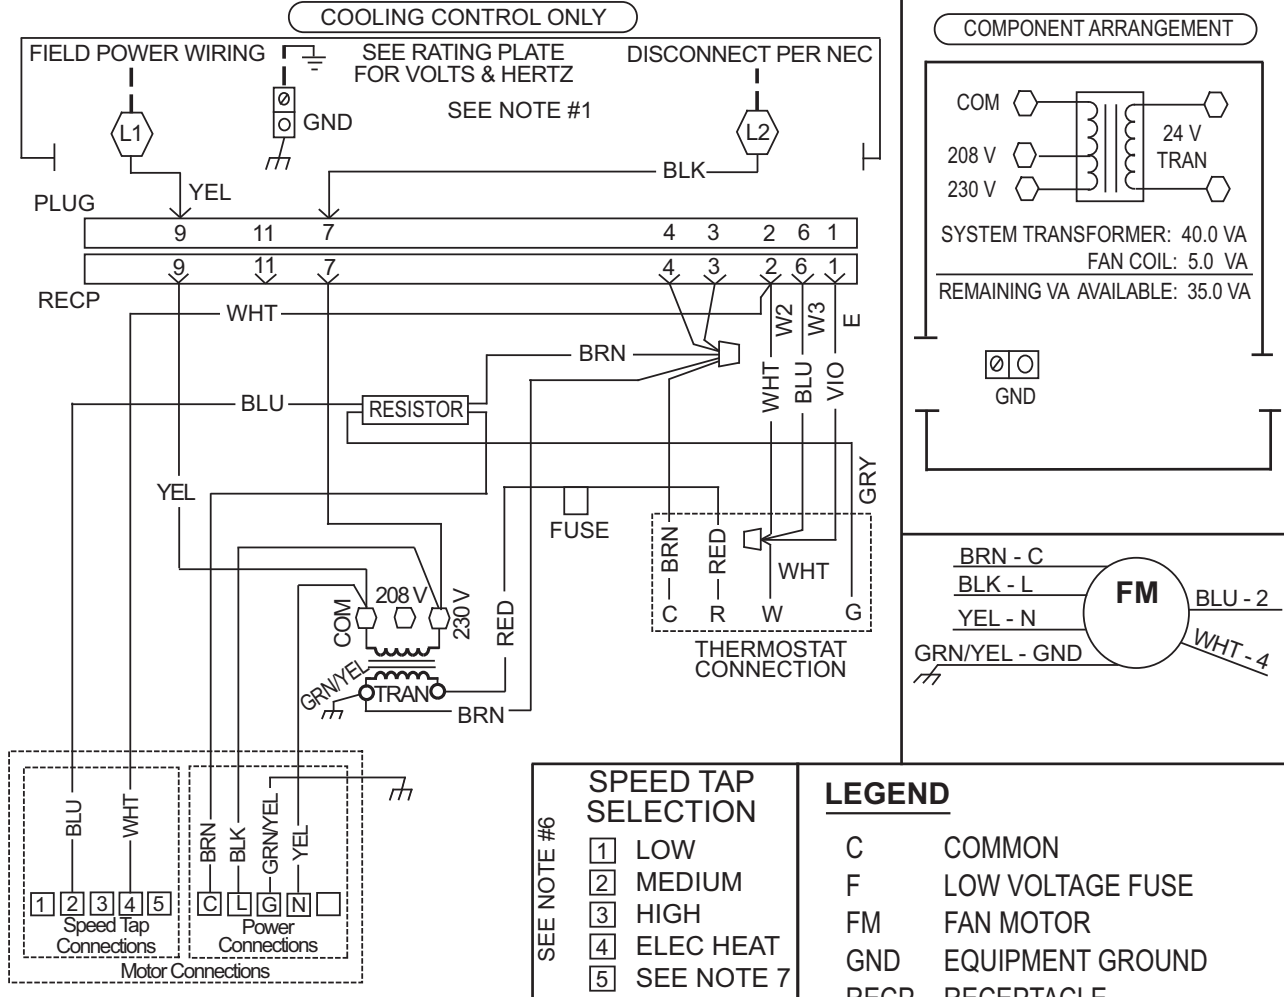

- NOTES**
1. Use Copper Wire (75°C Min) Only Between Disconnect Switch And Unit.
 2. To Be Wired In Accordance With NEC And Local Codes.
 3. If Any Of The Original Wire, As Supplied, Must Be Replaced. Use The Same Or Equivalent Type Wire.
 4. Replace Low Voltage Fuse With No Greater Than 5 Amp Fuse.
 5. Connect R To R, G To G, Etc. See Outdoor Instruction For Details.
 6. To change speed tap, move blue wire to desired terminal.
 7. See airflow tables for tap usage.




- SPEED TAP SELECTION**
- | | |
|---|------------|
| 1 | LOW |
| 2 | MEDIUM |
| 3 | HIGH |
| 4 | ELEC HEAT |
| 5 | SEE NOTE 7 |
- LEGEND**
- C COMMON
 - F LOW VOLTAGE FUSE
 - FM FAN MOTOR
 - GND EQUIPMENT GROUND
 - RECP RECEPTACLE
 - SPT FAN SPEED TAP LOCATION
 - TRAN TRANSFORMER
 - UNMARKED TERMINAL
 - FIELD POWER WIRING
 - ◻ MARKED TERMINAL
 - PLUG AND RECEPTACLE
- 336228-101 REV. A

Fig. 16 - 336228-101

A12364

THIS COMPARTMENT MUST BE CLOSED EXCEPT FOR SERVICING

BLOWER MOTOR ROTATION

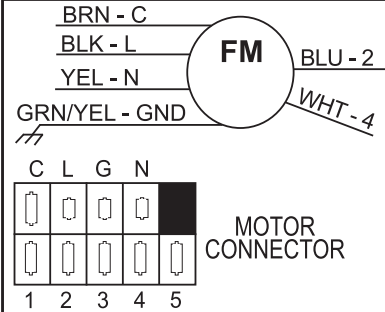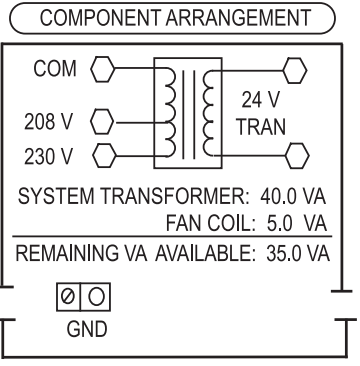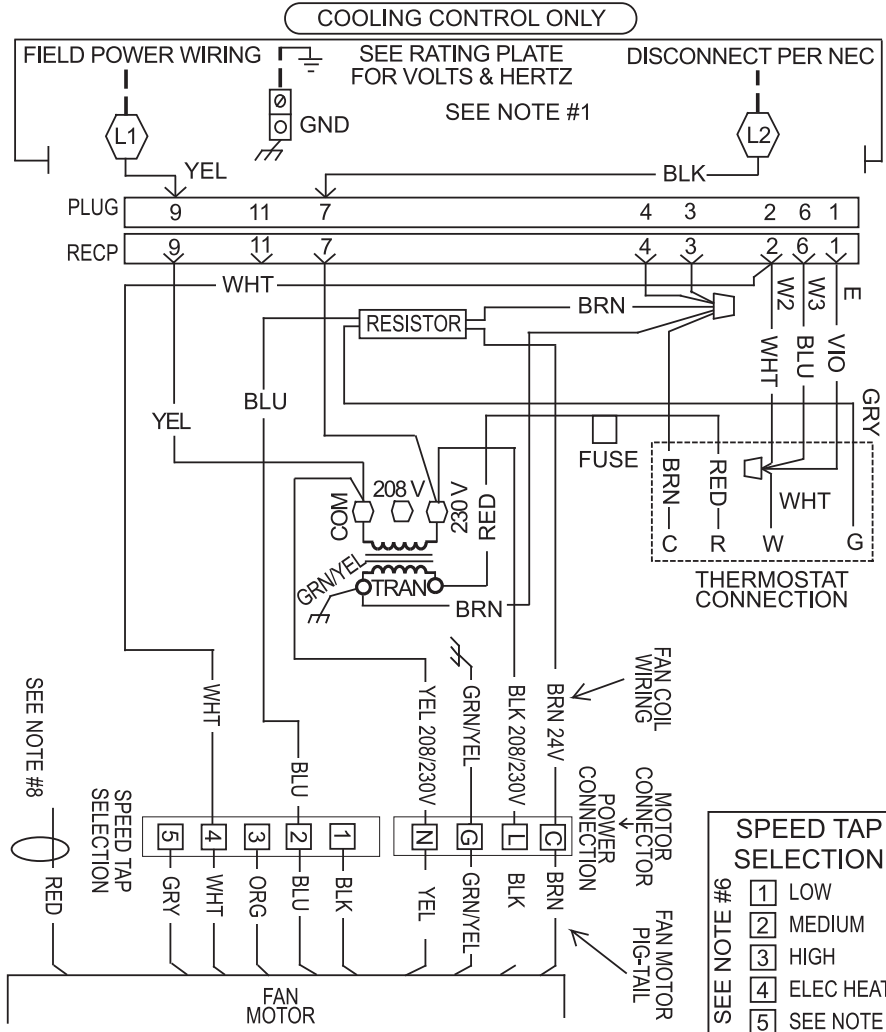


LEGEND

- C COMMON
- F LOW VOLTAGE FUSE
- FM FAN MOTOR
- GND EQUIPMENT GROUND
- RECP RECEPTACLE
- SPT FAN SPEED TAP LOCATION
- TRAN TRANSFORMER
- UNMARKED TERMINAL
- FIELD POWER WIRING
- ◻ MARKED TERMINAL
- PLUG AND RECEPTACLE

NOTES

1. Use Copper Wire (75°C Min) Only Between Disconnect Switch And Unit.
2. To Be Wired In Accordance With NEC And Local Codes.
3. If Any Of The Original Wire, As Supplied, Must Be Replaced. Use The Same Or Equivalent Type Wire.
4. Replace Low Voltage Fuse With No Greater Than 5 Amp Fuse.
5. Connect R To R, G To G, Etc. See Outdoor Instruction For Details.
6. To Change Speed Tap, Move Blue Wire To Desired Terminal.
7. See Airflow Tables For Tap Usage.
8. Factory wires may be present. DO NOT USE

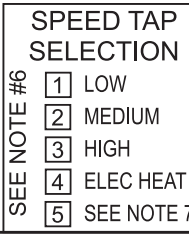

337519-101 REV. B

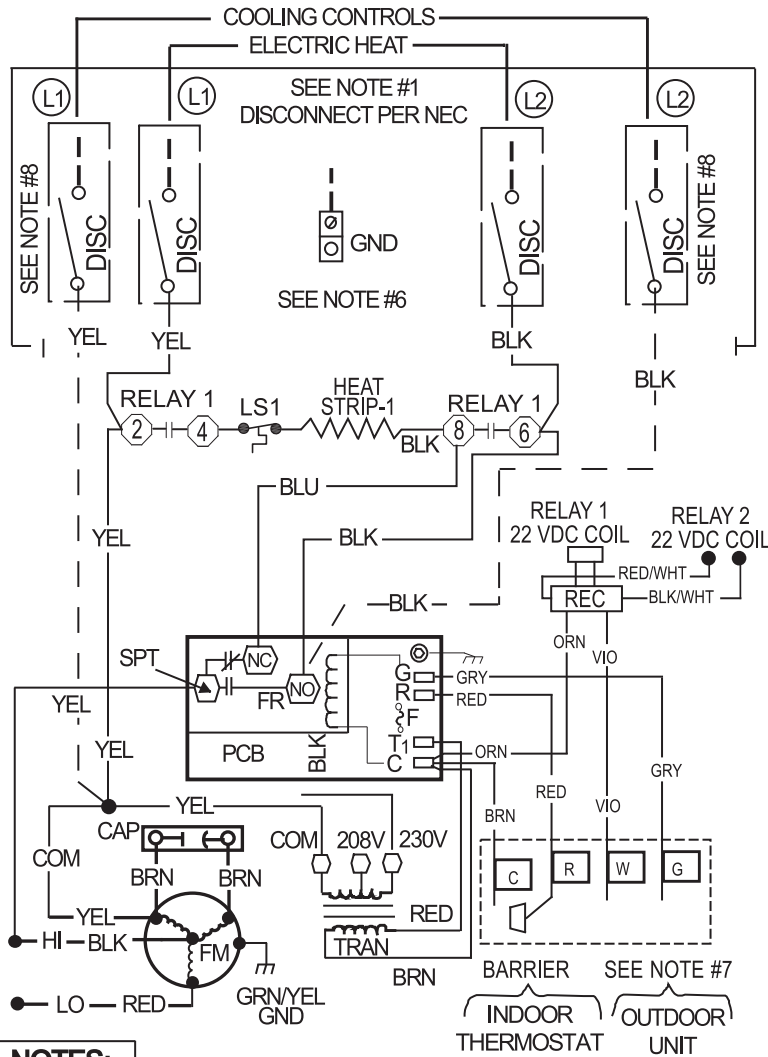


Fig. 17 - 337519-101



A12365

SCHEMATIC DIAGRAM
SEE RATING PLATE FOR VOLTS & HERTZ
FIELD POWER WIRING

CAUTION:
NOT SUITABLE FOR USE ON SYSTEMS EXCEEDING 150V TO GROUND
ATTENTION:
NE CONVIENT PAS AUX INSTALLATIONS DE PLUS DE 150 V A LA TERRE



COMPONENT ARRANGEMENT

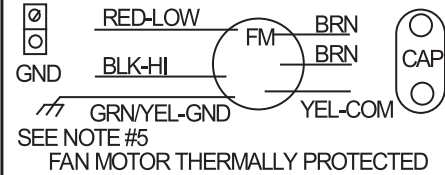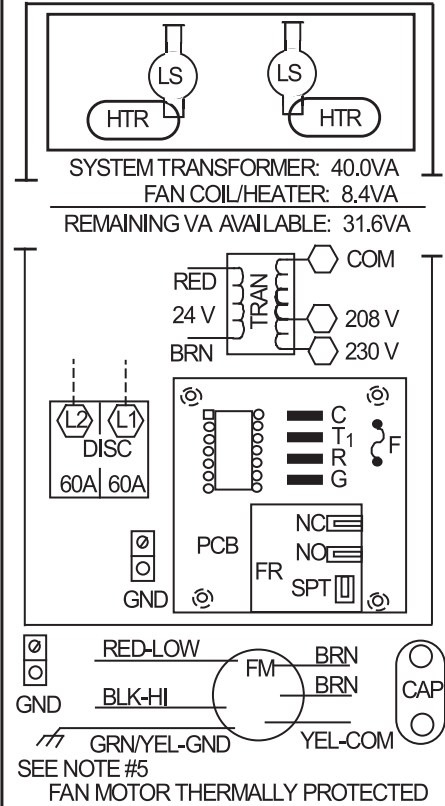

LEGEND

- CAP CAPACITOR
- COM COMMON
- DISC DISCONNECT
- F FUSE
- FM FAN MOTOR
- FIELD POWER WIRING
- FR PCB FAN RELAY
- GND EQUIPMENT GROUND
- HTR HEATER
- LS LIMIT SWITCH
- MARKED TERMINAL
- PLUG AND RECEPTACLE
- PCB PRINTED CIRCUIT BOARD
- REC RECTIFIER
- SPT FAN SPEED TAP LOCATION
- TRAN TRANSFORMER
- UNMARKED TERMINAL

NOTES:

1. Use copper wire (75° C min) only between disconnect switch and unit.
2. To be wired in accordance with N.E.C. and local codes.
3. If any of the original wire, as supplied, must be replaced, use the same or equivalent type wire.
4. Replace low voltage fuse with no greater than 5 AMP fuse.
5. (2) Speed Motor uses HI (BLK) and LOW (RED).
6. Smaller heaters will have fewer components.
7. Connect R to R, G to G, etc., see outdoor instructions for details.
8. Cooling controls wiring not used with electric heaters.
9. Motor speed selection for 018 and 024 sizes with 11 kW heater and heat pump is High. All other heater combinations is Low.
10. N.E.C. Class 2, 24 Volts.

This compartment must be closed except when servicing.



341080-101 REV. A

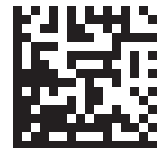


Fig. 18 - 341080-101


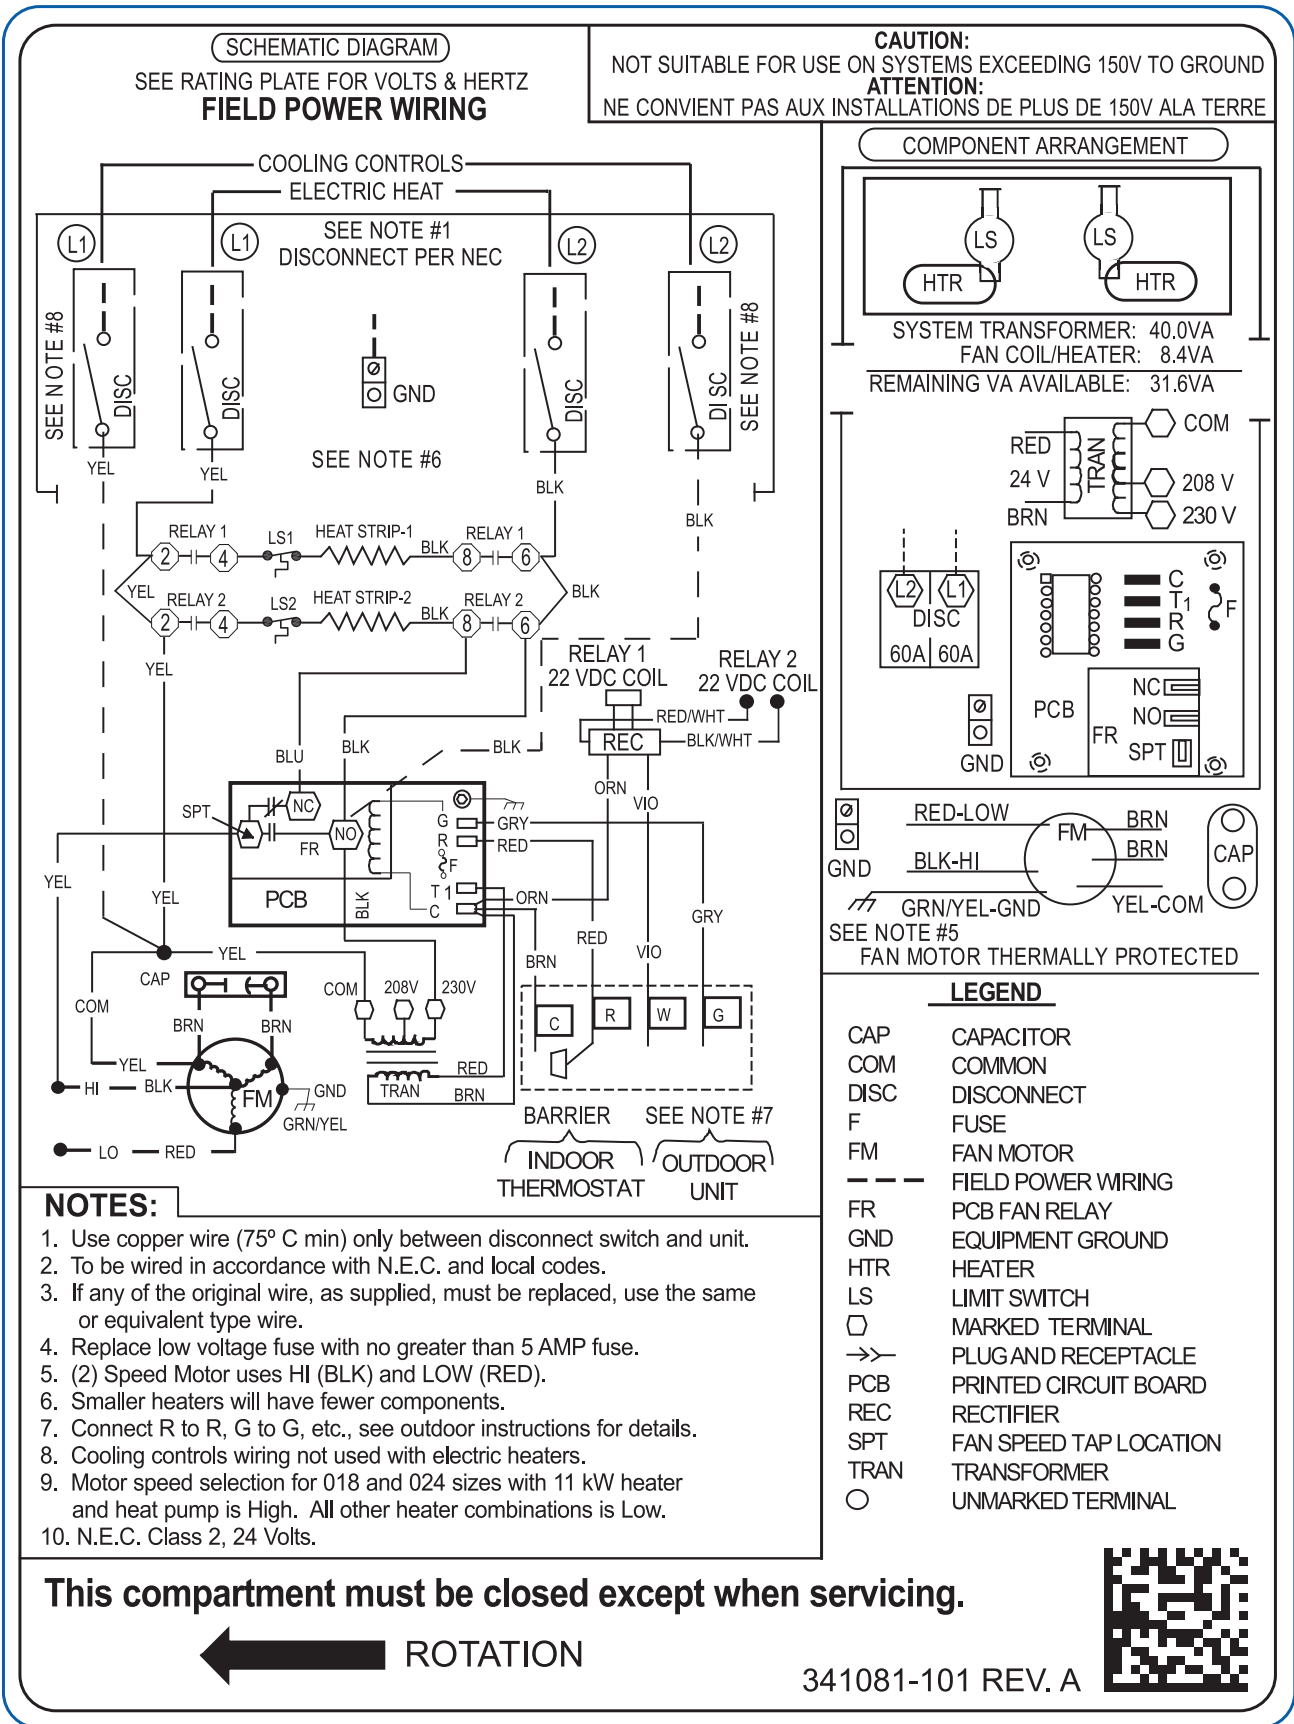


Fig. 19 - 341081-101

SCHEMATIC DIAGRAM


SEE RATING PLATE FOR VOLTS & HERTZ
FIELD POWER WIRING

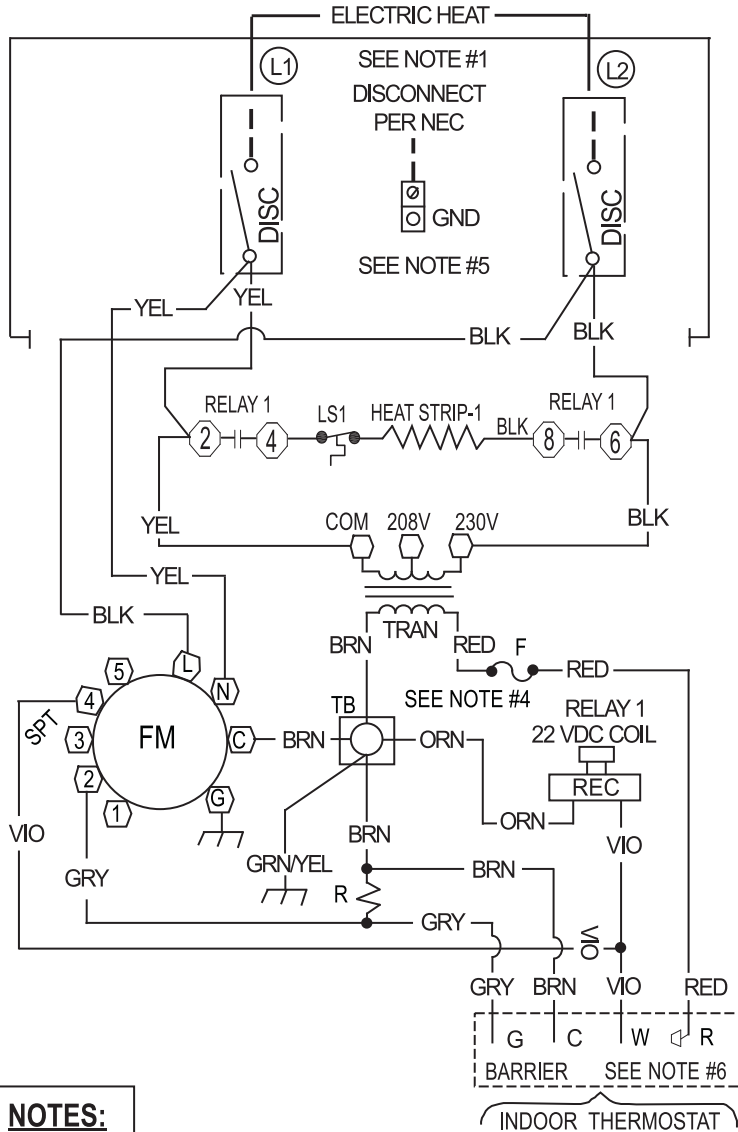




NOTES:

1. Use copper wire (75° C min) only between disconnect switch and unit.
2. To be wired in accordance with N.E.C. and local codes.
3. If any of the original wire, as supplied, must be replaced, use the same or equivalent type wire.
4. Replace low voltage fuse with no greater than 3 AMP fuse.
5. Smaller heaters will have fewer components.
6. Connect R to R, G to G, etc., see outdoor instructions for details.
7. Cooling speed selection can be tap 1, 2, 3, or 4.
8. Heating speed selection must be tap 4 only.
9. N.E.C. class 2, 24 volts.

COMPONENT ARRANGEMENT

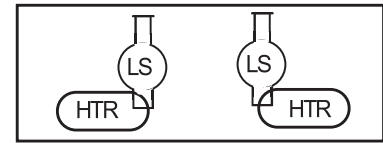

SYSTEM TRANSFORMER: 40.0VA
FAN COIL/HEATER: 8.4VA
REMAINING VA/AVAI LABLE: 31.6VA

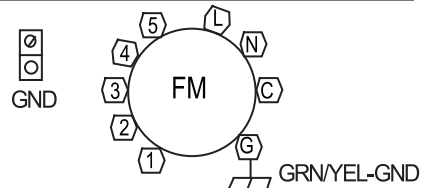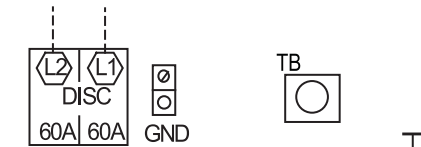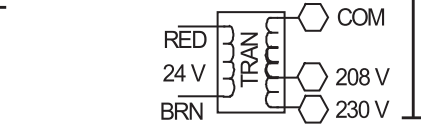

FAN MOTOR ELECTRONICALLY PROTECTED

LEGEND

- FIELD POWER WIRING
- ◻ MARKED TERMINAL
- PLUG AND RECEPTACLE
- UNMARKED TERMINAL
- ⌋ WIRE NUT
- COM COMMON
- DISC DISCONNECT
- F FUSE
- FM FAN MOTOR
- GND EQUIPMENT GROUND
- HTR HEATER
- LS LIMIT SWITCH
- R RESISTOR
- REC RECTIFIER
- SPT FAN SPEED TAP LOCATION
- TB TERMINAL BLOCK
- TRAN TRANSFORMER

This compartment must be closed except when servicing.




341082-101 REV. A



Fig. 20 - 341082-101


SCHEMATIC DIAGRAM
SEE RATING PLATE FOR VOLTS & HERTZ
FIELD POWER WIRING

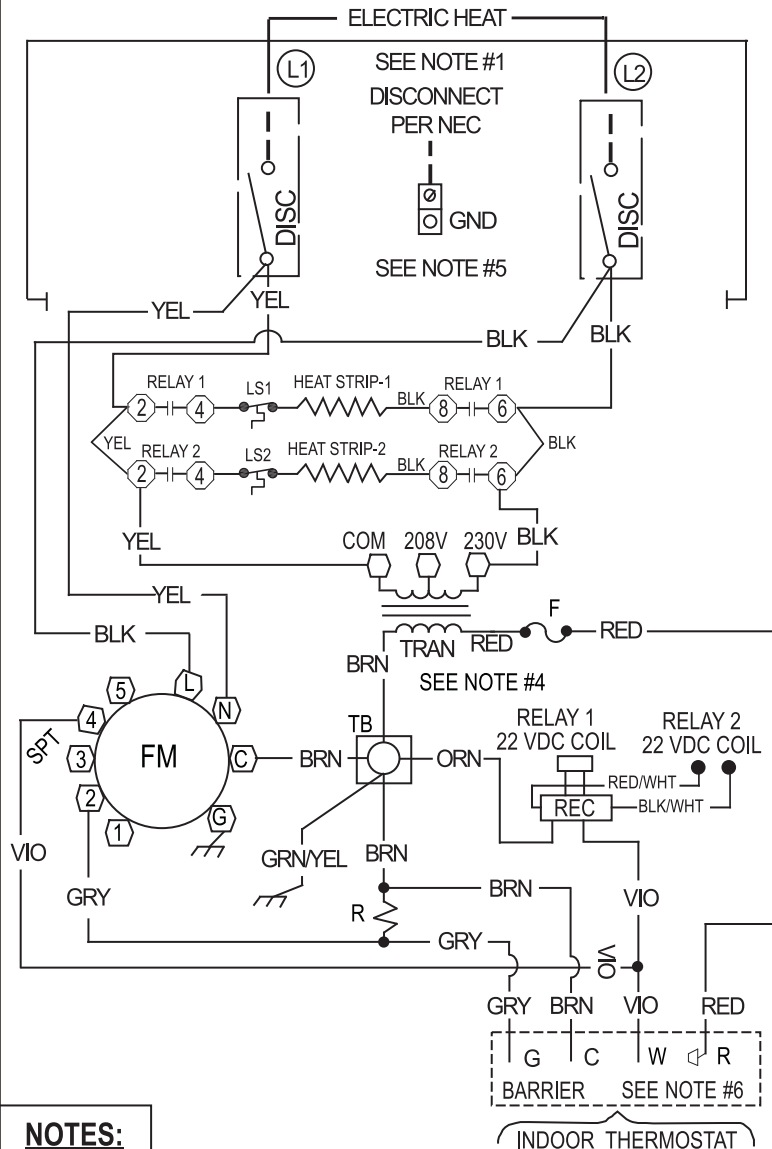

NOTES:

1. Use copper wire (75° C min) only between disconnect switch and unit.
2. To be wired in accordance with N.E.C. and local codes.
3. If any of the original wire, as supplied, must be replaced, use the same or equivalent type wire.
4. Replace low voltage fuse with no greater than 3 AMP fuse.
5. Smaller heaters will have fewer components.
6. Connect R to R, G to G, etc., see outdoor instructions for details.
7. Cooling speed selection can be tap 1, 2, 3, or 5.
8. Heating speed selection must be tap 4 only.
9. N.E.C. class 2, 24 volts.

COMPONENT ARRANGEMENT

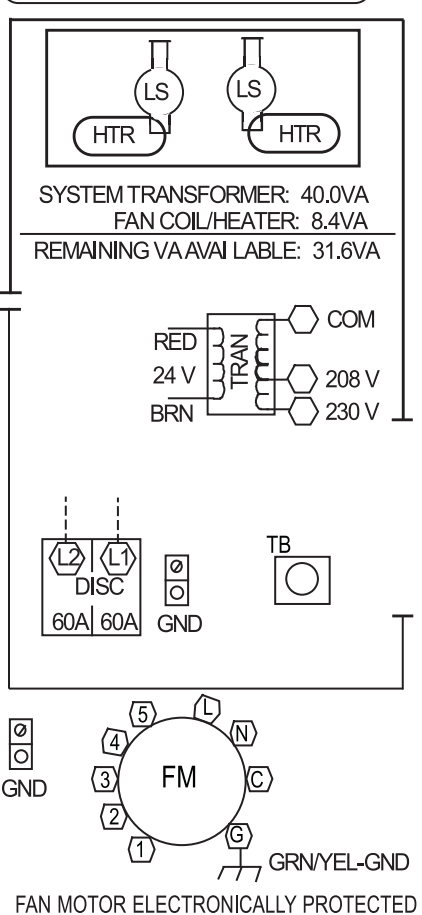

LEGEND

- FIELD POWER WIRING
- MARKED TERMINAL
- PLUG AND RECEPTACLE
- UNMARKED TERMINAL
- ⌋ WIRE NUT
- COM COMMON
- DISC DISCONNECT
- F FUSE
- FM FAN MOTOR
- GND EQUIPMENT GROUND
- HTR HEATER
- LS LIMIT SWITCH
- R RESISTOR
- REC RECTIFIER
- SPT FAN SPEED TAP LOCATION
- TB TERMINAL BLOCK
- TRAN TRANSFORMER

This compartment must be closed except when servicing.



341083-101 REV. A

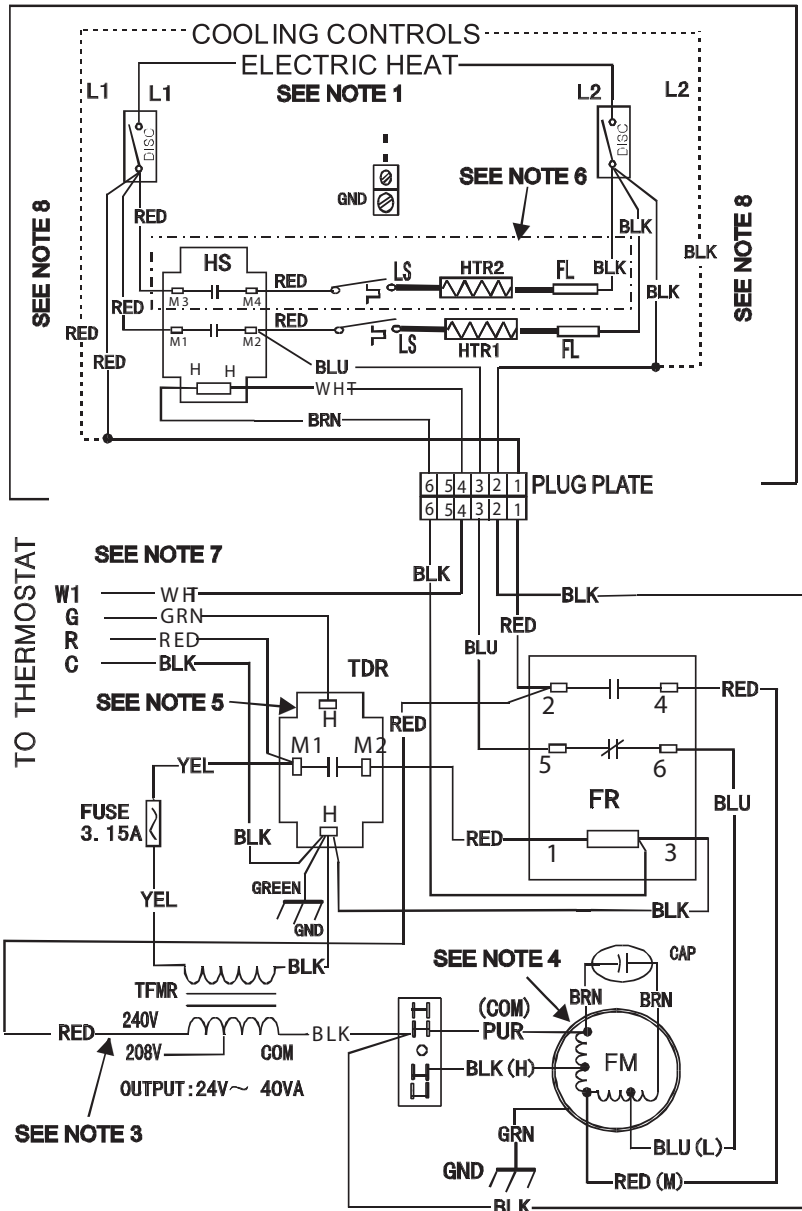


Fig. 21 - 341083-101


SCHEMATIC DIAGRAM

**SEE RATING PLATE FOR VOLTS&HERTZ
FIELD POWER WIRING**

CAUTION:
NOT SUITABLE FOR USE ON SYSTEMS EXCEEDING 150V TO GROUND
ATTENTION:
NE CONVIENT PAS AUX INSTALLATIONS DE PLUS DE 150V ALA TERRE



COMPONENT ARRANGEMENT

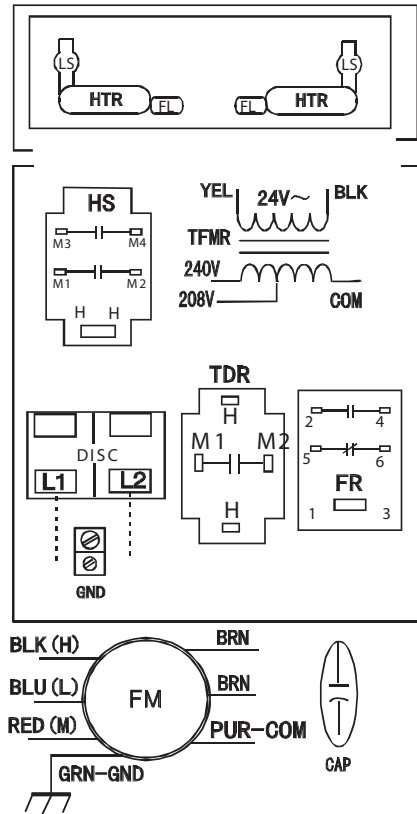

- DISC DISCONNECT
- FR FAN RELAY
- HS HEAT SEQUENCER
- LS LIMIT SWITCH
- TDR TIME DELAY RELAY
- TFMR TRANSFORMER
- FL FUSE LINK
- FM FAN MOTOR
- CAP FAN CAPACITOR
- GND GROUND
- - - FIELD POWER WIRING

NOTES:

- 1: Use copper wire(75°C min) only between disconnect switch and unit, To be wired in accordance with N.E.C. and local codes.
- 2: If any of the original wire as supplied must be replaced, use the same or equivalent type wire.
- 3: Remove the red lead from "240V" terminal and then connect the red lead to "208V" terminal on the transformer for 208 volts.
- 4: Factory default fan speed is medium; FM red wire connected to FR #4. For HI speed connect FM black wire to FR #4. For LOW speed connect FM blue wire to FR #4 and FM red wire to FR #6. Always connect the unused FM wire to the dummy terminal block.
- 5: TDR has a 1-30s on delay when "G" is energized and a 45-75s off delay when "G" is de-energized.
- 6: The 5kW heater kit has HTR1 only. Fan coils equipped with electric heat connect power supply to circuit breaker.
- 7: Connect R to R, G to G, etc. See outdoor or indoor instructions for details.
- 8: Cooling controls wiring not used with electric heaters.

202070290385


Fig. 22 - FFMANP(018,024,030,036 and EHK2 Electric Heaters with Sequencers
NOTE: Representative for FFMANP(018,024,030,036) prior to serial number date code 1715V

A13131


SCHEMATIC DIAGRAM
SEE RATING PLATE FOR VOLTS&HERTZ

CAUTION:
NOT SUITABLE FOR USE ON SYSTEMS EXCEEDING 150V TO GROUND
ATTENTION:
NE CONVIENT PAS AUX INSTALLATIONS DE PLUS DE 150V A LA TERRE

**ELECTRIC HEAT WIRING
CONNECTION (WHEN APPLIED)**

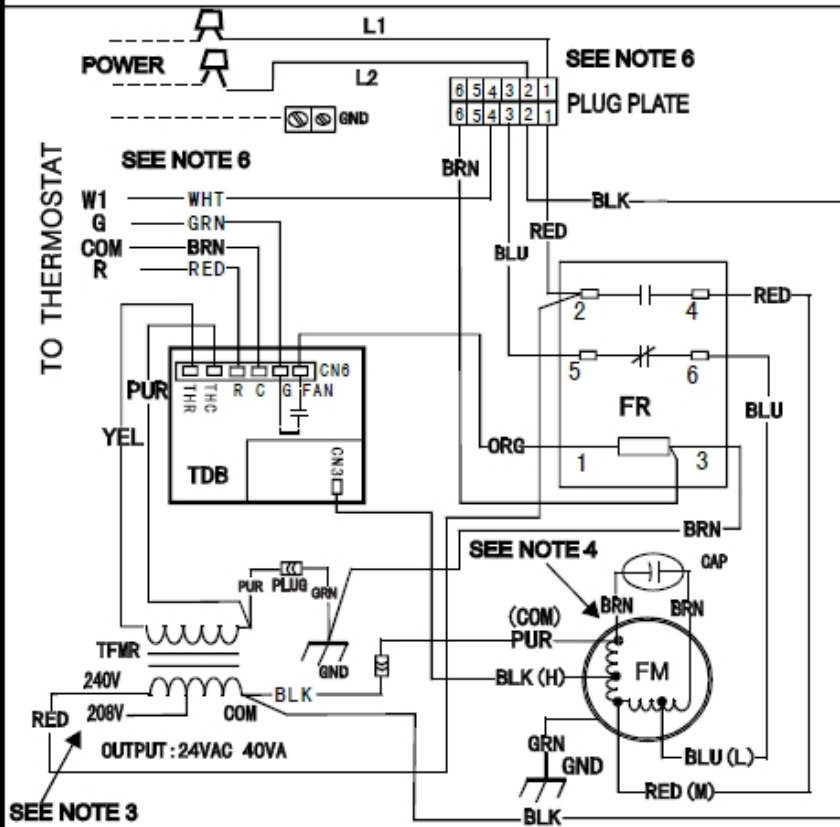

COMPONENT ARRANGEMENT

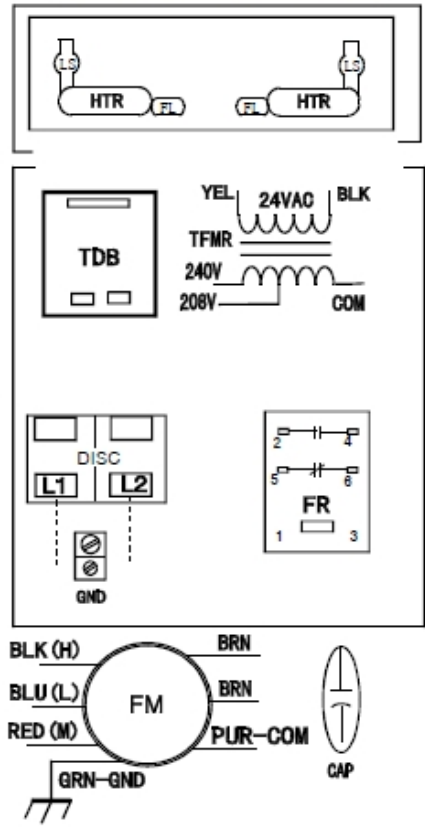

- FR FAN RELAY
- TDB TIME DELAY BOARD
- TFMR TRANSFORMER
- FM FAN MOTOR
- CAP FAN CAPACITOR
- GND GROUND
- - - FIELD POWER WIRING

- NOTES:**
- 1: Use copper wire(75°C min), to be wired in accordance with N.E.C. and local codes.
 - 2: If any of the original wire as supplied must be replaced,use the same or equivalent type wire.
 - 3: Remove the red lead from "240V" terminal and then connect the red lead to "208V" terminal on the transformer for 208 volts.
 - 4: Factory default fan speed is medium; FM red wire connected to FR #4. For HI speed connect FM black wire to FR #4. For LOW speed connect FM blue wire to FR #4 and FM red wire to FR #6. Always connect the unused FM wire to the dummy terminal CN3.
 - 5: TDB has a 90-100s off delay when "G" is de-energized.
 - 6:Connect R to R, G to G, etc. See outdoor or indoor instructions for details.
 - 7:Cooling controls wiring not used with electric heaters,connect the plug to electric heaters kit when applied.
 - 8: N.E.C., class2,24volts.


2020702A1717

Fig. 23 - FFMANP(018,024,030,036 with PCB Time Delay
NOTE: Representative for FFMANP(018,024,030,036) serial number date code 1715V and later.

A150153

SCHEMATIC DIAGRAM
 SEE RATING PLATE FOR VOLTS & HERTZ
FIELD POWER WIRING

CAUTION:
 NOT SUITABLE FOR USE ON SYSTEMS EXCEEDING 150V TO GROUND
ATTENTION:
 NE CONVIENT PAS AUX INSTALLATIONS DE PLUS DE 150V ALA TERRE

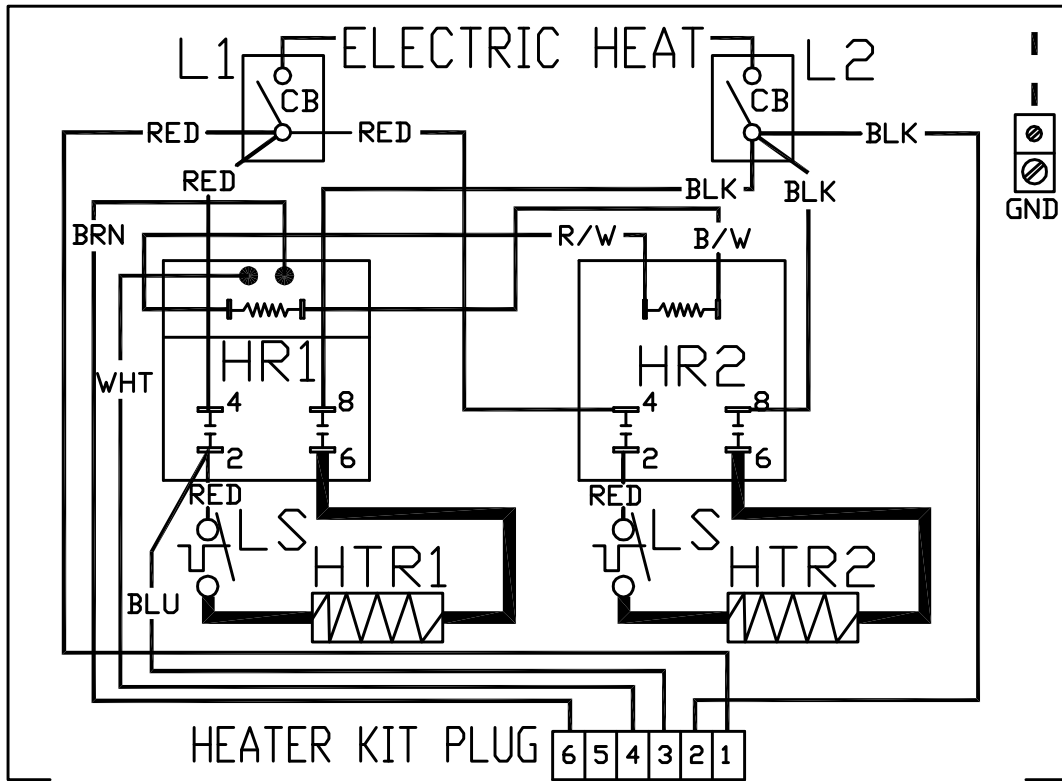

HR	HEATER RELAY			WHT	WHITE	B/W	BLACK/WHITE
CB	CIRCUIT BREAKER	LS	LIMIT SWITCH	BLU	BLUE	R/W	RED/WHITE
HTR	HEATER	GND	GROUND	BLK	BLACK	BRN	BROWN

NOTES:


- 1: Use copper wire (75°C min) only between circuit breaker and unit. To be wired in accordance with N.E.C. and local codes.
- 2: If any of the original wire as supplied must be replaced, use the same or equivalent type wire.
- 3: The 5KW heater kit has HTR1 only. Fan coils equipped with electric heat connect power supply to circuit breaker.

06-7094-02

Fig. 24 - EHK2 With Heater Relays

SCHEMATIC DIAGRAM
SEE RATING PLATE FOR VOLTS&HERTZ
FIELD POWER WIRING

CAUTION:
NOT SUITABLE FOR USE ON SYSTEMS EXCEEDING 150V TO GROUND
ATTENTION:
NE CONVIENT PAS AUX INSTALLATIONS DE PLUS DE 150V ALA TERRE

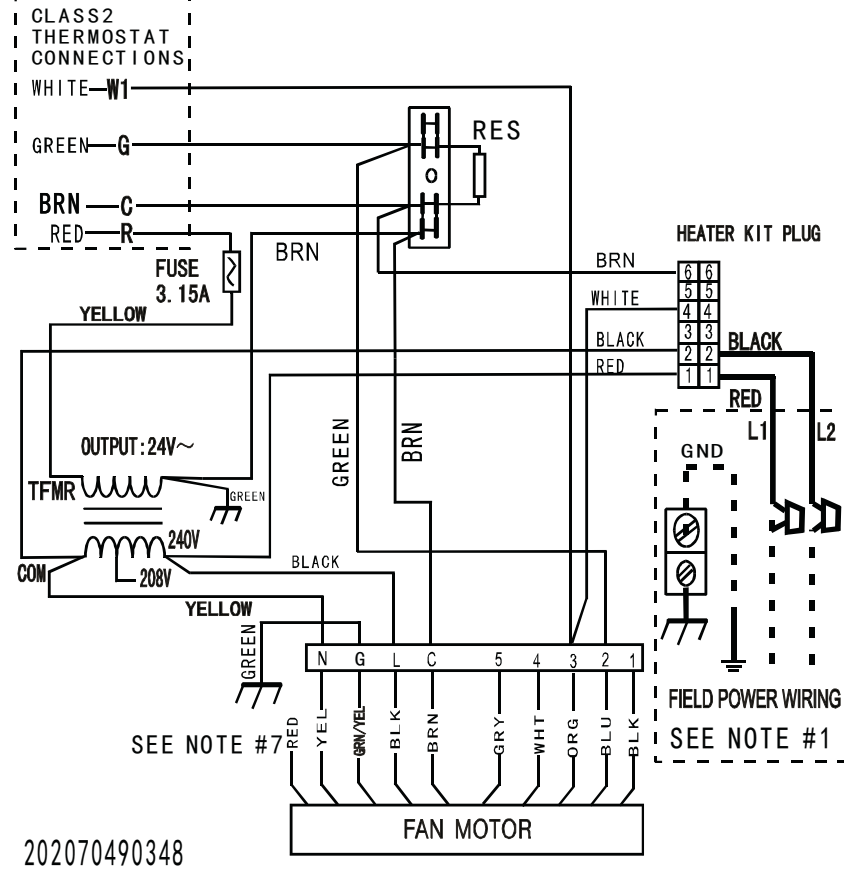


202070490348

NOTES:

- 1: Use Copper Wire (75°C Min) Only Between Disconnect Switch And Unit .
- 2: To Be Wired In Accordance With NEC And Local Codes.
- 3: If Any Of The Original Wire ,As Supplied, Must Be Replaced. Use The Same Or Equivalent Type Wire.
- 4: Connect R To R, G To G, Etc. See Outdoor Instruction For Details.
- 5: To Change Speed Tap, Move Green Wire Desired Terminal.
- 6: See Airflow Tables For Tap Usage.
- 7: Factory Wires May Be Present, DO NOT USE.
- 8: Taps 2 & 4 Have a 90s Delay Off, Taps 1, 3 & 5 are 30s.


COMPONENT ARRANGEMENT

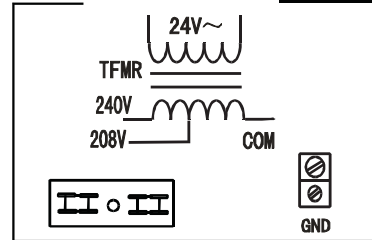

SPEED TAP SELECTION

- | | |
|---|-------------|
| 1 | LOW |
| 2 | MEDIUM LOW |
| 3 | MEDIUM |
| 4 | MEDIUM HIGH |
| 5 | HIGH |

SEE NOTE #5, #6 & #8.

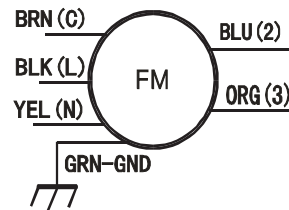


TFMR TRANSFORMER
FM FAN MOTOR
GND GROUND
RES RESISTOR
- - - FIELD POWER WIRING

Fig. 25 - FFMANP(019, 031)

A14323


SCHEMATIC DIAGRAM
SEE RATING PLATE FOR VOLTS&HERTZ
FIELD POWER WIRING

CAUTION:
NOT SUITABLE FOR USE ON SYSTEMS EXCEEDING 150V TO GROUND
ATTENTION:
NE CONVIENT PAS AUX INSTALLATIONS DE PLUS DE 150V ALA TERRE

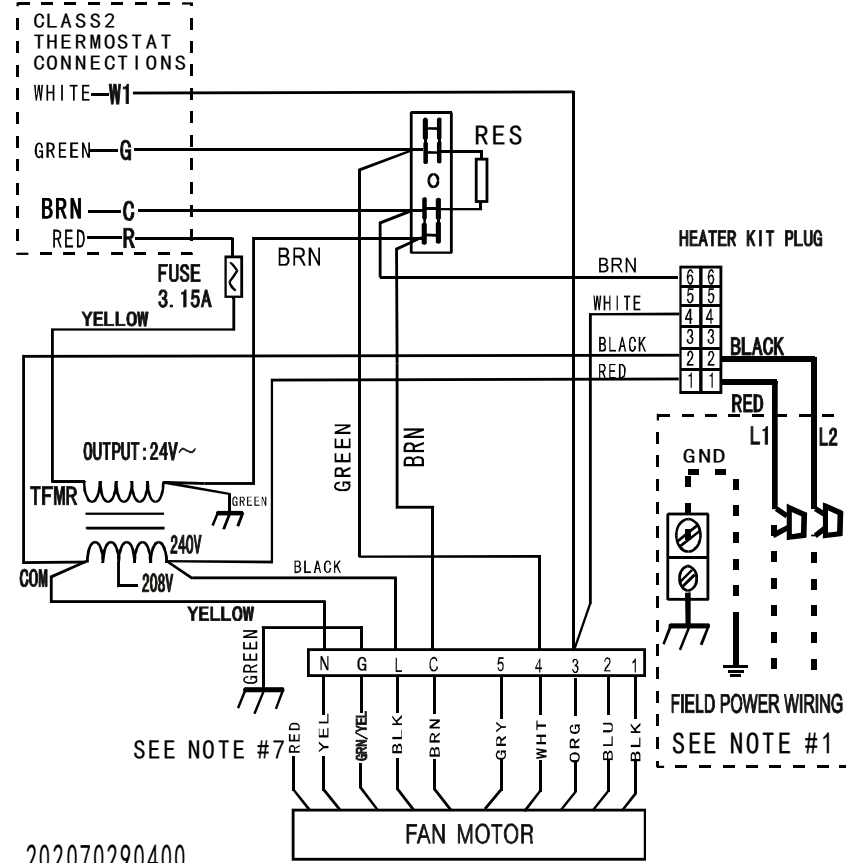

202070290400

COMPONENT ARRANGEMENT

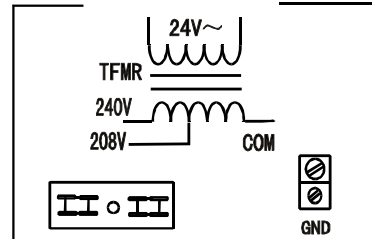


SPEED TAP SELECTION

- 1 LOW
- 2 MEDIUM LOW
- 3 MEDIUM
- 4 MEDIUM HIGH
- 5 HIGH

SEE NOTE #5, #6 & #8.

NOTES:

- 1: Use Copper Wire (75°C Min) Only Between Disconnect Switch And Unit .
- 2: To Be Wired In Accordance With NEC And Local Codes.
- 3: If Any Of The Original Wire ,As Supplied, Must Be Replaced. Use The Same Or Equivalent Type Wire.
- 4: Connect R To R, G To G, Etc. See Outdoor Instruction For Details.
- 5: To Change Speed Tap, Move Green Wire Desired Terminal.
- 6: See Airflow Tables For Tap Usage.
- 7: Factory Wires May Be Present, DO NOT USE.
- 8: Taps 2 & 4 Have a 90s Delay Off, Taps 1, 3 & 5 are 30s.

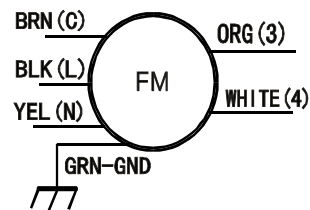


TFMR TRANSFORMER
FM FAN MOTOR
GND GROUND
RES RESISTOR
- - - FIELD POWER WIRING

Fig. 26 - FFMANP(025, 037)


A14324

SCHEMATIC DIAGRAM
SEE RATING PLATE FOR VOLTS&HERTZ
FIELD POWER WIRING

CAUTION:
 NOT SUITABLE FOR USE ON SYSTEMS EXCEEDING 150V TO GROUND
ATTENTION:
 NE CONVIENT PAS AUX INSTALLATIONS DE PLUS DE 150V ALA TERRE

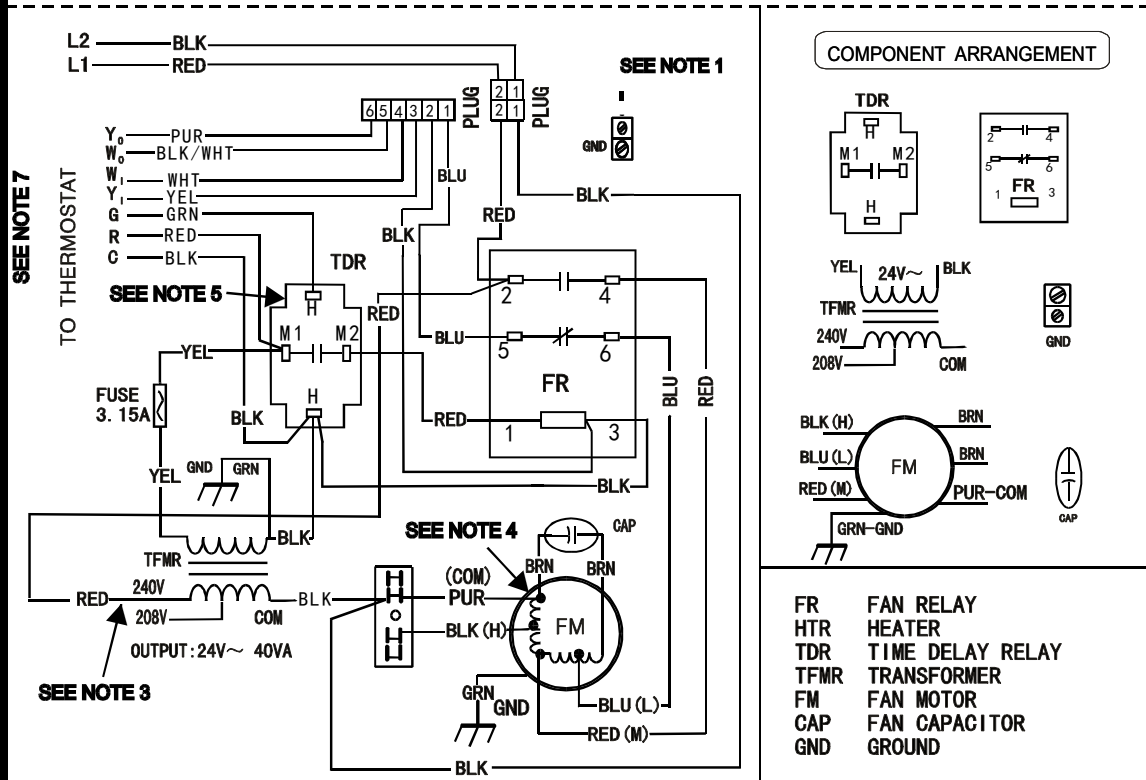

COMPONENT ARRANGEMENT

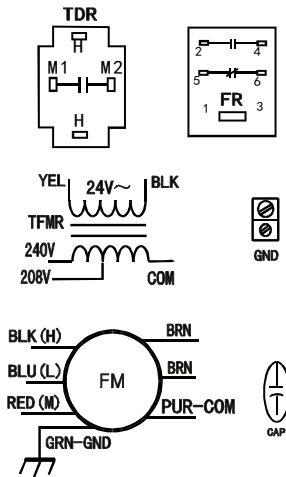

- | | |
|------|------------------|
| FR | FAN RELAY |
| HTR | HEATER |
| TDR | TIME DELAY RELAY |
| TFMR | TRANSFORMER |
| FM | FAN MOTOR |
| CAP | FAN CAPACITOR |
| GND | GROUND |

NOTES:

- 1: Use copper wire (75°C min) only between disconnect switch and unit, To be wired in accordance with N.E.C. and local codes. Fan coils equipped with electric heater connect power supply to terminal block. Cooling controls wiring not used with electric heaters.
- 2: If any of the original wire as supplied must be replaced, use the same or equivalent type wire.
- 3: Remove the red lead from "240V" terminal and then connect the red lead to "208V" terminal on the transformer for 208 volts.
- 4: Factory default fan speed is Medium, FM red wire connected to FR #4; For HI speed connect FM black wire to FR #4; For LOW speed connect FM blue wire to FR #4, and FM red wire connected to FR #6. Always connect the unused FM wire to the dummy terminal block.
- 5: TDR has a 1-20s on delay when "G" is energized and a 50-70s off delay when "G" is de-energized.
- 6: Connect R to R, G to G, etc. See outdoor or indoor instructions for details.

202070290388


Fig. 27 - FPM(A,B)N(U,C) with Time Delay Relay

A14325

SCHEMATIC DIAGRAM
SEE RATING PLATE FOR VOLTS&HERTZ
FIELD POWER WIRING

CAUTION:
NOT SUITABLE FOR USE ON SYSTEMS EXCEEDING 150V TO GROUND
ATTENTION:
NE CONVIENT PAS AUX INSTALLATIONS DE PLUS DE 150V ALA TERRE

ELECTRIC HEAT WIRING CONNECTION (WHEN APPLIED)

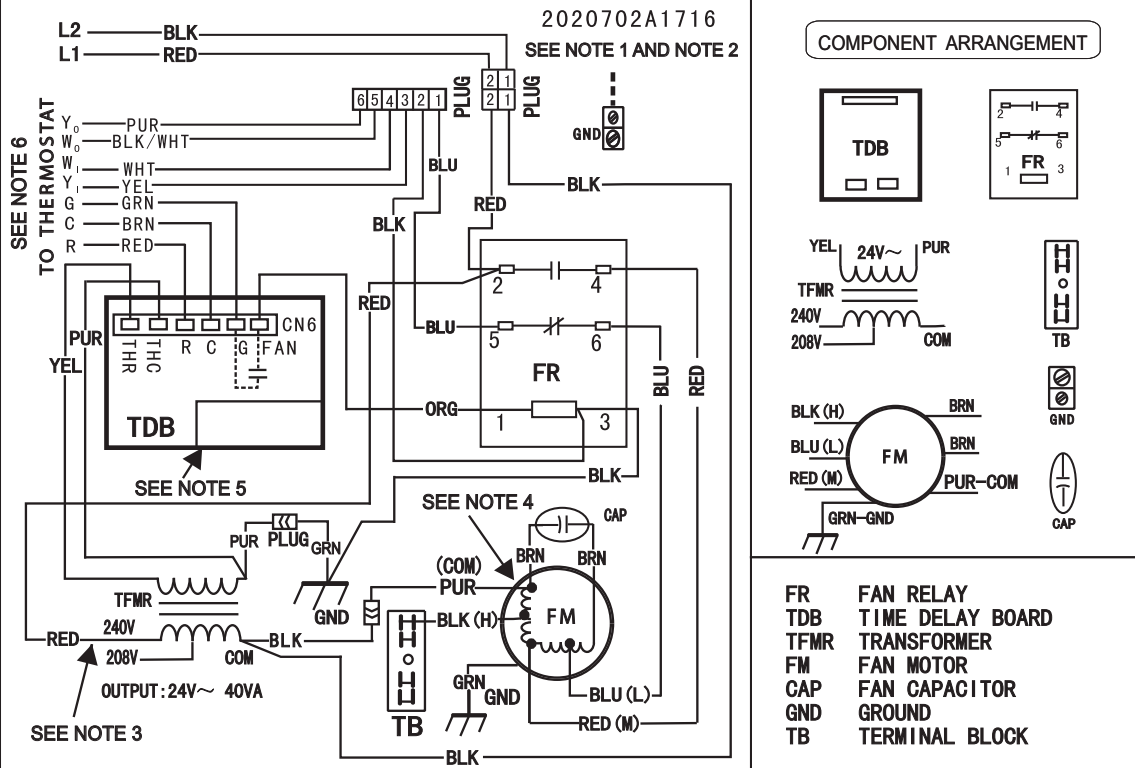

- NOTES:**
- 1: Use copper wire(75°C min) only between disconnect switch and unit, To be wired in accordance with N.E.C. and local codes. Fan coils equipped with electric heater connect power supply to terminal block. Cooling controls wiring not used with electric heaters.
 - 2: If any of the original wire as supplied must be replaced, use the same or equivalent type wire.
 - 3: Remove the red lead from "240V" terminal and then connect the red lead to "208V" terminal on the transformer for 208 volts.
 - 4: Factory default fan speed is Medium, FM red wire connected to FR #4; For HI speed connect FM black wire to FR #4; For LOW speed connect FM blue wire to FR #4, and FM red wire connected to FR #6. Always connect the unused FM wire to the dummy terminal block.
 - 5: TDB has a 90-100s off delay when "G" is de-energized.
 - 6: Connect R to R, G to G, etc. See outdoor or indoor instructions for details.
 - 7: N.E.C. Class 2, 24volts.

Fig. 28 - FPM(A,B)N(C,U) with Time Delay Board

A170018

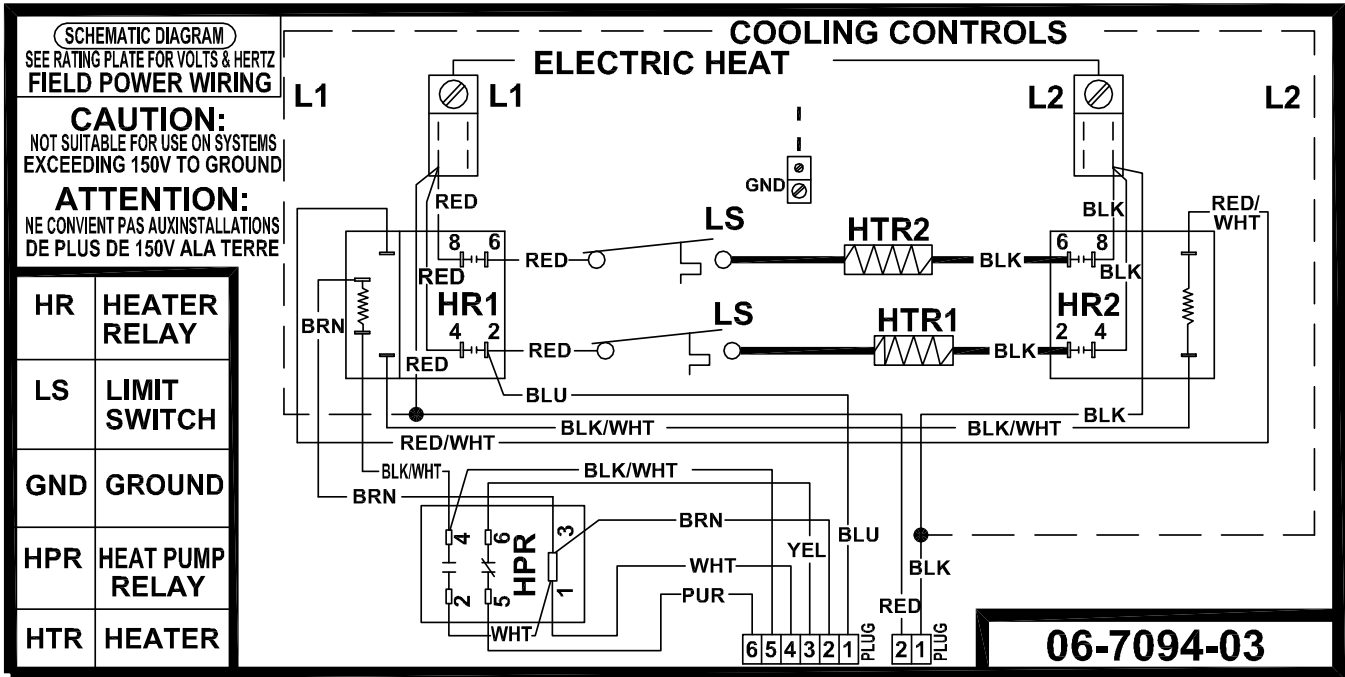


Fig. 29 - EHK3 With Heater Relays

A150101

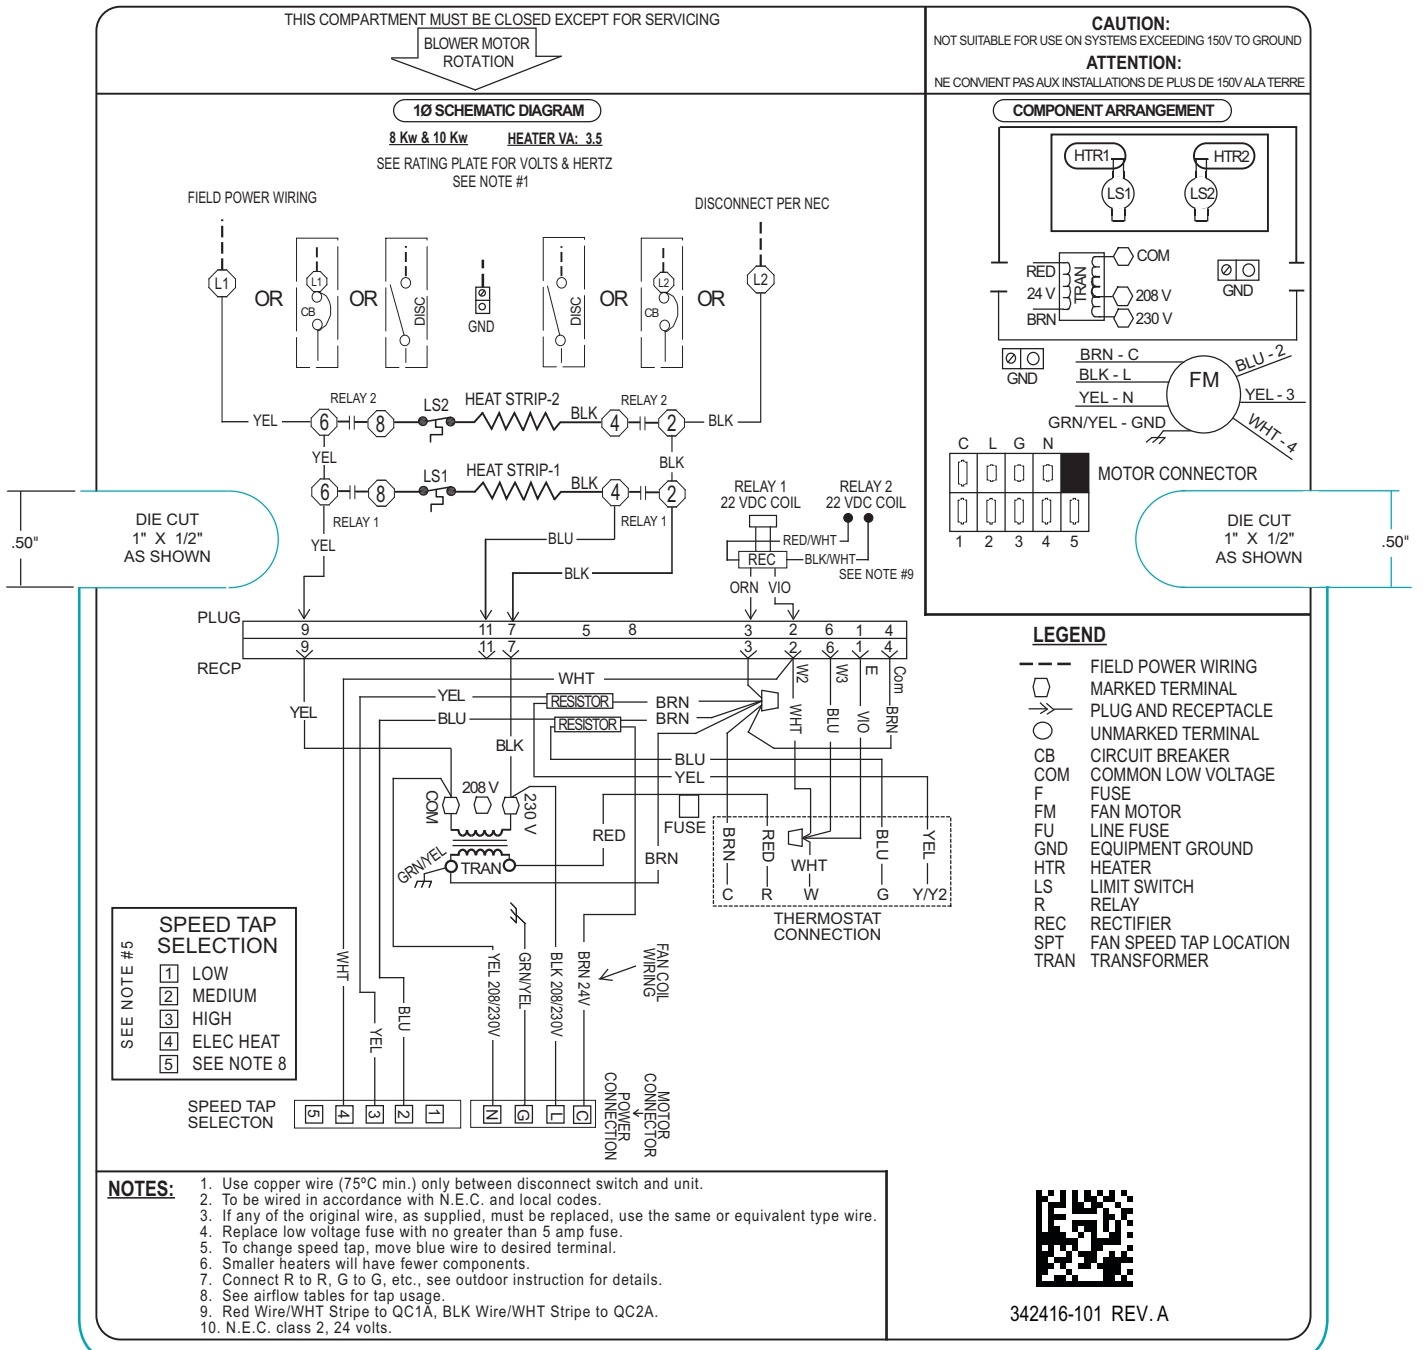


Fig. 30 - 342416-101

A160102

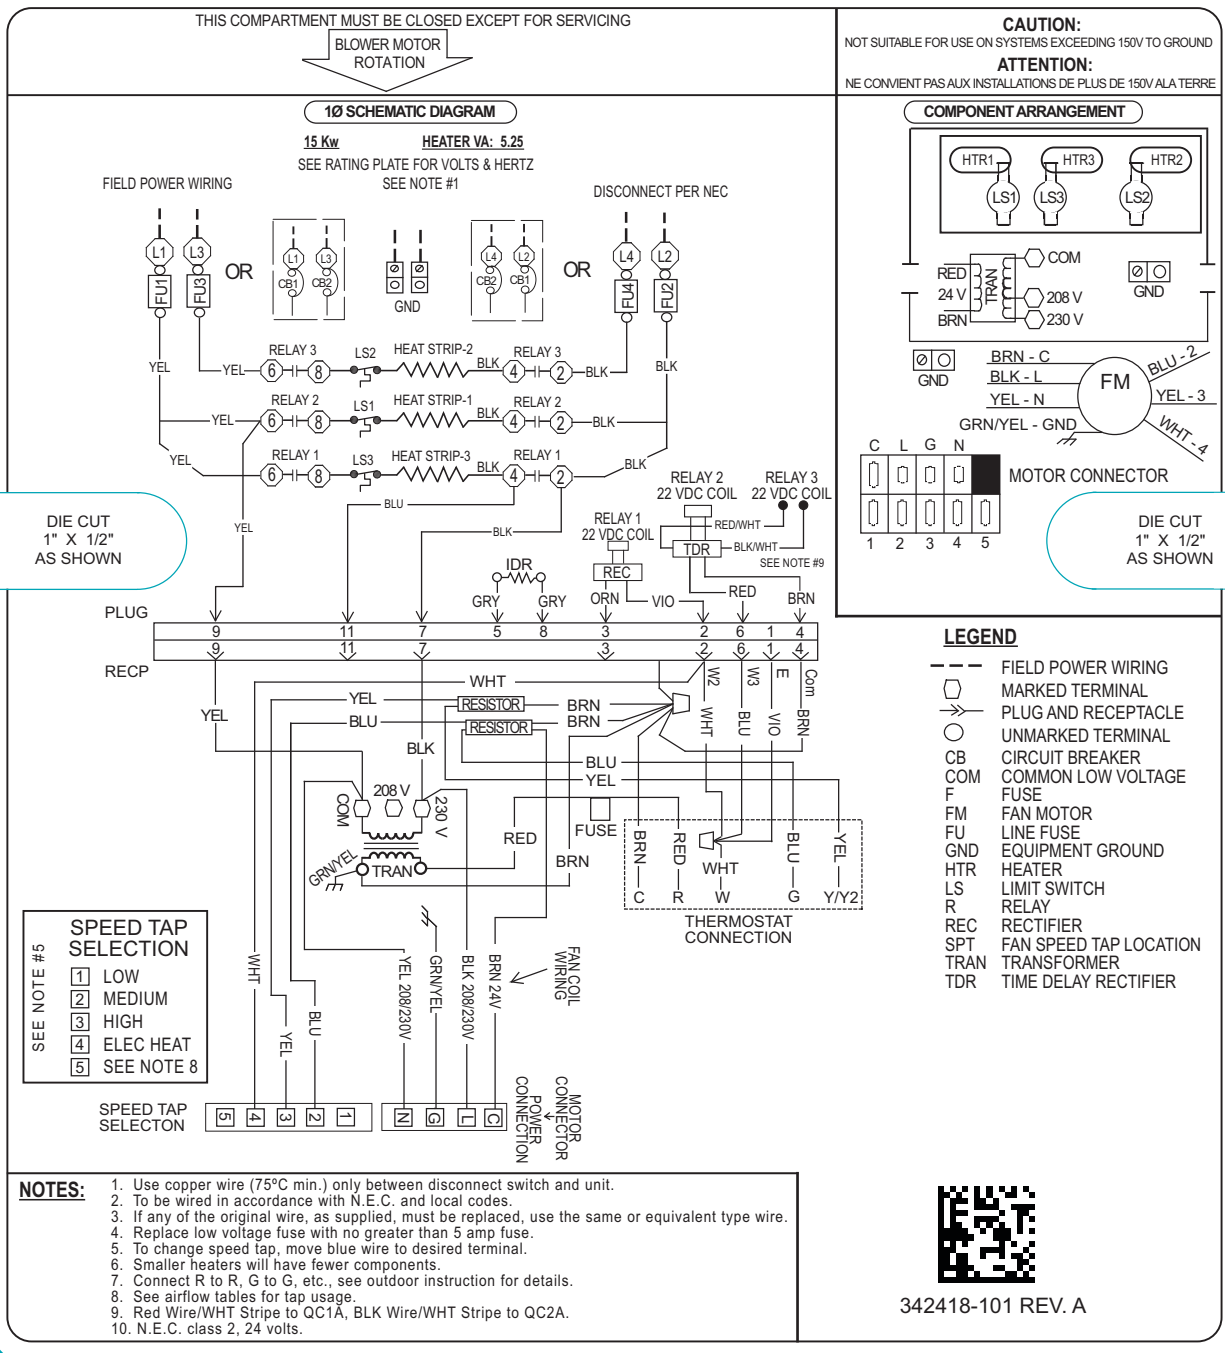


Fig. 31 - 342418-101

A160104

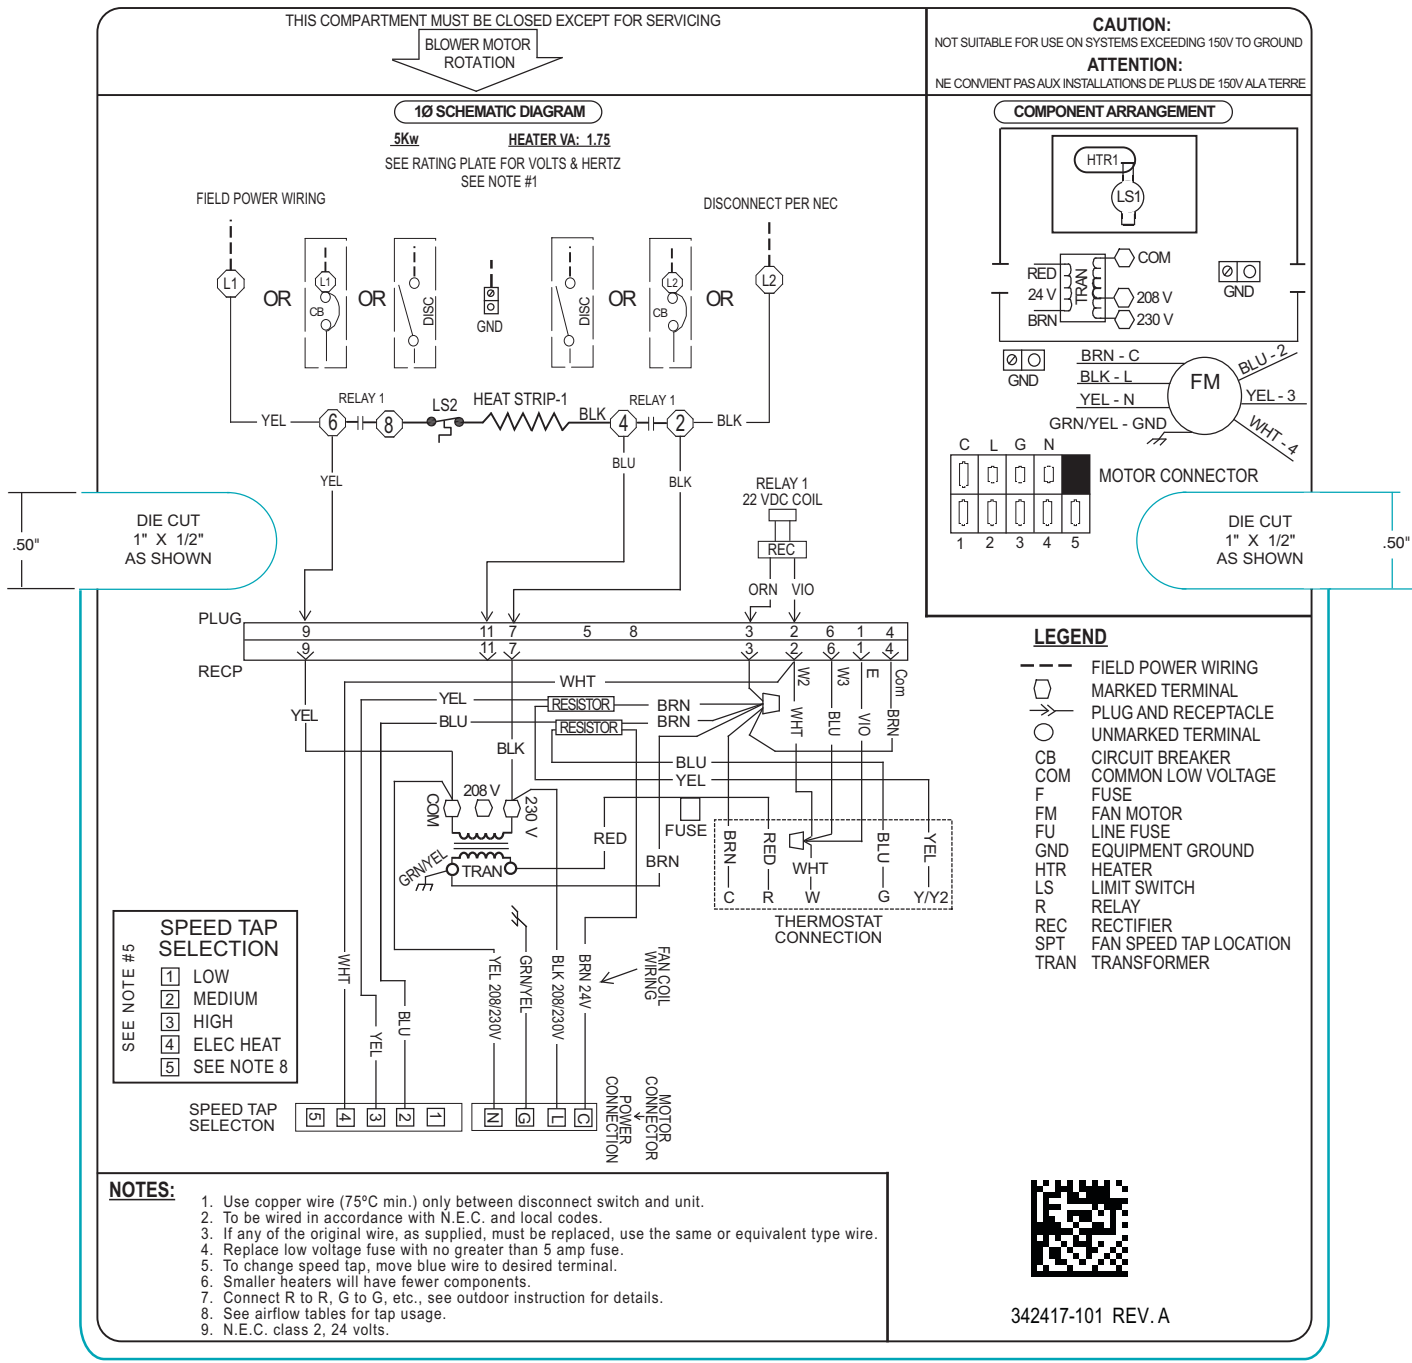


Fig. 32 - 342417-101

A160103


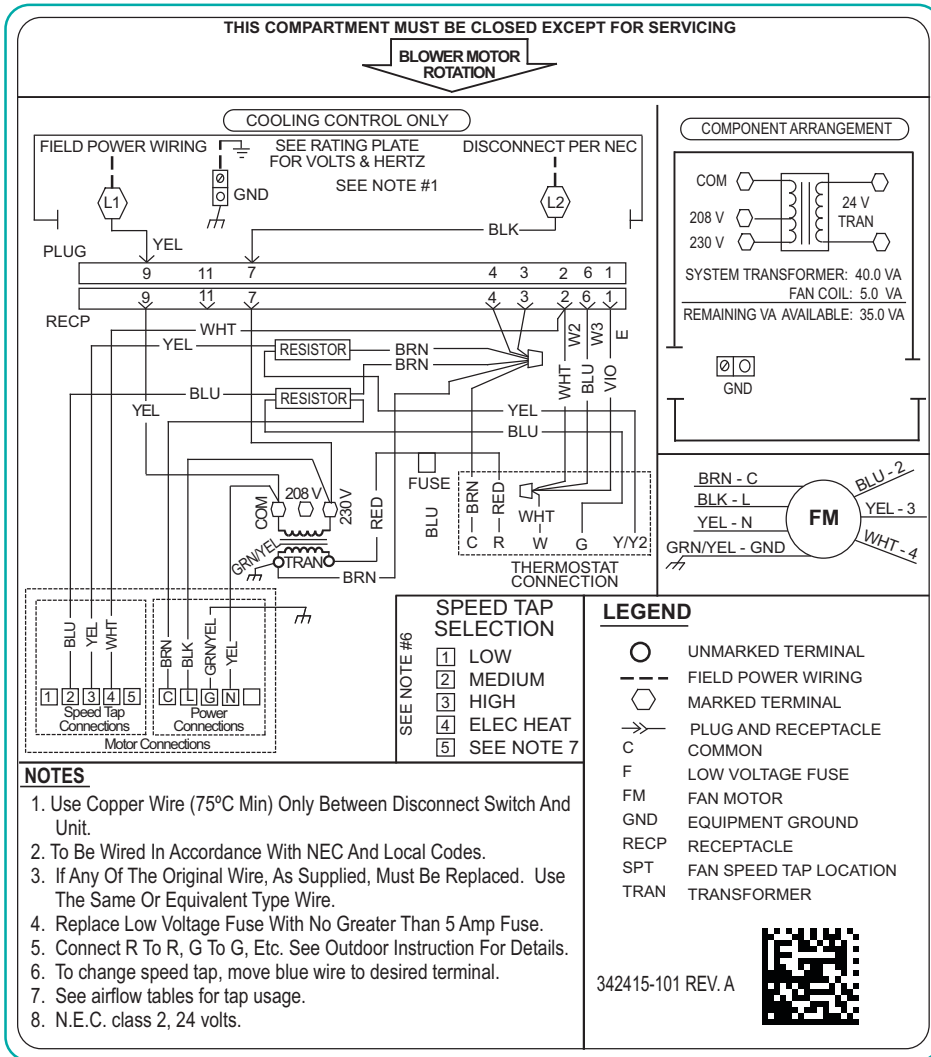


Fig. 33 - FZ4A

A160101

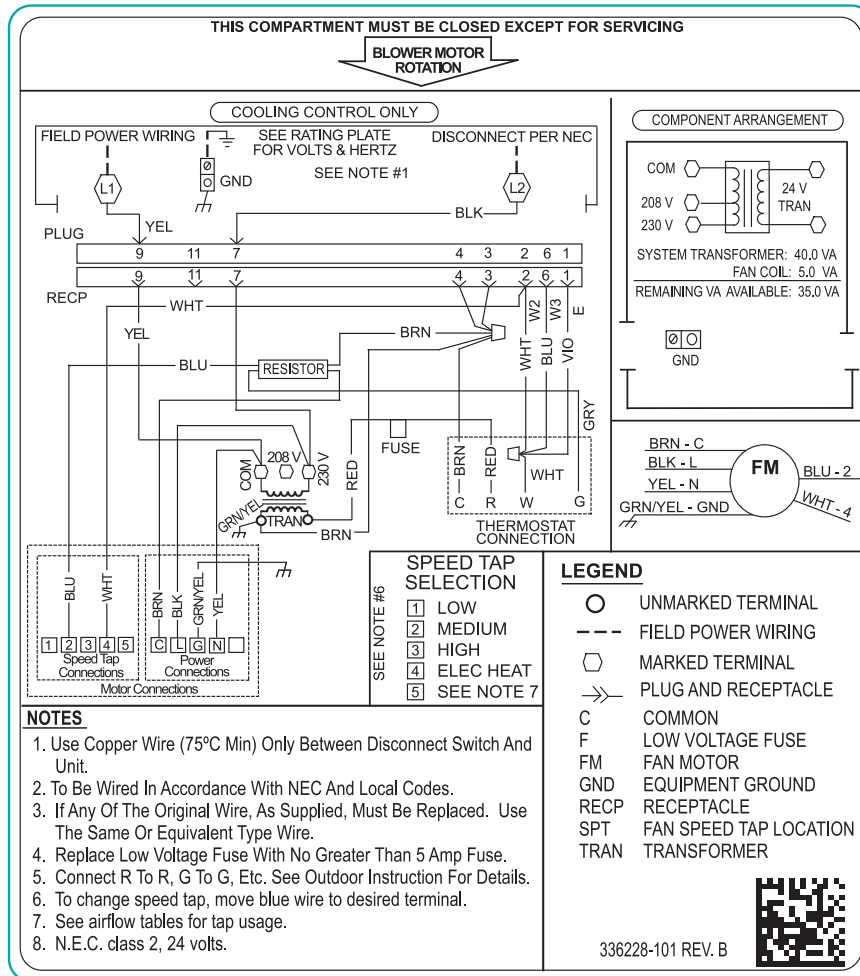


NOTES:

- 1) LABEL SIZE -
 - A) 4.875 in. WIDTH X 5.50 in. LENGTH (DIE CUT WITH RADIUS (4) 1/8"), +/- .125 in. TOLERANCE.
 - B) WHEN LABEL IS PER DIMENSIONS SHOWN ALL TEXT AND GRAPHIC ARE ACTUAL SIZE.
- 2) COLORS -
 - A) TEXT AND GRAPHICS TO BE BLACK ON WHITE BACKGROUND
3. MATERIAL -
 - A) STANDARD REGISTER SR-061501 (UA-1976) OR STANDARD REGISTER SR-011448 (SEE DWG. NO. 322278-101 FOR EQUIV. MAT'L).
 - B) PRINTING AND BACKGROUND COLOR MUST BE UV CURED INK ON BASE MATERIAL OR NON-UV CURED INK WITH STANDARD REGISTER SR-131347 (UA2955) OVERLAMINATE OR NON-UV CURED INK ON UV CURED VARNISH COATED BASE MATERIAL.
4. RELIABILITY - MUST MEET ANSI Z21.47/CSA 2.3, CLASS IIIA AND CC15DB001 REQUIREMENTS.
5. BARCODE - SEE CARRIER BARCODE REQUIREMENTS (CARRIER AND ICP), ENGINEERING REQUIREMENT N-025.

Fig. 34 - FB4(C/Q)SL

A170278

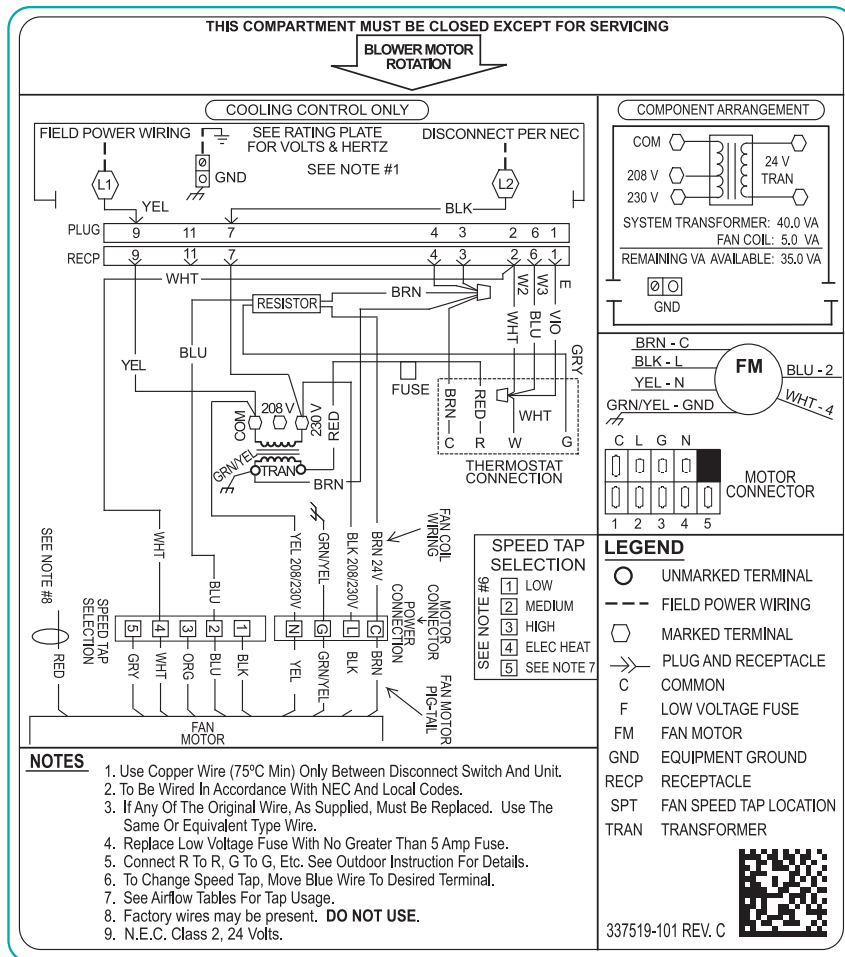

NOTES:

- 1) LABEL SIZE -
 - A) 4.875 in. WIDTH X 5.5 in. LENGTH (DIE CUT WITH RADIUS (4) 1/8"), +/- .125 in. TOLERANCE.
 - B) WHEN LABEL IS PER DIMENSIONS SHOWN ALL TEXT AND GRAPHIC ARE ACTUAL SIZE.
- 2) COLORS -
 - A) TEXT AND GRAPHICS TO BE BLACK ON WHITE BACKGROUND.
3. MATERIAL -
 - A) STANDARD REGISTER SR-061501 (UA-1976) OR STANDARD REGISTER SR-011448 (SEE DWG. NO. 322278-101 FOR EQUIV. MAT'L).
 - B) PRINTING AND BACKGROUND COLOR MUST BE UV CURED INK ON BASE MATERIAL OR NON-UV CURED INK WITH STANDARD REGISTER SR-131347 (UA2955) OVERLAMINATE OR NON-UV CURED INK ON UV CURED VARNISH COATED BASE MATERIAL.
4. RELIABILITY - MUST MEET ANSI Z21.47/CSA 2.3, CLASS IIIA REQUIREMENTS.
5. BAR CODE - SEE CARRIER BAR CODE REQUIREMENTS (CARRIER AND ICP), ENGINEERING REQUIREMENT N-025.

Fig. 35 - FB4(C/Q)SL

A170279

